

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [CHEFJOY](#) /

> [CHEFJOY Corner Wooden Play Kitchen Set Instruction Manual - Model GR-10080PI-TM](#)

CHEFJOY GR-10080PI-TM

CHEFJOY Corner Wooden Play Kitchen Set Instruction Manual

Model: GR-10080PI-TM

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your CHEFJOY Corner Wooden Play Kitchen Set. Designed for children aged 3 and up, this playset offers a realistic and engaging cooking experience with interactive features and ample storage.

Your browser does not support the video tag.

Video Description: An overview of the CHEFJOY Corner Wooden Play Kitchen Set, showcasing its various features and interactive elements in a home setting.

SAFETY INFORMATION

Your child's safety is paramount. This play kitchen set is designed with safety in mind and is certified to meet relevant safety standards.

- **Certifications:** The playset is ASTM and CPSIA certified, ensuring it meets strict safety requirements.
- **Materials:** Constructed from high-quality, non-toxic materials.
- **Design:** Features smooth edges to prevent injuries during play.
- **Supervision:** Adult supervision is recommended during playtime, especially for younger children.
- **Age Recommendation:** Suitable for children aged 3 years and up.

WHAT'S IN THE BOX

The CHEFJOY Corner Wooden Play Kitchen Set includes the main kitchen unit, a chef suit set, and various accessories to enhance playtime.

- 1 x Corner Kids Kitchen Playset (main unit)
- 1 x Chef Suit Set (includes chef hat and apron)
- 9 essential kitchen accessories, including:
 - Stove
 - Oven

- Fridge
- Microwave
- Sink
- Ice Maker
- Pots and Pans
- Utensils (spatula, knife, spoon)
- Plates, Seasoning Jars, Cup & Ice Cubes



Image Description: A flat lay image displaying the various cookware and accessories included with the play kitchen set, such as pots, pans, utensils, plates, and seasoning jars.

SETUP AND ASSEMBLY

Follow these step-by-step instructions and refer to the provided videos for a smooth assembly process. Ensure all parts are present before beginning.

Assembly Video Guide

Your browser does not support the video tag.

Video Description: A detailed assembly video for the Costzon Kids Kitchen Playset, demonstrating each step of construction.

Your browser does not support the video tag.

Video Description: An assembly video specifically for the Large Corner Play Kitchen, showing the step-by-step installation process.

Your browser does not support the video tag.

Video Description: An installation video for the Corner Toy Kitchen, guiding users through the assembly of the various kitchen components.

Key Assembly Steps (Visual Reference)



Image Description: The complete CHEFJOY Corner Wooden Play Kitchen Set, showcasing its L-shaped design and various play areas including a refrigerator, stove, oven, microwave, sink, and washing machine, along with included accessories.

Dimension



Suitable Ages:
3-10 Years Old



ASTM
Certification



CPSC
CPSIA
Certification

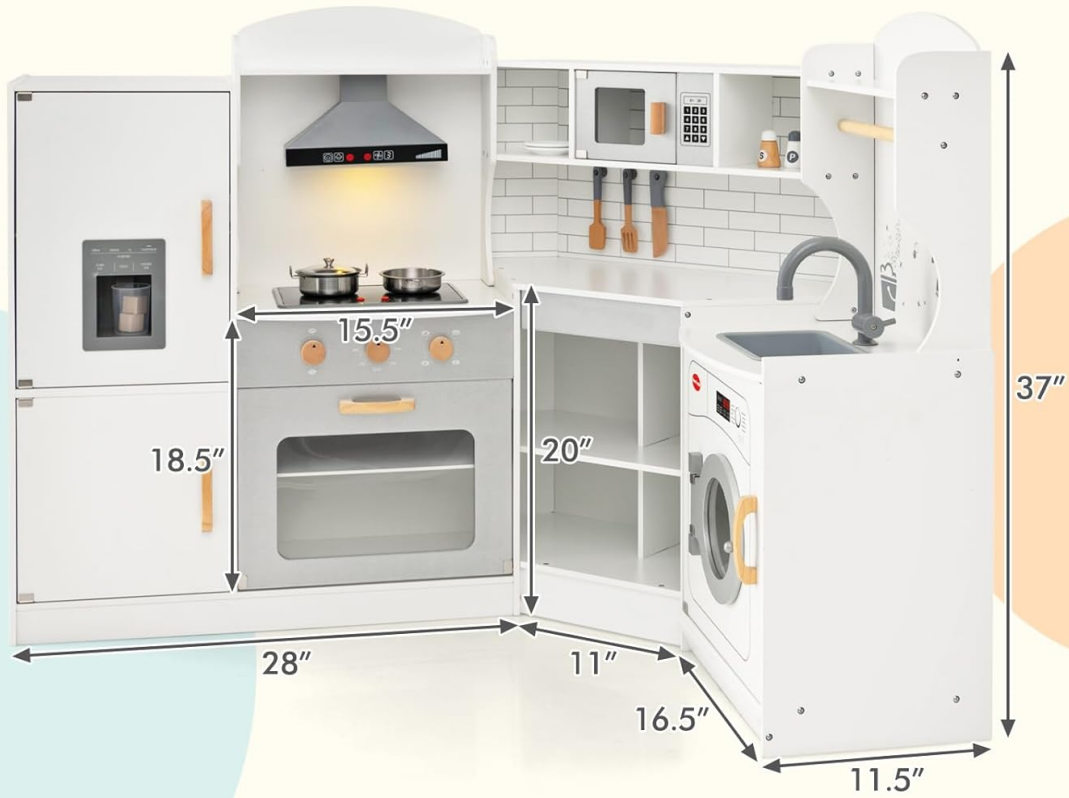


Image Description: A diagram illustrating the dimensions of the assembled play kitchen set, including height, width, and depth measurements for each section. It also highlights suitable ages (3-10 years) and safety certifications (ASTM, CPSC, CPSIA).

OPERATING INSTRUCTIONS

Explore the interactive features of your play kitchen to create a realistic and engaging experience.

Realistic Lights and Sounds

- **Stove Burners:** Place pots or pans on the stove burners to activate realistic LED lights and sizzling sound effects, simulating actual cooking.
- **Range Hood:** The range hood features lights and sounds, adding to the immersive cooking environment.



Image Description: A close-up of the play kitchen's stove area, showing LED lights and sound effects labeled "Pop~" and "Sizzle~" for an immersive cooking experience.

Interactive Appliances

- **Ice Maker:** The refrigerator includes a functional ice maker that dispenses play ice cubes, enhancing imaginative play.
- **Washing Machine:** A washing machine with an openable door allows for pretend laundry activities.
- **Microwave:** The microwave features an openable door and realistic details for heating up imaginary meals.
- **Sink:** A removable sink basin and faucet are included for washing dishes and preparing food.

Multifunctional Play Kitchen Set



Image Description: An infographic highlighting the multifunctional features of the play kitchen set, including the range hood, stovetops, microwave oven, washing machine, oven, and faucet with sink.

Storage and Organization

- **4 Play Zones:** The corner design incorporates distinct cooking, washing, fridge, and storage areas to help children organize their play.
- **Ample Storage:** Features top shelves, 3 hanging hooks for utensils, a towel rack, 4 open compartments, and storage cabinets to keep accessories tidy.

Many Storage Options



Image Description: An image showcasing the various storage options within the play kitchen, including top shelves, hanging hooks, a towel rack, open compartments, and storage cabinets.

MAINTENANCE

To ensure the longevity and cleanliness of your CHEFJOY Play Kitchen Set, follow these simple maintenance guidelines:

- **Cleaning:** Wipe down all surfaces regularly with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Spills:** Promptly clean up any spills to prevent staining or damage to the wooden components.
- **Storage:** Store the playset in a dry environment away from direct sunlight or extreme temperatures to prevent warping or fading.
- **Inspection:** Periodically check all screws and fittings to ensure they are tight. Tighten as necessary to maintain structural integrity.

TROUBLESHOOTING

If you encounter any issues with your play kitchen set, please refer to the following common solutions:

- **Lights/Sounds Not Working:**

- Check if batteries are correctly installed and have sufficient power. Replace batteries if needed.
- Ensure all connections are secure if applicable.
- **Loose Components:**
 - Re-tighten any loose screws or fasteners using appropriate tools. Avoid over-tightening.
- **Doors Not Closing Properly:**
 - Check hinges for proper alignment and ensure no obstructions are preventing the door from closing.
 - Verify magnetic catches (if present) are securely attached.



Image Description: A close-up image highlighting thoughtful design details such as wooden handles, raised baffles, magnetic catches for doors, and a stable base, contributing to the durability and functionality of the play kitchen.

SPECIFICATIONS

Feature	Detail
Product Dimensions	36 x 48 x 37 inches
Item Weight	66 pounds

Model Number	GR-10080PI-TM
Manufacturer Recommended Age	3 years and up
Brand	CHEFJOY

WARRANTY AND SUPPORT

For any questions, concerns, or warranty claims regarding your CHEFJOY Corner Wooden Play Kitchen Set, please contact our customer support team. Refer to your purchase documentation for specific warranty details and contact information.

- **Returns:** 30-day easy returns policy.
- **Customer Support:** Dedicated customer support is available to assist you.

© 2026 CHEFJOY. All rights reserved.