

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Chipolino](#) /

› [Chipolino Trixy 3-in-1 Doll Accessory Set Instruction Manual](#)

### Chipolino KZKTR02402HE

# Chipolino Trixy 3-in-1 Doll Accessory Set Instruction Manual

Model: KZKTR02402HE

## INTRODUCTION

---

Thank you for choosing the Chipolino Trixy 3-in-1 Doll Accessory Set. This set is designed to provide an engaging play experience for children aged 3 years and up, fostering social skills and imaginative role-play. It includes a doll buggy, a high chair, a playpen, and a matching bag, all designed for easy assembly, use, and compact storage.



## Image de présentation - le motif n'est pas représentatif

*Image: A young girl interacting with the Chipolino Trixy 3-in-1 Doll Accessory Set, showcasing the doll buggy, playpen, and high chair in use.*

### **SAFETY INFORMATION**

---

#### **WARNING:**

- Not suitable for children under 3 years of age.
- To be used under the direct supervision of an adult.
- The packaging of this product contains small parts that may pose a choking hazard if swallowed. Please dispose of packaging materials responsibly and keep them away from children.

Always ensure all components are correctly assembled and secured before allowing a child to play with the set. Regularly inspect the product for any damage or loose parts that could compromise safety.

### **PACKAGE CONTENTS**

---

The Chipolino Trixy 3-in-1 Doll Accessory Set includes the following items:

- 1 x Doll Buggy
- 1 x Doll High Chair
- 1 x Doll Playpen

- 1 x Matching Doll Bag



*Image: The Chipolino Trixy product box, indicating the contents of the set.*

## SETUP AND ASSEMBLY

---

All components of the Chipolino Trixy set are designed for quick and easy setup. No tools are required for assembly.

### Doll Playpen Assembly

1. Remove the folded playpen from its packaging.
2. Gently pull the sides outwards until the frame locks into place.
3. Ensure all four legs are firmly on the ground and the frame is stable.



*Image: The assembled doll playpen.*

## **Doll High Chair Assembly**

1. Unfold the high chair legs until they click into their open position.
2. Ensure the seat and tray are securely attached and the chair stands stably on all four legs.



*Image: The doll high chair in both folded and assembled states.*

## **Doll Buggy Assembly**

1. Unfold the buggy frame by pulling the handles upwards and the wheels outwards until it locks into the open position.
2. Ensure all wheels are securely attached and the buggy is stable.
3. Attach the matching doll bag to the buggy handles if desired.



*Image: The doll buggy in both folded and assembled states.*

## OPERATING INSTRUCTIONS

---

The Chipolino Trixy set components are designed for ease of use and compact storage.

### Folding for Storage

- **Doll Playpen:** To fold, locate the release mechanisms on the frame (usually buttons or levers) and press them while gently pushing the sides inwards.
- **Doll High Chair:** To fold, locate the folding mechanism (often a button or lever near the hinges) and press it while pushing the front and back legs together.
- **Doll Buggy:** To fold, locate the folding mechanism (often a latch or button on the frame) and release it, then push the handles down and the wheels together until the buggy collapses.

Always ensure the items are fully folded and secured before transport or storage to prevent accidental unfolding.



*Image: The matching doll bag, which can be used to store small doll accessories or carried with the buggy.*

## MAINTENANCE

---

To ensure the longevity and cleanliness of your Chipolino Trixy Doll Accessory Set, follow these maintenance guidelines:

- **Cleaning:** Wipe all plastic and fabric surfaces with a damp cloth and mild soap. Do not use abrasive cleaners or harsh chemicals. Allow to air dry completely before storage.
- **Storage:** Store the set in a clean, dry place away from direct sunlight and extreme temperatures when not in use. The foldable design allows for compact storage.
- **Inspection:** Periodically check all parts for wear and tear, loose screws, or damaged fabric. Discontinue use if any significant damage is found.

## TROUBLESHOOTING

---

If you encounter any issues with your Chipolino Trixy Doll Accessory Set, please refer to the following common solutions:

- **Item does not fold/unfold easily:** Ensure all locking mechanisms are properly disengaged/engaged. Do not force the parts; check for any obstructions.
- **Instability:** Verify that all legs and frames are fully extended and locked into place. Ensure the product is on a flat, stable surface.
- **Missing parts:** Check the packaging thoroughly. If parts are genuinely missing, contact customer support.

## SPECIFICATIONS

Feature	Detail
Model Number	KZKTR02402HE
Product Dimensions (Box)	20.08 x 10.63 x 21.65 inches (L x W x H)
Item Weight (Total Set)	5.95 pounds (approx. 2.7 kg)
Manufacturer Recommended Age	3 years and up
Material	High-quality plastic and fabric
Buggy Size (Assembled)	L 51 x W 27 x H 55 cm
Playpen Size (Assembled)	L 56 x W 32 x H 33 cm
High Chair Size (Assembled)	L 33 x W 29 x H 57 cm



*Image: Detailed dimensions of the doll high chair, buggy, and playpen.*

## WARRANTY AND SUPPORT

For warranty information or customer support regarding your Chipolino Trixy 3-in-1 Doll Accessory Set, please refer to the contact details provided on the product packaging or visit the official Chipolino website. Keep your purchase receipt as proof of purchase.

© 2024 Chipolino. All rights reserved.