

## Cangaroo 111391

# Cangaroo i-Swift i-Size Booster Seat Instruction Manual

Model: 111391

## INTRODUCTION

This manual provides essential instructions for the safe installation, operation, and maintenance of your Cangaroo i-Swift i-Size Booster Seat. Designed for children between 125-150 cm in height (approximately 4 to 12 years old) and up to 36 kg, this booster seat ensures comfort and safety during travel. Please read this manual thoroughly before first use and keep it for future reference.

## SAFETY INFORMATION

- Always secure the child with the vehicle's 3-point seat belt.
- Ensure the booster seat is correctly installed using the ISOFIX system, even when not occupied by a child, to prevent it from becoming a projectile in an accident.
- Never use the booster seat if any part is damaged or missing.
- Do not modify the booster seat in any way.
- Always follow the vehicle manufacturer's instructions for child restraint installation.
- The booster seat is designed for forward-facing use only.
- Regularly check that the seat belt is not twisted and is correctly positioned over the child's shoulder and lap.

## SETUP AND INSTALLATION

The Cangaroo i-Swift i-Size Booster Seat is designed for quick and easy installation using the ISOFIX system.

1. **Prepare the Booster Seat:** Ensure the ISOFIX connectors are retracted.
2. **Locate ISOFIX Anchors:** Identify the ISOFIX anchor points in your vehicle's rear seat. These are usually located between the seat back and cushion.
3. **Attach ISOFIX Connectors:** Extend the ISOFIX connectors from the booster seat and push them firmly onto the vehicle's ISOFIX anchor points until you hear an audible "click" and the indicators turn green (if applicable).
4. **Secure the Booster Seat:** Push the booster seat firmly against the vehicle's seat back to ensure a tight fit.

5. **Install Cup Holder:** Attach the cup holder to the designated slot on the side of the booster seat. Ensure it is securely fastened.



Image: Side view of the Cangaroo i-Swift i-Size booster seat, showing the extended ISOFIX connectors ready for installation.



Image: Close-up view of the detachable cup holder, designed with an anti-spill system and soft silicone seal.

## OPERATING INSTRUCTIONS

---

Once the booster seat is securely installed, follow these steps to properly secure your child:

1. **Position the Child:** Place your child on the booster seat, ensuring their back is flat against the seat back.
2. **Route the Seat Belt:** Pull the vehicle's 3-point seat belt over the child. The lap belt portion should lie low across the child's hips, touching the thighs. The shoulder belt should cross the center of the child's shoulder and chest, not touching the neck or falling off the shoulder.
3. **Buckle the Seat Belt:** Insert the seat belt buckle tongue into the vehicle's buckle receiver until it clicks.
4. **Tighten the Seat Belt:** Pull the shoulder belt upwards to remove any slack, ensuring the belt is snug against the child's body without being too tight.
5. **Check Belt Position:** Verify that the seat belt is correctly positioned and not twisted. The booster seat's design helps guide the belt for optimal placement.



Image: Front angle view of the Cangaroo i-Swift i-Size booster seat, showcasing its ergonomic design and integrated cup holder.

## MAINTENANCE

- **Cleaning the Cover:** The booster seat cover is removable and washable. Refer to the care label for specific washing instructions, typically machine wash cold on a gentle cycle. Do not bleach or tumble dry.
- **Cleaning the Frame:** Wipe the plastic parts of the booster seat frame with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.
- **Cup Holder:** The cup holder can be detached and washed separately with soap and water.
- **Inspection:** Regularly inspect the booster seat for any signs of wear, damage, or loose parts. If any damage is found, discontinue use and contact customer support.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Booster seat feels loose after ISOFIX installation.	ISOFIX connectors not fully engaged or seat not pushed firmly against vehicle seat back.	Ensure ISOFIX connectors click into place (green indicators visible). Push the booster seat firmly towards the vehicle's seat back to remove any gaps.
Vehicle seat belt is twisted or not fitting correctly.	Incorrect routing of the seat belt.	Unbuckle the belt, straighten it, and re-route it according to the "Operating Instructions" section, ensuring it passes through the designated guides on the booster seat.
Cup holder is not secure.	Not properly attached to the slot.	Ensure the cup holder is pushed firmly into its designated slot until it locks into place.

## SPECIFICATIONS

**Model Number:** 111391

**Brand:** Cangaroo

**Type:** i-Size Booster Seat

**Child Height Range:** 125 - 150 cm

**Approximate Age Range:** 4 - 12 years

**Maximum Supported Weight:** 36 kg

**Installation Method:** ISOFIX (forward-facing)

**Restraint System:** Vehicle's 3-point seat belt

**Main Material:** Fabric (100% Polyester)

**Product Dimensions (L x W x H):** 40 x 43 x 22 cm

**Product Weight:** 2.8 kg

**Safety Standard:** ECE-R129/03

**Special Features:** Ergonomic design, breathable cover, removable and washable cover, comfortable armrests, integrated cup holder with anti-spill function.

## WARRANTY AND SUPPORT

Specific warranty information for the Cangaroo i-Swift i-Size Booster Seat may vary by region and retailer. Please retain your proof of purchase for any warranty claims.

For technical support, spare parts, or further assistance, please contact your local Cangaroo distributor or the retailer from whom you purchased the product. You may also visit the official Cangaroo website for contact details and additional resources.

**Manufacturer:** Cangaroo

**ASIN:** B0DMQFJV23