

[Manuals.plus](#) /

› [VG VOGCREST](#) /

› VG VOGCREST VG-107 Electric 2-in-1 Body and Facial Hair Trimmer User Manual

VG VOGCREST VG-107

VG VOGCREST VG-107 Electric 2-in-1 Body and Facial Hair Trimmer User Manual

Model: VG-107

1. INTRODUCTION

Thank you for choosing the VG VOGCREST VG-107 Electric 2-in-1 Body and Facial Hair Trimmer. This device is designed for efficient and comfortable hair removal across various body areas, including facial, body, and sensitive regions. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.



2 in1 Hair Trimmer



Image 1.1: VG VOGCREST VG-107 Trimmer and included accessories.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, injury, or damage, always follow these basic safety precautions:

- Keep the device away from water when charging.
- Do not disassemble the device. Contact customer support for repairs.
- Keep out of reach of children.
- Do not use if the device or charging cable is damaged.
- Use only the provided charging cable and adapter.

- Avoid using on irritated, sunburned, or broken skin.
- If you experience any discomfort or irritation, discontinue use immediately.

3. PRODUCT OVERVIEW

The VG-107 features a versatile 2-in-1 design, combining a body trimmer with a dedicated nose and ear hair trimmer head. It is equipped with advanced ceramic blades for a smooth, painless experience.

Key Features:

- **2-in-1 Functionality:** Easily switch between body and facial hair trimming.
- **Painless Precision:** Designed with round edge blade protection and hypoallergenic materials to prevent nicks and irritation.
- **IPX7 Waterproof:** Suitable for both wet and dry use, including in the shower.
- **USB Rechargeable:** Cordless operation with a long-lasting battery.
- **Ceramic Blades:** Stronger than steel, allergy-friendly, and designed to stay sharp.
- **Ergonomic Design:** Provides a comfortable grip and precise control.

No Pain, No Nick Skin-close Shave



Image 3.1: Detail of the body trimmer head, highlighting round edge blade protection and hypoallergenic material.

4. SETUP AND INITIAL CHARGE

4.1 Unboxing

Carefully remove all components from the packaging. Ensure you have the trimmer body, body trimmer head, nose/ear trimmer head, USB charging cable, charging dock, and cleaning brush.

4.2 Attaching/Detaching Trimmer Heads

- To attach a head: Align the desired trimmer head with the main body and gently push until it clicks into place.

- To detach a head: Hold the main body firmly and twist or pull the trimmer head off. Refer to the specific instructions for each head type if needed.

4.3 Initial Charging

Before first use, fully charge the device. This typically takes about 2 hours.

1. Connect the USB charging cable to the charging dock.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
3. Place the trimmer into the charging dock. The indicator light on the trimmer will illuminate to show it is charging.
4. Once fully charged, the indicator light may change color or turn off, depending on the model.



The infographic features a black trimmer device with a glowing blue light at its base, connected to a black USB-C cable. To the left, two dark grey boxes with blue text indicate '30 DAYS Runtime if Daily Use' and '120 Mins Runtime Per Charging'. To the right, a large blue '2' is labeled 'HOURS' and 'Fast Charging120'. At the bottom left, a black charging dock with the 'VOGCREST' logo is shown. The bottom right contains the text 'Type-C & Dock Fast Charging' and two icons: a USB-C symbol and a dock symbol.

30
DAYS
Runtime if Daily Use

120
Mins
Runtime Per Charging

2
HOURS
Fast Charging120

**Type-C & Dock
Fast Charging**

VOGCREST

A full charge provides approximately 120 minutes of runtime, which can last up to 30 days with typical daily use.

5. OPERATING INSTRUCTIONS

5.1 Using the Body Trimmer

The body trimmer is suitable for various areas including the chest, groin, legs, and armpits. It can be used for both wet and dry shaving.

1. Ensure the body trimmer head is securely attached.
2. Press the power button to turn on the device.
3. For best results, hold the trimmer against the skin and move it slowly against the direction of hair growth.
4. The trimmer features a protective guard for a close shave without tugging or pulling.
5. For different hair lengths, use the appropriate guide comb (if included).



Trim & Shave in the Shower

Enjoy Effortless Wet and Dry Grooming



Image 5.1: The VG-107 Trimmer is IPX7 waterproof, allowing for safe use in the shower.

5.2 Using the Nose and Ear Hair Trimmer

The nose and ear trimmer head is designed for safe and comfortable removal of unwanted hair in these sensitive areas.

1. Ensure the nose and ear trimmer head is securely attached.
2. Press the power button to turn on the device.
3. Gently insert the trimmer tip into your nostril or ear canal. Do not insert too deeply.
4. Move the trimmer in a circular motion to trim hairs. The dual-blade system rotates 360° for efficient trimming without pulling.

Electric Nose & Ear Hair Trimmer



Image 5.2: Detail of the nose and ear trimmer head with SkinSafe Design and Dual-Blade System.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your trimmer.

1. **Turn Off:** Always turn off the trimmer before cleaning.
2. **Remove Head:** Detach the trimmer head from the main body.
3. **Rinse Blades:** Since the device is IPX7 waterproof, you can rinse the trimmer head directly under running water to remove hair clippings. For thorough cleaning, use the included cleaning brush to remove any stubborn hairs.
4. **Dry:** Shake off excess water and allow the trimmer head to air dry completely before reattaching or

storing.

5. **Wipe Body:** Wipe the main body of the trimmer with a damp cloth. Do not submerge the main body in water unless specifically instructed for cleaning.
6. **Lubrication:** Periodically, a small drop of clipper oil (not included) can be applied to the blades to maintain smooth operation.

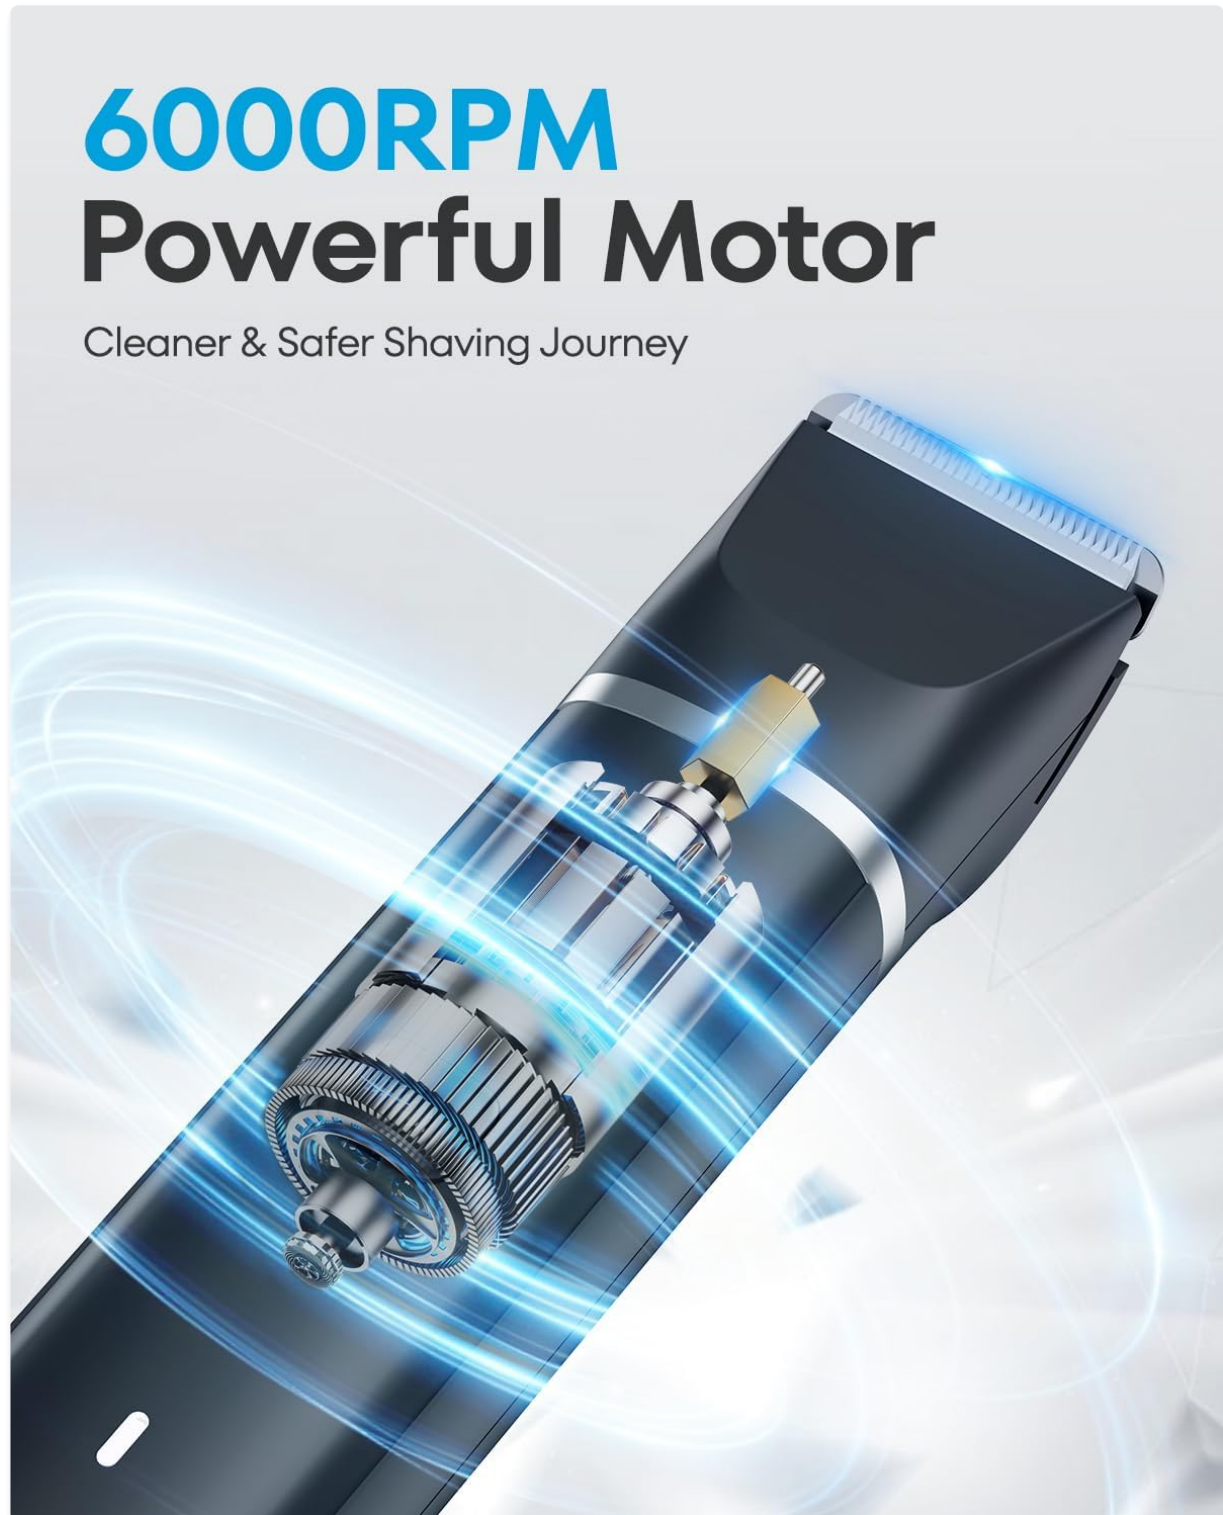


Image 6.1: The durable ceramic blades are designed to stay sharp and are allergy-friendly.

7. TROUBLESHOOTING

If you encounter issues with your VG VOGCREST VG-107 trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for at least 2 hours.
Poor trimming performance.	Blades are clogged with hair.	Clean the trimmer head and blades thoroughly.
Trimmer pulls hair.	Blades are dull or dirty.	Clean the blades. If problem persists, consider blade replacement if available.
Charging indicator light not working.	Cable or dock connection issue.	Ensure cable is securely connected to both the dock and power source. Check if the trimmer is correctly seated in the dock.

If the problem persists after trying these solutions, please contact VG VOGCREST customer support.

8. SPECIFICATIONS

- **Model Number:** VG-107
- **Brand:** VG VOGCREST
- **Power Source:** USB Rechargeable (Cordless Operation)
- **Battery:** 1 Nonstandard Battery (included)
- **Charging Time:** Approximately 2 hours
- **Runtime:** Up to 120 minutes per charge
- **Waterproof Rating:** IPX7
- **Special Features:** Cordless, High Efficiency, Lightweight, Waterproof
- **Package Dimensions:** 6.89 x 4.8 x 2.17 inches
- **Weight:** 0.63 ounces
- **Manufacturer:** VG VOGCREST

Stay sharp over time with Ceramic Blades



Stronger than steel



Allergy-friendly
Material



Image 8.1: The VG-107 is equipped with a powerful 6000RPM motor for efficient trimming.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official VG VOGCREST website. You may also contact customer service through your retailer for assistance.