

HAVA TDJR09

HAVA Countertop Dishwasher User Manual

Model: TDJR09

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your HAVA 2025 NEW Upgraded Countertop Dishwasher. Please read it thoroughly before first use and keep it for future reference.



Figure 1: HAVA Countertop Dishwasher

SAFETY INSTRUCTIONS

- Ensure the dishwasher is placed on a stable, level surface.
- Do not operate the dishwasher if the power cord is damaged.
- Keep children away from the appliance during operation, especially when the child lock is not engaged.
- Use only dishwasher-safe detergents and rinse aids.
- Do not open the door during a wash cycle to avoid hot water spray.
- Unplug the appliance before cleaning or maintenance.

WHAT'S IN THE Box

Verify that all components are present upon unboxing:

- HAVA Countertop Dishwasher with Power Cable (55")
- Cutlery Basket
- Dish Rack
- Fruit Basket
- Drain Hose (61")
- Inlet Hose (61")
- Pitcher
- User Manual


Packaging



Pitcher x 1



Cutlery basket x 1

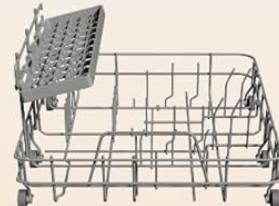

Dish rack x 1



Fruit basket x 1



Drain hose (61") x 1



Inlet hose (61") x 1



User manual x 1



Dishwasher with
power cable (55") x 1

Figure 2: Packaging Contents

PRODUCT FEATURES

Enhanced Energy Efficiency (ECO Mode)

The 2025 upgraded model features an optimized ECO mode designed to conserve water and energy. This mode provides effective cleaning while minimizing environmental impact.

Save More Energy with the ECO Program





Figure 3: ECO Mode for Energy Savings

Integrated Water Softener

Equipped with a water softener, this dishwasher helps prevent limescale buildup and watermarks on your dishware, especially in hard water areas. Adjust the softener setting based on your local water hardness for optimal results.

Integrated Water Softener

Prevents limescale buildup and avoids watermarks on your dishwasher

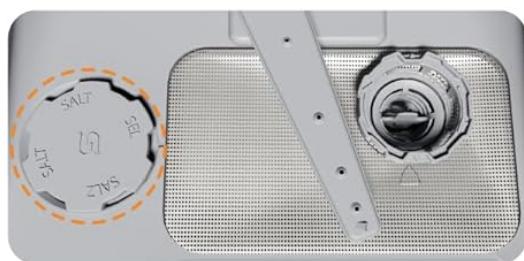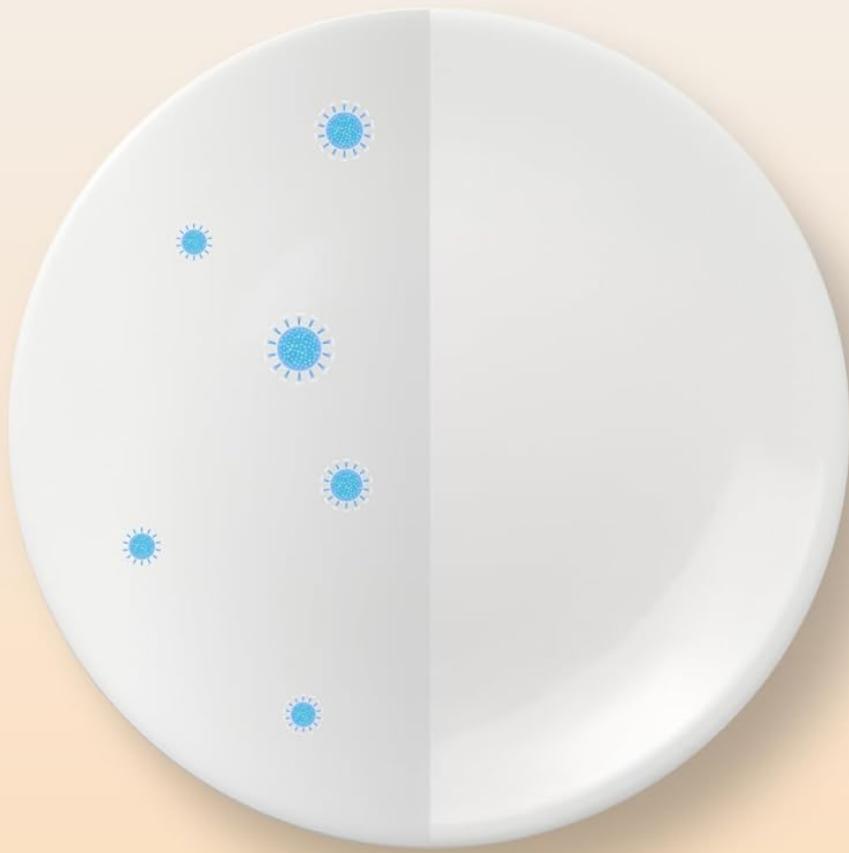

Twist the cap to open



Add dishwasher salt and tighten the cap

Figure 4: Water Softener Mechanism

Redesigned Dish Rack

The adjustable tableware basket has an improved structure, offering a larger capacity to accommodate more items and ensure thorough 360-degree cleaning of all dinnerware.



2025 Redesigned Basket

Larger capacity holds more items to meet the whole family's needs

							
4 x Dinner Plates	4 x Small Plates	4 x Serving Bowls	4 x Cups	4 x Glasses	7 x Forks	7 x Spoons	7 x Knives

Figure 5: Redesigned Dish Rack Capacity

Upgraded 360° Dual-Arm Spray System

Ensures comprehensive cleaning with pressurized hot water from multiple outlets, reaching all corners of the dishwasher interior.

Upgraded 360° Dual-Arm Spray System



Figure 6: 360° Dual-Arm Spray System

PTC Hot Air Drying & 72-Hour Fresh Air Circulation

After each wash cycle (except Fruit mode), an automatic 60-minute drying at 104°F activates. An optional 72-hour ventilation feature helps remove odors, control moisture, and prevent mold, ensuring sanitary storage.

72-Hour Fresh Air Circulation



Odor Removal



Moisture Control



Mold Prevention

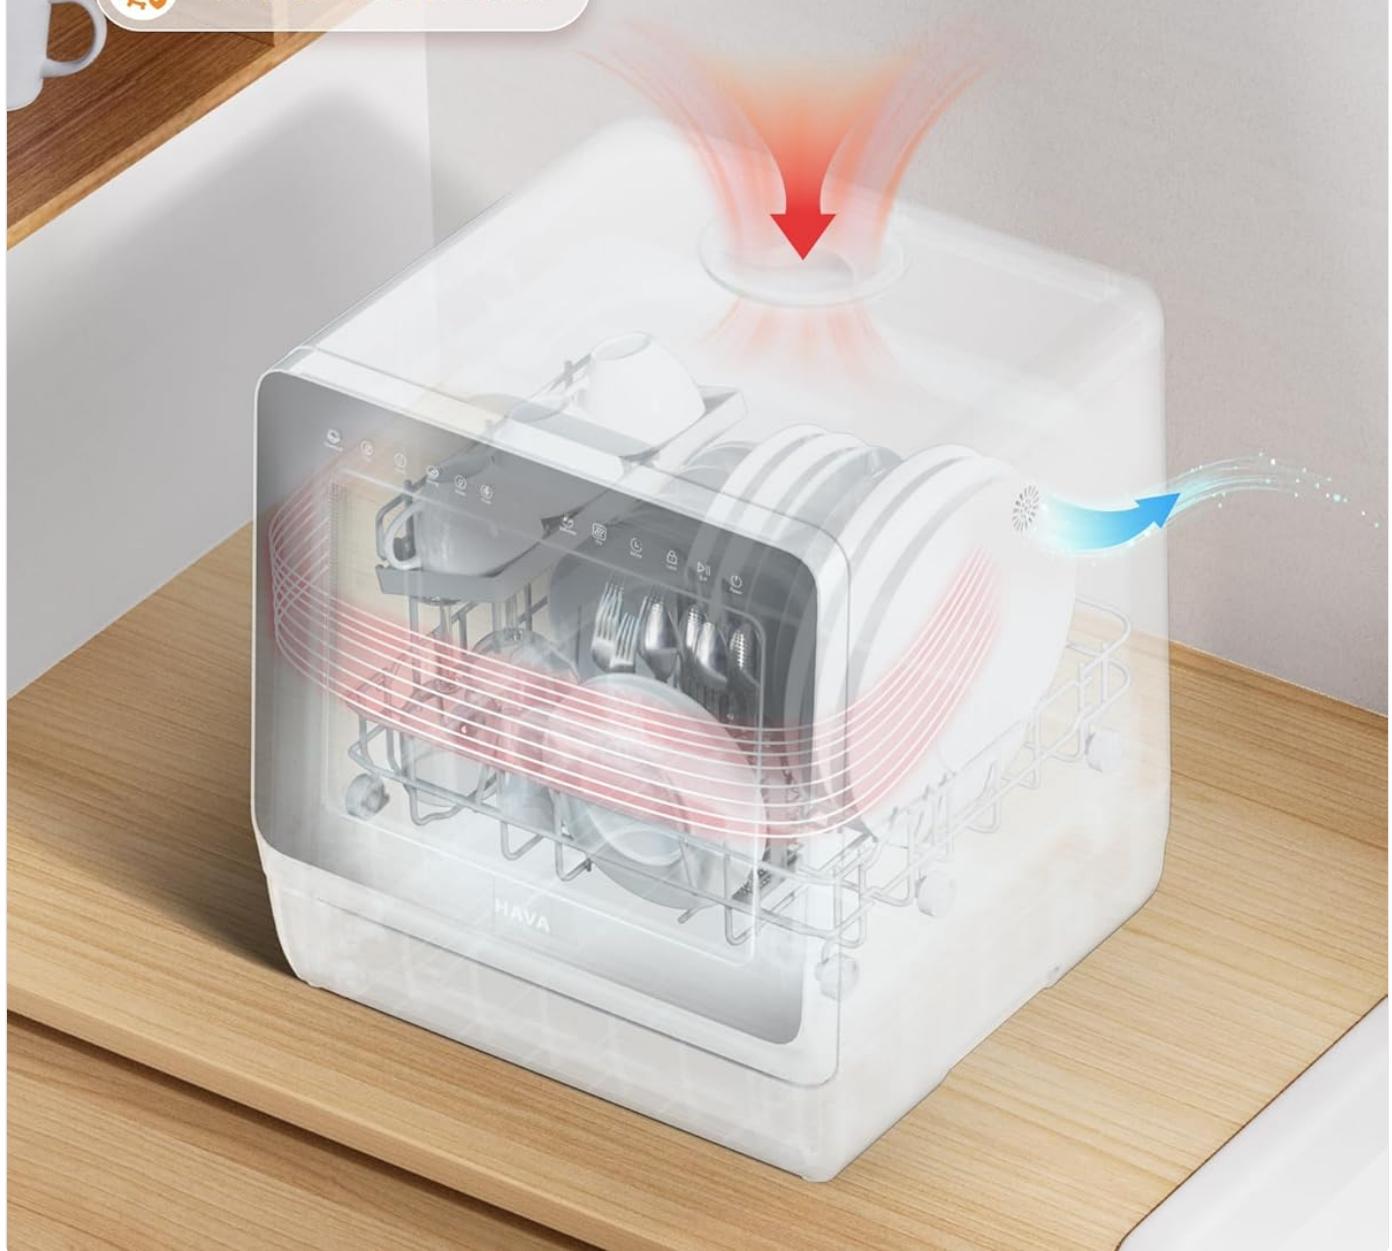


Figure 7: Fresh Air Circulation System

Compact Size, Large Capacity

Despite its compact countertop design, the dishwasher offers a spacious interior. Exterior dimensions: 16.86" L x 16.75" W x 18.05" H. Interior dimensions: 13" L x 13.77" W x 10.83" H (with tableware basket inside).

Compact Size, Large Capacity

Interior Size (L x W x H): 13 x 13.77 x 10.83 in



Figure 8: Compact Design with Ample Interior

Versatile and Portable

Ideal for various small spaces including apartments, dorms, kitchens, and RVs, offering portability and convenience.

Versatile Portable Dishwasher


Perfect for All Spaces



Kitchen



Dorm

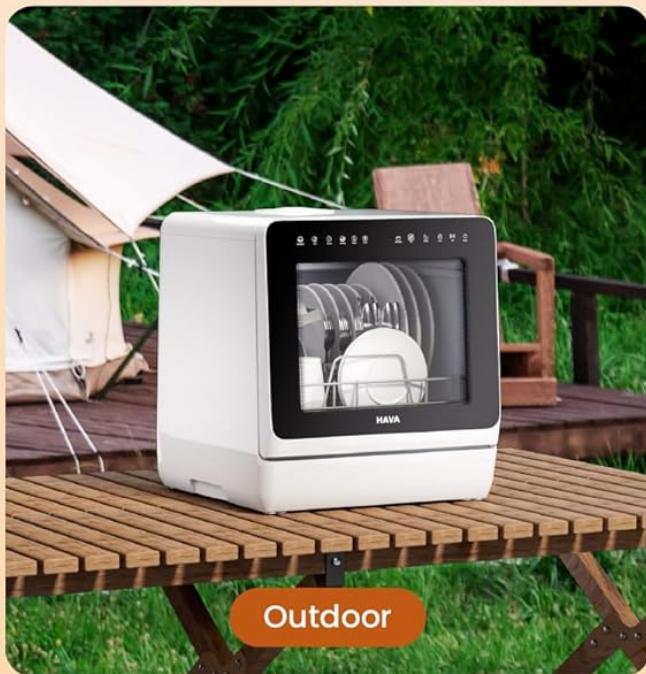

Outdoor



RV

Figure 9: Versatile Placement Options

Quiet Operation

The reinforced glass door contributes to a low noise level of only 50-60 dB during operation.

User-Friendly Touch Screen Interface

Features responsive touch buttons for seamless operation, offering 8 wash programs, child lock, and an 18-hour delayed start function.

Intuitive Operation with Touch Panel

2 User-Friendly Features



Child Lock



18-Hour Delayed Start

8 Wash Programs



Normal



Glass



Quick



Fruit



ECO



Self-Clean



Strong



Dry



Figure 10: Intuitive Touch Panel

SETUP

Placement

Place the dishwasher on a stable, flat, and heat-resistant surface near a power outlet and a drainage point.

Water Supply Options

The HAVA Countertop Dishwasher offers two methods for water supply:

- Built-in 5 L Water Tank:** For hassle-free installation without plumbing. Simply open the water inlet on top of the unit and pour water using the provided pitcher until the tank is full.
- Faucet Connection:** Connect the provided inlet hose to a compatible faucet for continuous water supply.

No Installation Needed

Two Options for Adding Water

5 L Built-In Water Tank



Faucet Connection with the Inlet Hose



Figure 11: Water Supply Methods

Drainage

Connect the drain hose to the designated outlet on the dishwasher. Position the other end of the drain hose into a sink or a bucket for wastewater collection. Ensure the hose is not kinked or blocked.

OPERATING INSTRUCTIONS

Loading Dishes

Arrange dishes in the redesigned dish rack, ensuring they do not obstruct the spray arms. Place cutlery in the cutlery basket. For optimal cleaning, scrape off large food particles before loading.

Adding Detergent

Open the detergent dispenser and add the recommended amount of dishwasher detergent. Close the dispenser securely.

Selecting a Wash Program

The dishwasher features 8 wash programs to suit various cleaning needs. Use the touch screen interface to select your desired program:

- **Normal:** For daily dishware with typical food soil.
- **Quick:** For lightly soiled dishes that need a fast wash.
- **ECO:** Energy and water-efficient cycle for normal loads.
- **Strong:** For heavily soiled pots, pans, and dishes.
- **Glass:** Gentle cycle for delicate glassware.
- **Fruit:** Specialized program for washing fruits.
- **Self-Clean:** For cleaning the dishwasher's interior.
- **Dry:** Drying function for dishes.

Additional Functions

- **Child Lock:** Engages to prevent accidental operation by children.
- **Delayed Start:** Allows you to set a delayed start time for up to 18 hours.

Starting a Cycle

After loading dishes, adding detergent, and selecting a program, press the Start button to begin the wash cycle.

MAINTENANCE

Cleaning the Filter

Regularly clean the filter to ensure optimal performance. Remove the filter assembly, rinse it under running water to remove food particles, and reassemble.

Water Softener Maintenance

Periodically check and refill the water softener salt compartment as needed, especially if you notice water spots on your dishes. Refer to the water softener section for instructions on adding salt.

Exterior Cleaning

Wipe the exterior of the dishwasher with a soft, damp cloth. Avoid abrasive cleaners.

TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord unplugged; Door not closed properly; Child lock engaged.	Check power connection; Ensure door is latched; Deactivate child lock.
Dishes not clean	Improper loading; Clogged spray arms; Insufficient detergent; Clogged filter.	Reload dishes correctly; Clean spray arms; Add more detergent; Clean filter.
Water not draining	Drain hose kinked or blocked; Clogged drain filter.	Check and clear drain hose; Clean drain filter.
Water spots on dishes	Hard water; Low rinse aid; Water softener salt low.	Adjust water softener setting; Refill rinse aid; Add water softener salt.

For issues not listed here, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	TDJR09
Product Dimensions (L x W x H)	16.86 x 16.75 x 18.05 inches (42.8 x 42.5 x 45.8 cm)
Interior Size (L x W x H)	13 x 13.77 x 10.83 inches
Item Weight	28.6 pounds (13 Kilograms)
Water Tank Capacity	5 Liters
Voltage	220 Volts
Energy Consumption	950 Kilowatts
Annual Energy Consumption	150 Kilowatt Hours Per Year
Noise Level	60 dB
Wash Programs	8 (Normal, Quick, ECO, Strong, Glass, Fruit, Self-Clean, Dry)
Special Features	Built-In Water Tank, Childproof Lock, Digital Display, Energy Saving, Water Softener
Material	Polypropylene (PP)
Color	Black

WARRANTY AND SUPPORT

HAVA provides a one-year warranty for this product. If you have any questions about the product, require technical assistance, or need to claim warranty service, please feel free to contact us. Our customer support team is dedicated to helping you.

Please refer to your purchase documentation or the HAVA official website for specific contact details.

© 2025 HAVA. All rights reserved.