

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /


› [Fastrack](#) /

› [Fastrack StreetStyle Quartz Digital Watch Model 38097PP02W User Manual](#)

Fastrack 38097PP02W

Fastrack StreetStyle Quartz Digital Watch

MODEL: 38097PP02W

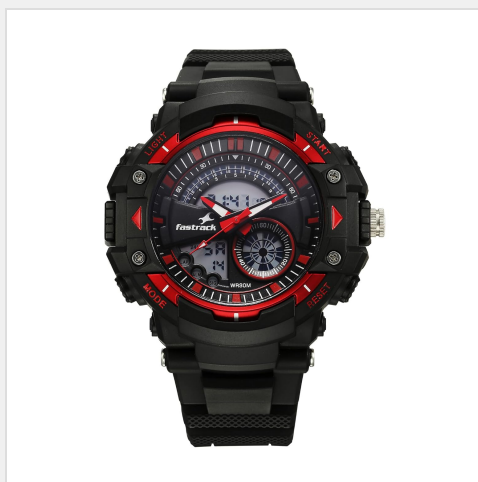

Front view of the Fastrack StreetStyle Quartz Digital Watch, showcasing its black and red dial and black PU strap.

1. PRODUCT OVERVIEW

The Fastrack StreetStyle Quartz Digital Watch, Model 38097PP02W, combines analog and digital timekeeping with a robust design. This watch is designed for daily wear and features several useful functions.

Key Features

- Digital and Analog Time Display
- 30 Meter Water Resistance
- Durable Acrylic Glass Material
- Alarm Chime Function
- EL Backlight for low-light visibility
- Stopwatch Function
- Day and Date Display

Package Contents

- Fastrack StreetStyle Quartz Digital Watch (Model 38097PP02W)

- User Manual
- Warranty Card

2. SETUP

Initial Activation

Your watch comes with a pre-installed LR44 battery. If the digital display is not active, check for a plastic tab under the crown (the knob on the side). Remove this tab if present to activate the battery.

Setting Time and Date

1. **Analog Time:** Pull out the crown on the right side of the watch. Rotate the crown to adjust the hour and minute hands to the correct time. Push the crown back in to secure the setting.
2. **Digital Time and Date:** Refer to the 'Operating Instructions' section for detailed steps on using the MODE button to navigate through settings and the START/RESET buttons to adjust values.

Strap Adjustment

The PU strap is designed for comfort and durability. Adjust the buckle to ensure a snug yet comfortable fit on your wrist. Avoid overtightening, which can restrict circulation.

3. OPERATING INSTRUCTIONS

This watch features multiple buttons for various functions. Familiarize yourself with their roles:



Side view of the watch, highlighting the various control buttons.

Button Functions

- **LIGHT Button (Top Left):** Activates the EL backlight for the digital display.
- **MODE Button (Bottom Left):** Cycles through different digital display modes (Time, Date, Alarm, Stopwatch).
- **START Button (Top Right):** Used to start/stop the stopwatch, adjust values in setting modes.
- **RESET Button (Bottom Right):** Used to reset the stopwatch, confirm settings, or switch between 12/24-hour format.

Digital Display Modes

1. **Time Mode:** Displays current digital time (hours, minutes, seconds) and day of the week. Press **MODE** to cycle to other functions.
2. **Date Mode:** Displays the current month and day.
3. **Alarm Mode:** Allows setting and activating an alarm.
4. **Stopwatch Mode:** For timing events.

Setting Digital Time and Date

1. From Time Mode, press the **MODE** button repeatedly until the seconds begin to flash.
2. Press the **START** button to adjust the flashing value (seconds, hours, minutes, month, date, day).
3. Press the **RESET** button to move to the next setting item.
4. Once all settings are complete, press the **MODE** button to exit setting mode.

Using the Alarm Function

1. Press the **MODE** button until 'AL' (Alarm) appears on the digital display.
2. Press the **RESET** button to select the hour or minute to set.
3. Use the **START** button to adjust the flashing hour or minute.
4. Press **MODE** to exit. To activate/deactivate the alarm, press **START** while in Alarm Mode. An alarm icon will appear when active.

Using the Stopwatch Function

1. Press the **MODE** button until 'ST' (Stopwatch) appears.
2. Press the **START** button to begin timing.
3. Press **START** again to pause timing.
4. Press the **RESET** button to clear the stopwatch to zero.

EL Backlight

Press the **LIGHT** button (top left) to illuminate the digital display for a few seconds, aiding visibility in dark conditions.

4. MAINTENANCE

Cleaning Your Watch

Wipe the watch case and strap regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, which can damage the watch materials.

Water Resistance (30 Meters)



Back view of the watch, showing the stainless steel back and water resistance marking.

This watch is water resistant up to 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Do not operate buttons while the watch is wet or submerged.

Battery Replacement

The watch uses one LR44 battery. When the digital display dims or stops functioning, it's time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage

When not in use for extended periods, store your watch in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing it near strong magnetic fields.

5. TROUBLESHOOTING

Issue	Possible Cause	Solution
Digital display is blank or dim.	Low or dead battery.	Replace the LR44 battery. See 'Battery Replacement' section.
Analog hands are not moving.	Analog battery issue or mechanical fault.	Check if the crown is pushed in. If not, battery replacement or professional service may be required.
Buttons are unresponsive.	Watch is wet, or internal issue.	Ensure watch is dry. If issue persists, seek professional service.
Time is inaccurate.	Incorrect setting or battery issue.	Re-set the time and date. If problem continues, consider battery replacement.

6. SPECIFICATIONS

Feature	Detail
Brand	Fastrack

Feature	Detail
Model Number	38097PP02W
Display Type	Digital and Analog
Water Resistance	30 Meters (3 ATM)
Case Material	Not specified (typically resin/plastic for this style)
Strap Material	PU (Polyurethane)
Glass Material	Acrylic
Battery Type	1 x LR44 (included)
Item Weight	200 g
Product Dimensions	13 x 9 x 6 cm
Manufacturer	Titan Company Limited

7. WARRANTY AND SUPPORT

Warranty Information







This Fastrack watch is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your package for specific terms, conditions, and duration of coverage. Keep your purchase receipt as proof of purchase.

Customer Support

For any questions, service requests, or technical assistance, please contact Fastrack customer support. Contact details can typically be found on the warranty card or the official Fastrack website. You may also reach out to the manufacturer, Titan Company Limited, for support.

Manufacturer Contact:

Titan Company Limited
3, Sipcot Industrial Complex, Hosur - 635126
Email: corpcomm@titan.co.in
Phone: +91-(0)4344-664199

	<p>OY22E Smart Watch User Manual: Setup, Features, and Safety</p> <p>Comprehensive user manual for the OY22E Smart Watch by Fastrack. Learn how to set up, pair, use features like Bluetooth calls, health tracking, and understand safety guidelines and specifications.</p>
	<p>Fastrack S06 Smartwatch User Manual</p> <p>Comprehensive user manual for the Fastrack S06 Smartwatch, covering setup, features, maintenance, and safety information.</p>
	<p>Fastrack Reflex Play Smartwatch User Manual: Setup, Features, and Troubleshooting</p> <p>Comprehensive user manual for the Fastrack Reflex Play smartwatch, covering setup, app connection, features like fitness tracking, heart rate monitoring, notifications, and troubleshooting guides.</p>
	<p>Fastrack Reflex Beat+ Smartwatch User Manual: Features, Pairing & Setup</p> <p>Comprehensive user manual for the Fastrack Reflex Beat+ Smartwatch. Learn about its features, app installation, watch pairing, health tracking, and technical specifications.</p>
	<p>Fastrack FPods FT7 Truly Wireless Earpods Quick Start Guide</p> <p>Get started with your Fastrack FPods FT7 Truly Wireless Earpods. This guide covers setup, controls, features like 3C NitroFast Charge, Quad Mic ENC, and low latency gaming mode.</p>
	<p>Fastrack FPods FZ100 Truly Wireless Earbuds Quick Start Guide</p> <p>Learn how to set up, use, and care for your Fastrack FPods FZ100 Truly Wireless Earbuds. This guide covers pairing, controls, features like gaming mode and voice assistant, charging, and specifications.</p>