

Manuals.plus /

› Bnnwa /

› Bnnwa Wireless Bluetooth Keyboard with Touchpad Instruction Manual

Bnnwa Wireless Bluetooth Keyboard with Touchpad

Bnnwa Wireless Bluetooth Keyboard with Touchpad Instruction Manual

Model: Wireless Bluetooth Keyboard with Touchpad

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Bnnwa Wireless Bluetooth Keyboard with Touchpad. Please read this manual thoroughly before using the product to ensure proper functionality and to maximize your user experience. This keyboard is designed for versatile use with various devices, including TVs, Windows PCs, Android devices, Chrome OS systems, laptops, and tablets.

PACKAGE CONTENTS

Please check the package contents upon unboxing. If any items are missing or damaged, contact customer support.

- Bnnwa Wireless Bluetooth Keyboard with Touchpad
- USB Receiver (for 2.4GHz wireless connection)
- User Manual
- 2 x AAA Batteries (pre-installed or included separately)

Weitgehend kompatible Systeme Switch

Zwischen 3 Geräten



Figure 1: Back of the keyboard illustrating the power switch, USB receiver storage, battery compartment, and anti-slip pads.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the keyboard.
2. Open the battery compartment cover.
3. Insert two AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

The keyboard is powered by 2 AAA batteries. An energy-saving feature automatically puts the keyboard into sleep mode after 30 minutes of inactivity to conserve battery life. Press any key to wake it up.

2. Powering On/Off

Locate the power switch on the back of the keyboard. Slide the switch to the "ON" position to power on the keyboard. Slide it to the "OFF" position when not in use to further conserve battery life.

3. Connecting to Devices

This keyboard supports connection to up to three devices simultaneously via 2.4GHz wireless and

two Bluetooth channels. You can switch between connected devices with a single button click.



Figure 2: The keyboard's ability to connect to three devices concurrently via 2.4GHz and two Bluetooth channels.

3.1. 2.4GHz Wireless Connection

1. Ensure the keyboard is powered on.
2. Take the USB receiver out of its storage slot on the back of the keyboard.
3. Plug the USB receiver into an available USB port on your device (e.g., TV, computer).
4. The keyboard should automatically connect. If not, press the 2.4G connection key (usually indicated by a 2.4G icon) to activate the 2.4G mode.

The 2.4GHz connection offers a stable wireless range of up to 33 feet (10 meters).

DIMENSION

Ultra-schlanke Bluetooth-Tastatur



Figure 3: Illustration of the keyboard's 33-foot wireless operating range.

3.2. Bluetooth Connection (BT1 & BT2)

1. Ensure the keyboard is powered on.
2. Press and hold the **BT1** or **BT2** connection key for 3-5 seconds until the indicator light flashes, indicating pairing mode.
3. On your device (e.g., tablet, smartphone, laptop), go to Bluetooth settings.
4. Search for available Bluetooth devices and select "Bnnwa Keyboard" (or similar name).
5. Follow any on-screen prompts to complete the pairing process.
6. Repeat for a second Bluetooth device using the other BT key.

The keyboard supports Android, Microsoft (Windows), iOS, and Mac OS systems.

Weitgehend kompatible Systeme Switch

Zwischen 3 Geräten



Figure 4: System compatibility and connection indicators for 2.4G and Bluetooth modes.

OPERATING INSTRUCTIONS

1. Switching Between Devices

Once multiple devices are paired (one 2.4GHz, two Bluetooth), you can switch between them by simply pressing the corresponding connection key (**2.4G**, **BT1**, or **BT2**). The keyboard will connect to the selected device without re-pairing.

2. Touchpad Gestures

The integrated multi-touch trackpad allows for effortless navigation and control. Below are common gestures:

33FT STARK DRAHTLOS BEREICH



Figure 5: Common touchpad gestures for navigation and control.

- **One-Finger Slide:** Move the cursor.
- **One-Finger Click:** Left-click.
- **Two-Finger Click:** Right-click.
- **Two-Finger Swipe (Up/Down):** Scroll vertically.
- **Two-Finger Swipe (Left/Right):** Scroll horizontally (if supported by application).
- **Pinch In/Out:** Zoom in or out (if supported by application).
- **Three-Finger Slide Up/Down:** Specific system functions (e.g., task view on Windows, mission control on Mac OS).

Note: To lock the touchpad, press the **Fn** key simultaneously with the touchpad lock key (refer to keyboard layout for specific key). Press again to unlock.

3. Multimedia Shortcuts

The keyboard features 12 combinations of multimedia shortcuts for quick access to functions like volume control, media playback, and more. These are typically accessed by pressing the **Fn** key in combination with the corresponding function key (F1-F12).

- **Fn + F1-F12:** Access multimedia functions (e.g., Play/Pause, Volume Up/Down, Mute, Previous/Next Track, Home, Search, etc.). Refer to the icons on the function keys for specific actions.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the keyboard surface. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid excessive moisture.
- **Storage:** When not in use for extended periods, store the keyboard in a dry, cool place. Consider removing batteries if storing for several months to prevent leakage.
- **Avoid Liquids:** Do not expose the keyboard to liquids. Spills can cause damage.
- **Avoid Extreme Temperatures:** Do not expose the keyboard to extreme heat or cold.

TROUBLESHOOTING

Problem	Solution
Keyboard not responding.	<ul style="list-style-type: none">• Ensure the keyboard is powered on.• Check battery level and replace if necessary.• Ensure the correct connection mode (2.4G, BT1, BT2) is selected.• For 2.4GHz, ensure the USB receiver is securely plugged in.• For Bluetooth, ensure the device's Bluetooth is enabled and the keyboard is paired. Try re-pairing.• Wake the keyboard from sleep mode by pressing any key.
Touchpad not working.	<ul style="list-style-type: none">• Ensure the touchpad is not locked (press Fn + touchpad lock key).• Clean the touchpad surface.• Restart the keyboard and the connected device.
Connection drops frequently.	<ul style="list-style-type: none">• Ensure the keyboard is within the 33ft (10m) operating range.• Reduce interference from other wireless devices.• Check battery level.• Try connecting to a different USB port for 2.4GHz.

SPECIFICATIONS

Brand	Bnnwa
Model	Wireless Bluetooth Keyboard with Touchpad
Connectivity Technology	Bluetooth, 2.4GHz Wireless
Keyboard Description	Multimedia
Special Features	Multi-Touch Trackpad, 3-Device Connection, Multimedia Shortcuts, Auto Sleep
Color	Gray
Product Dimensions	32.6L x 12.3W x 1.8H centimetres
Material	Plastic
Power Source	Battery Powered (2 x AAA batteries)
Keyboard Layout	QWERTY
Wireless Range	Up to 33 feet (10 meters)



Figure 6: Physical dimensions and weight of the Bnnwa Wireless Bluetooth Keyboard.

SAFETY INFORMATION

Please observe the following safety guidelines to prevent damage to the product or injury:

- Do not disassemble or attempt to repair the keyboard yourself.
- Keep the keyboard away from water, moisture, and extreme temperatures.
- Avoid dropping or subjecting the keyboard to strong impacts.
- Dispose of batteries according to local regulations.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Bnnwa customer service through the retailer where the product was purchased. Please have your product model and purchase date available when contacting support.