

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [FOWORE](#) /

› [FOWORE 4.3 Cuft Fireproof Waterproof Digital Home Safe User Manual](#)

FOWORE 4.3 Cuft

FOWORE 4.3 Cuft Fireproof Waterproof Digital Home Safe User Manual

Model: 4.3 Cuft

1. INTRODUCTION

Thank you for choosing the FOWORE 4.3 Cuft Digital Home Safe. This safe is designed to provide secure storage for your valuables, documents, and personal items. It features a robust steel construction, a programmable digital keypad, and an intelligent alarm system for enhanced security. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your safe.

2. SAFETY INFORMATION

- **Do not store emergency keys inside the safe.** Always keep them in a secure, separate location away from the safe.
- Ensure the safe is placed on a stable, level surface or securely mounted to a wall/floor to prevent tipping.
- Keep the safe away from excessive moisture or direct heat sources.
- Regularly check battery levels to ensure proper operation of the digital keypad.
- This safe is designed for security and includes a fireproof and waterproof document bag for added protection against fire and water damage for contents placed inside the bag. The safe itself is not water resistant.

3. PRODUCT COMPONENTS

The following components are included with your FOWORE 4.3 Cuft Digital Home Safe:

- 1 x FOWORE 4.3 Cuft Digital Home Safe
- 1 x Fireproof Waterproof Bag
- 2 x Emergency Backup Keys
- 4 x Expansion Screws (for mounting)

- 1 x External Battery Box
- 1 x User Manual (this document)
- 1 x Scratch-resistant Felt Pad



Figure 3.1: Included Components of the FOWORE Safe

4. SETUP

4.1 Initial Opening (First Time Use)

For the first time opening, use one of the provided emergency backup keys:

1. Locate the keyhole on the digital keypad panel.
2. Insert the emergency key into the keyhole and turn it clockwise.
3. While holding the key turned, rotate the knob on the keypad clockwise to open the safe door.



Figure 4.1: Initial Opening with Emergency Key

4.2 Battery Installation

The digital keypad requires 4 AA batteries (not included) for operation. Install them after opening the safe with the emergency key:

1. Open the battery compartment located on the inside of the safe door.
2. Insert 4 AA batteries, ensuring correct polarity (+/-).
3. Close the battery compartment.

4.3 Setting Your Personal Passcode

After installing batteries, you can set your personal passcode (3-8 digits):

1. With the safe door open, press the red reset button located on the inside of the door (usually near the hinge). You will hear a beep and the yellow light on the keypad will illuminate.
2. Enter your desired 3-8 digit passcode on the keypad.
3. Press the '#' button to confirm. You will hear a confirmation beep.
4. Test the new passcode with the door open before closing it.

4.4 Mounting the Safe

The safe can be securely mounted to a wall or floor using the provided expansion screws:

1. Choose a suitable location for mounting. The safe has pre-drilled holes on the back and bottom panels.
2. Mark the drilling points on the wall or floor through the pre-drilled holes.
3. Drill holes at the marked positions.
4. Align the safe with the drilled holes and insert the expansion screws.
5. Tighten the screws firmly to secure the safe in place.



Figure 4.2: Wall and Floor Mounting Design

5. OPERATING INSTRUCTIONS

5.1 Opening the Safe

There are three methods to open your FOWORE safe:

1. **Using Passcode:** Enter your 3-8 digit passcode, then press '*' or '#' to confirm. The green light will illuminate. Rotate the knob clockwise to open the door.
2. **Using Emergency Key:** (For first-time use, forgotten passcode, or dead batteries) Insert the emergency key into the keyhole, turn it clockwise, and simultaneously rotate the knob clockwise to open the door.
3. **Using External Battery Box:** (If batteries are dead and emergency key is unavailable) Connect the external battery box to the port on the keypad. Enter your passcode, then rotate the knob clockwise to open the door.

3 Ways To Open

METHOD 1

- ① Enter Passcode
 - ② Turn Knob Clockwise
- Input 3 to 8 digits combo
 - Confirmed by "*" or "#"
 - Fast access!



METHOD 2



- ① Use Key
 - ② Turn Knob Clockwise
- First time operation
 - Forgotten passcode
 - Dead batteries

METHOD 3



- ① Use Emergency Battery Box
 - ② Enter Passcode
 - ③ Turn Knob Clockwise
- Low batteries
 - Dead batteries

Figure 5.1: Three Ways to Open the Safe

Video 5.1: Demonstration of Unlock Methods for the FOWORE Home Safe Box.

5.2 Mute Mode

To activate or deactivate the mute mode:

1. Press and hold the '*' key.
2. Then, press the '8' key to toggle the buzzer sound on or off.

5.3 Anti-Theft Alarm System

The safe is equipped with an intelligent alarm system:

- If three consecutive incorrect passcodes are entered, the alarm system will activate, sounding an alert and locking the keypad temporarily.
- The alarm can be silenced using the mute mode feature if desired.

ANTI-THEFT ALARM & MUTE



Press and hold the * key, then press the 8 key to switch the buzzer on/off

3 incorrect passwords will activate the alarm system to sound the bell.



Figure 5.2: Anti-Theft Alarm and Mute Mode

6. FEATURES

6.1 Robust Construction

The FOWORE safe is constructed from sturdy cold-rolled steel, offering good rust and high-temperature resistance. It features a 50mm thick door and 3 round 20mm locking bolts, along with a micro-seam design, providing impact and pry resistance.



Figure 6.1: Tough and Reliable Personal Safe Construction

6.2 Removable Shelves and LED Light

The safe includes 3 removable shelves, allowing you to customize the internal storage space according to your needs. A built-in LED light illuminates the interior for easy access to your belongings, even in low light conditions.



Figure 6.2: Large Home Safe Box with Removable Shelves

Video 6.1: Overview of FOWORE Security Home Safe Box features, including LED light and removable shelves.

7. MAINTENANCE

7.1 Battery Replacement

When the battery power is low, the keypad indicator light may flash red or the safe may not respond. Replace all 4 AA batteries promptly to ensure continuous operation.

7.2 Cleaning

Clean the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish or electronic components.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with passcode.	Incorrect passcode entered; Low batteries.	Re-enter correct passcode. Replace batteries or use external battery box. Use emergency key.
Alarm sounds unexpectedly.	Three incorrect passcode entries; Physical tampering.	Enter correct passcode. Check for tampering. Use mute mode if desired.
Keypad is unresponsive.	Dead batteries; Keypad locked after multiple incorrect entries.	Replace batteries. Wait for the lockout period to expire or use emergency key.
Door does not close properly.	Obstruction; Locking bolts not fully retracted.	Check for items blocking the door. Ensure the knob is fully turned to retract bolts before closing.

9. SPECIFICATIONS

Feature	Detail
Brand	FOWORE
Product Dimensions	12.2"D x 14.96"W x 23.62"H
Lock Type	Electronic Digital Keypad, Spare Keys
Color	Black
Capacity	4.3 Cubic Feet
Material	Alloy Steel
Special Features	Alarm System, Anti-Theft, Combination Lock, LED Light, Removable Shelf
Mounting Type	Floor and Wall Mount
Item Weight	38 Pounds
Alarm	Beeping & Silent Mode
Water Resistance Level	Not Water Resistant (Fireproof bag included for water protection of contents)

10. WARRANTY AND SUPPORT

FOWORE offers a 5-year return or exchange warranty and lifetime technical support for this product. Each safe keyhole has a unique code. If you accidentally lose your key, you can obtain a new one using this unique code. Please retain your unique key code in a safe place, separate from the safe itself.

For further assistance or inquiries, please contact FOWORE customer support.

