

## Kisonli S9

# Kisonli S9 Portable Bluetooth Speaker User Manual

## INTRODUCTION

---

The Kisonli S9 Portable Bluetooth Speaker delivers impressive sound quality in a compact design, suitable for various environments. Featuring a powerful 5W output and an internal magnetic horn, this speaker produces clear and dynamic audio. Its 1200mAh battery provides 3-6 hours of playback, making it ideal for outdoor activities, gatherings, or personal listening. The S9 supports multiple playback options, including Bluetooth, USB, TF card, and AUX, offering versatile listening choices. Simple controls allow for easy mode switching, track selection, and volume adjustment. Small and easy to carry, the S9 is a convenient option for music enthusiasts on the go.

## PRODUCT OVERVIEW

---

Familiarize yourself with the Kisonli S9 speaker's components and controls.



**Figure 1:** Front view of the Kisonli S9 portable Bluetooth speaker, black color, with the Kisonli logo visible on the speaker grille. A wrist strap is attached to the side.



**Figure 2:** Top-down view of the Kisonli S9 speaker's control panel and ports, with labels indicating functions such as power switch, charging port, USB port, TF card slot, AUX input, and control buttons for volume, track, and mode.

### Control Functions:

- **ON/OFF Switch:** Located at the back, slides to power the speaker on or off.
- **Battery Charging DC-5V Port:** Micro USB port for charging the speaker.
- **U Disk Playback / Intelligent Mobile Charging Interface:** USB-A port for playing music from a USB drive or potentially charging a mobile device (check product specifications for charging capability).
- **TF Card Playback:** Slot for playing music directly from a TF (MicroSD) card.
- **AUX and Audio Antenna:** 3.5mm audio input for connecting external devices via an AUX cable. This

port may also function as an antenna for FM radio if supported.

- **Play/Pause Button:** Controls music playback.
- **Next Song / Volume Up Button:** Short press for next track, long press to increase volume.
- **Last Song / Volume Down Button:** Short press for previous track, long press to decrease volume.
- **BT/USB/AUX Modes Switch:** Button to cycle through different playback modes (Bluetooth, USB, AUX, TF card).

## SETUP

---

### 1. Charging the Speaker

1. Connect the provided USB charging cable to the DC-5V charging port on the speaker.
2. Connect the other end of the USB cable to a standard USB power adapter (5V DC) or a computer's USB port.
3. The charging indicator light will illuminate (color may vary) to show that the speaker is charging.
4. Once fully charged, the indicator light may change color or turn off. A full charge typically takes a few hours.

### 2. Powering On/Off

- To power on, slide the ON/OFF switch to the 'ON' position. You will hear an audible prompt.
- To power off, slide the ON/OFF switch to the 'OFF' position.

## OPERATING INSTRUCTIONS

---

### 1. Bluetooth Mode

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light and an audible prompt.
2. On your mobile device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select "S9" from the list of devices.
4. Once paired, the LED light will stop flashing, and you will hear a confirmation sound.
5. You can now play audio from your device through the speaker.

### 2. USB Playback Mode

1. Insert a USB flash drive containing MP3 audio files into the USB port.
2. Press the Mode Switch button (BT/USB/AUX) until the speaker enters USB mode. It should automatically start playing music.

### 3. TF Card Playback Mode

1. Insert a TF (MicroSD) card containing MP3 audio files into the TF card slot.
2. Press the Mode Switch button (BT/USB/AUX) until the speaker enters TF card mode. It should automatically start playing music.

### 4. AUX Input Mode

1. Connect one end of a 3.5mm audio cable (not included) to the AUX port on the speaker.
2. Connect the other end of the audio cable to the headphone jack or audio output of your external device.

3. Press the Mode Switch button (BT/USB/AUX) until the speaker enters AUX mode.
4. Play audio from your external device. Volume control may need to be adjusted on both the speaker and the external device.

## 5. Volume and Track Control

- **Volume Up:** Long press the 'Next Song / Volume Up' button.
- **Volume Down:** Long press the 'Last Song / Volume Down' button.
- **Next Track:** Short press the 'Next Song / Volume Up' button.
- **Previous Track:** Short press the 'Last Song / Volume Down' button.
- **Play/Pause:** Short press the 'Play/Pause' button.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use, to maintain battery health.
- **Water Resistance:** This speaker is not waterproof. Avoid exposure to water or excessive moisture.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker for at least 2-3 hours.
No sound.	Volume is too low or muted. Incorrect mode selected.	Increase volume on both speaker and connected device. Ensure correct playback mode (Bluetooth, USB, TF, AUX) is selected.
Cannot pair via Bluetooth.	Speaker is not in pairing mode. Device Bluetooth is off. Too far from speaker.	Ensure speaker is in Bluetooth mode and flashing. Turn Bluetooth off and on again on your device. Move device closer to the speaker (within 10 meters).
USB/TF card not playing.	Incorrect file format. Card/drive not inserted correctly.	Ensure audio files are in MP3 format. Reinsert the USB drive or TF card firmly. Ensure speaker is in the correct mode.

## SPECIFICATIONS

Feature	Specification
Model Name	S9
Output Power	5W
Battery Capacity	1200mAh

Feature	Specification
Operating Voltage	DC 5V
Dimensions (L x W x H)	153 x 75 x 75 mm
Playback Options	Bluetooth, USB (U disk), TF card, AUX
Battery Life	3-6 hours (depending on volume and usage)
Color	Black
Item Weight	100 grams
Included Components	Quick Start Guide
Country of Origin	China

## WARRANTY AND SUPPORT

---

This product is provided without an explicit warranty as per the product specifications. For any operational issues or questions not covered in this manual, please refer to the retailer or point of purchase for further assistance.