

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [wewear](#) /
- › [wewear HS7 Bluetooth Headphones User Manual](#)

## wewear HS7

# wewear HS7 Bluetooth Headphones User Manual

Model: HS7 | Brand: wegear

## INTRODUCTION

---

Thank you for choosing the wegear HS7 Bluetooth Headphones. This manual provides detailed instructions for setting up, operating, and maintaining your headphones to ensure optimal performance and longevity. Please read this manual thoroughly before use.



Image: Front view of the wegear HS7 Bluetooth Headphones, showcasing the over-ear design and black finish.

## PACKAGE CONTENTS

---

Verify that all items are present in your package:

- wegear HS7 Bluetooth Headphones
- Ear Cushions
- USB Charging Cable

- 3.5mm Audio Cable
- User Manual (this document)

## PRODUCT OVERVIEW

---

Familiarize yourself with the various components and controls of your wegear HS7 headphones.

# Latest Bluetooth 5.4

One-Step Pairing, Low latency



Image: Side view of the wegear HS7 headphones, illustrating the control buttons and ports on the earcup.

### Controls and Indicators:

- **Power Button:** Used for powering on/off, play/pause, and answering/ending calls.

- **Volume Up/Next Track Button:** Press briefly to increase volume; press and hold for 2 seconds to skip to the next track.
- **Volume Down/Previous Track Button:** Press briefly to decrease volume; press and hold for 2 seconds to go to the previous track.
- **Bass Boost Button:** Activates or deactivates the deep bass mode.
- **LED Indicator:** Displays power, pairing, and charging status.
- **USB-C Charging Port:** For connecting the charging cable.
- **3.5mm Audio Jack:** For wired audio connection.
- **Microphone:** Integrated for calls and voice commands, featuring ENC (Environmental Noise Cancellation).

## SETUP

---

### 1. Charging the Headphones

Before initial use, fully charge your headphones.

1. Connect the USB charging cable to the USB-C port on the headphones.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status (e.g., red while charging, blue when fully charged).
4. A full charge provides approximately 60 hours of playtime. A 10-minute quick charge offers 5 hours of playtime.

# Ideal Workout Companion



Image: Close-up of the wegear HS7 headphone earcup, illustrating the USB-C charging port and control buttons.

## 2. Powering On/Off

- **To Power On:** Press and hold the Power button for 3 seconds until the LED indicator flashes blue.
- **To Power Off:** Press and hold the Power button for 3 seconds until the LED indicator turns off.

## 3. Bluetooth Pairing

The headphones utilize Bluetooth 5.4 for stable and fast connections.

1. Ensure the headphones are powered off.
2. Press and hold the Power button for 5 seconds until the LED indicator flashes red and blue alternately, indicating pairing mode.

3. On your device (smartphone, tablet, PC), enable Bluetooth and search for available devices.
4. Select "wegear HS7" from the list of devices.
5. Once connected, the LED indicator will flash blue slowly.
6. The headphones support dual-device connectivity, allowing seamless switching between two paired devices.

## Customizable Soft Head Band

You can easily adapt it to different head sizes and shapes by adjusting the headband.



Image: A visual representation of Bluetooth 5.4 technology, emphasizing ultra-stable and long-distance connection capabilities.

## 4. Wired Connection (3.5mm Audio Cable)

You can use the headphones with a wired connection when the battery is low or for devices without Bluetooth.

1. Connect one end of the 3.5mm audio cable to the audio jack on the headphones.
2. Connect the other end to the audio output port of your device.
3. The headphones will function as passive wired headphones.

## OPERATING INSTRUCTIONS

---

### Music Playback

- **Play/Pause:** Press the Power button once.
- **Next Track:** Press and hold the Volume Up button for 2 seconds.
- **Previous Track:** Press and hold the Volume Down button for 2 seconds.
- **Volume Up:** Press the Volume Up button briefly.
- **Volume Down:** Press the Volume Down button briefly.

### Call Management (ENC Call Noise Cancelling)

The ENC (Environmental Noise Cancellation) technology enhances call clarity by reducing background noise.

- **Answer/End Call:** Press the Power button once.
- **Reject Call:** Press and hold the Power button for 2 seconds.
- **Activate Voice Assistant:** Triple-click the Power button (if supported by your device).

# wegear

## Bluetooth Wireless Headphones



High-Fidelity  
Sound Quality



ENC Noise  
Reduction



Bluetooth  
5.4



Game  
Mode



60H Long  
Battery Life



Dual Device  
Connection

Image: A graphic depicting ENC Noise Reduction Technology, showing how built-in microphones and AI algorithms work to capture voice precisely.

### Bass Boost Mode

Activate the deep bass mode for an enhanced audio experience.

- **Activate/Deactivate Bass Boost:** Press the dedicated Bass Boost button once.

### Compact & Travel-Friendly

Easily foldable and rotatable,  
designed for convenient portability.



Image: A woman enjoying music, with an inset showing the dedicated Bass Boost button on the headphone earcup.

### Gaming Mode

Reduce audio latency for a more synchronized gaming experience.

- **Activate Gaming Mode:** Triple-click the Power button.
- Gaming mode reduces audio delay to approximately 78ms.



## ENC Noise Reduction Technology

Built-in microphones and AI algorithms for precise voice capture.

Image: A man wearing wegear HS7 headphones while playing a video game, demonstrating the use of gaming mode for low-latency audio.

## MAINTENANCE


---

### Cleaning

- Wipe the headphones with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.
- The ear cushions can be gently wiped with a damp cloth and mild soap, then air-dried.

### Storage

- Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- The foldable design allows for compact storage and easy portability.

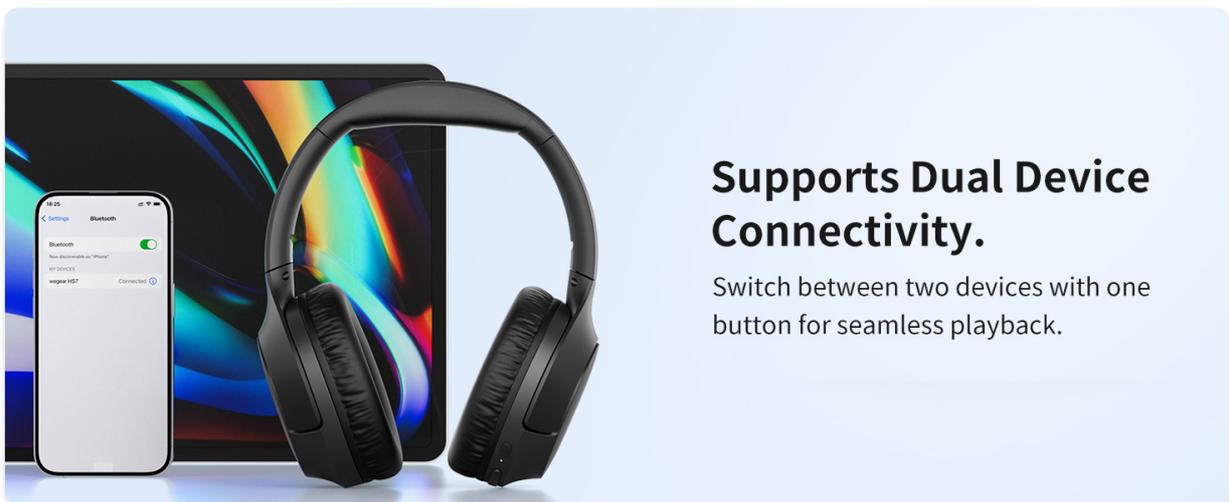

## Supports Dual Device Connectivity.

Switch between two devices with one button for seamless playback.

Image: The wegear HS7 headphones shown in their folded configuration, highlighting their compact and travel-friendly design.

### Battery Care

- Charge the headphones regularly, even if not in use, to maintain battery health.
- Avoid fully depleting the battery frequently.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair via Bluetooth.	Headphones not in pairing mode; Bluetooth disabled on device; interference.	Ensure headphones are in pairing mode (flashing red/blue). Enable Bluetooth on your device. Move closer to the device. Try restarting both devices.
No sound or low volume.	Volume too low; incorrect audio source; loose wired connection.	Increase volume on headphones and device. Check if the correct audio output is selected. Ensure 3.5mm cable is securely connected.
Call quality is poor.	Environmental noise; microphone obstruction.	Ensure microphone is not obstructed. Move to a quieter environment. ENC technology should help reduce background noise.
Bass Boost button unresponsive.	Temporary software glitch.	Power off and on the headphones. Try pressing the button multiple times.

## SPECIFICATIONS

---

- **Model Name:** wegear HS7
- **Connectivity Technology:** Wireless (Bluetooth), Wired (3.5mm)
- **Wireless Communication Technology:** Bluetooth 5.4
- **Audio Driver Type:** Dual 40mm Dynamic Drivers
- **Playtime:** Up to 60 hours
- **Quick Charge:** 10 minutes for 5 hours playtime
- **Microphone:** Yes, with ENC (Environmental Noise Cancellation) for calls
- **Frequency Range:** 20 Hz - 20,000 Hz
- **Material:** Plastic, Memory Foam (ear cushions)
- **Water Resistance Level:** Waterproof
- **Item Weight:** 13.7 ounces (0.39 Kilograms)
- **Earpiece Shape:** Over Ear
- **Special Features:** One-Click Deep Bass, Gaming Mode (78ms low latency)

## WARRANTY AND SUPPORT

 
---

For warranty information or technical support, please contact wegear customer service. Details are typically provided on the product packaging or the official wegear website.

**Contact Information:** Refer to your product packaging or visit the official wegear website for the most up-to-date support contact details.

**Online Resources:** For additional FAQs and support, please visit the [wewear Store on Amazon](#).

## Related Documents - HS7

	<p><a href="#">wewear QT26 User Manual</a> User manual for the wegear QT26 Bluetooth headset, detailing specifications, compliance, and production information from Dongguan Hele Electronics Co., Ltd.</p>
	<p><a href="#">wewear TW6 True Wireless Stereo Earbuds User Manual</a> User manual for the wegear TW6 True Wireless Stereo Earbuds, covering setup, usage, and safety information.</p>
	<p><a href="#">Wewear MW16 Wireless Mouse User Manual</a> User manual for the Wewear MW16 Wireless Mouse, detailing setup and usage instructions.</p>
	<p><a href="#">EGNARO HS7 Wireless Headphones User Manual</a> Comprehensive user manual for EGNARO HS7 wireless headphones, covering function overview, instructions for use, pairing, precautions, packing list, and FCC compliance information.</p>
	<p><a href="#">wewear QT26 User Manual</a> User manual for the wegear QT26 Bluetooth headset, detailing specifications, compliance, and production information from Dongguan Hele Electronics Co., Ltd.</p>
	<p><a href="#">wewear TW6 True Wireless Stereo Earbuds User Manual</a> User manual for the wegear TW6 True Wireless Stereo Earbuds, covering setup, usage, and safety information.</p>