

[Manuals.plus](#) /

› [Ant Esports](#) /

› Ant Esports GP365 Pro Wireless Controller User Manual

## Ant Esports GP365 Pro

# Ant Esports GP365 Pro Wireless Controller User Manual

Model: GP365 Pro

## 1. PRODUCT OVERVIEW

---

The Ant Esports GP365 Pro is a versatile wireless controller designed for an immersive gaming experience across multiple platforms. It supports 2.4G wireless and wired connections, compatible with PC (X-Input & D-Input), PlayStation 3, and Android devices. Key features include Hall Effect magnetic triggers for superior accuracy and durability, dual vibration motors for haptic feedback, and a high-quality Li-Ion battery for extended gaming sessions.

# ERGONOMIC DESIGN

MATT FINISH GRIPS AND XBOX STYLE JOYSTICK PLACEMENT



Figure 1: Front view of the Ant Esports GP365 Pro Wireless Controller, showcasing its ergonomic design and button layout.

## Product Composition

The Gamepad features 16 keys:

- Directional Pad: UP, DOWN, LEFT, RIGHT
- Action Buttons: A, B, X, Y
- Shoulder Buttons: L1, R1
- Trigger Buttons: L2, R2 (Hall Effect)
- Function Buttons: SELECT, START, TURBO, HOME
- Analog Sticks: ANALOG (L3) and ANALOG (R3)

# 3-IN-1 WIRELESS GAMING CONTROLLER

SUPPORT FOR PC (X-INPUT & D-INPUT), PS3 AND ANDROID



PS3



ANDROID



PC



Figure 2: Side view of the controller, highlighting the shoulder and trigger buttons.



Figure 3: Back view of the controller, showing the textured grips and overall ergonomic shape.

## 2. SETUP AND CONNECTION

---

### Charging the Controller

Before first use, fully charge the controller. Connect the provided USB charging cable to the controller's USB port and to a standard 5V/1A or above charger, or a USB port on your computer.

- During charging, the LED indicator blinks slowly.
- When charging is complete, the LED indicator will be steady on.
- If the battery is low during operation, the LED indicator blinks quickly, signaling the need for charging.



		<p><b>PRODUCT IMAGE</b></p> 
<p><b>WARRANTY</b></p> <p>This Product Comes With 1 Year Warranty.</p> <p style="text-align: center;"><b>Warranty Card</b></p> <p>Customer Name : _____</p> <p>Product Name : _____ Model No. : _____</p> <p>Address : _____ Date of Purchase : _____</p> <p>Dealer Name : _____ Phone No. : _____</p>		<p style="text-align: center;"><b>User Manual &amp; Warranty Card</b></p>
<p style="text-align: center;"><b>CONNECT WITH US ON</b></p> <p style="text-align: center;"><b>ANT ESPORTS</b></p> <p style="text-align: center;">www.antesports.com support@antesports.com</p> <p style="text-align: center; font-size: small;">*Notice: Any alteration of the clauses and contents and copies are invalid.</p>	  <p style="text-align: center;">FC CE E</p>	<p><b>SPECIFICATIONS</b></p> <ul style="list-style-type: none"> <li>• USB Wireless Gamepad</li> <li>• Product Size -155 x 98 x 58 mm</li> <li>• 2.4GHz Wireless Connection (6m Range, Mini Dongle)</li> <li>• High-quality ABS Outer Shell</li> <li>• Dual Vibration Motors for Advanced Haptic Feedback</li> <li>• Two 3D Analog Joysticks</li> <li>• Built-in 500mAh Li-Ion Battery</li> <li>• With 0.8m Charging Cable</li> <li>• Built-in Turbo function</li> <li>• Hall Effect Triggers for better accuracy and longevity</li> <li>• Support for PS3, PC (X-Input, D-Input) and Android devices</li> </ul>
<p><b>1. PRODUCT DESCRIPTION</b></p> <p>The product can be connected via 2.4G wireless or wired mode, mainly supporting the devices of Android / PS3 / Switch / D-Input (PC) / X-Input (PC360).</p> <p><b>2. PRODUCT KEY COMPOSITION</b></p> <p>The Gamepad is composed of 18 keys: UP, DOWN, LEFT, RIGHT, A, B, X, Y, LB, RB, L3, R3, SELECT, START, LT, RT, TURBO, HOME(MODE) and two 3D sticks</p> <p><b>3. OPERATION</b></p> <p><b>2.4G WIRELESS MODE:</b> When it is used on PC, the default mode is X-Input (PC360) and the LED3 steady on, long press the "SELECT+START" combination keys for 3 seconds to switch to D-Input (PC) analog mode, LED1, LED2 steady on; Short press the HOME key to switch to D-Input (PC) digital mode, LED2 goes off and LED1 steady on. Long press again the "SELECT + START" combination keys for 3 seconds to switch between the two modes. When the Gamepad is used on PS3 console, it is plug and play, and PS3 console automatically distributes the corresponding LED indicator to display. When the Gamepad is used on SWITCH console, it is plug and play, and SWITCH console automatically distributes the corresponding LED indicator display. When the Gamepad is used on Android device, it is plug and play, and the LED2 steady on.</p> <p><b>USB WIRED MODE:</b> When it is used on PC through USB wired mode, the default mode is X-Input (PC360) and the LED3 steady on, long press the HOME key for 5 seconds to switch to D-Input (PC) analog mode, and LED1, LED2 steady on; Short press the HOME key to switch to D-Input (PC) digital mode, LED2 goes off and LED1 steady on, long press again the HOME key for 5 seconds to switch between the two modes. When using the Gamepad on PS3 console through USB wired mode, it is plug and play, and PS3 console automatically distributes the corresponding LED indicator to display. When using the Gamepad on Android device through USB wired mode, it is plug and play, and the LED2 steady on. When using the Gamepad on SWITCH console through USB wired mode, it is plug and play, and SWITCH console automatically distributes the corresponding LED indicator display.</p>	<p><b>TURBO SET:</b> Press and hold down the function key that you want to set, for example, the A key, and then press and hold down the Turbo key, then the A key has the acceleration shooting function. Cancel Turbo function: Press and hold down the key that has been set for acceleration, for example, the A key, and then press and hold down the Turbo key, then, the acceleration function of the A key is disabled. The key that can be set are: A, B, X, Y, L, ZL, R, ZR. The TURBO key is used to capture screens in SWITCH mode.</p> <p><b>4. POWER-ON/OFF, SLEEP</b> In the power-off state, press the Gamepad HOME button for 1 second to turn on the Gamepad, the four LED indicators blink to indicate search connection. If the device is not plugged in the USB dongle, the LED indicator will keep flashing, and the Gamepad will automatically shut down after 3 minutes. In the power-on state, Press the Gamepad HOME button for 5 seconds to turn off the Gamepad. In the online state, the Gamepad will automatically shut down after 10 minutes of no action, and the LED indicator will be off.</p> <p><b>5. LOW VOLTAGE ALARM</b> When the battery is low in the Gamepad working state, the LED4 indicator blinks quickly indicating that the battery is low.</p> <p><b>6. CHARGE THE BATTERY</b> In the power-off state, the LED4 indicator blinks slowly during the normal charging process, and the LED4 indicator is steady on when the charging is completed. When charging in the working state, the LED4 indicator light blinks slowly while charging, and the LED4 indicator light is steady on when charging is completed. [ Remark: Please use a charger with an output voltage 5V and current 1A or above or charge the Gamepad through the USB port on your computer.]</p> <p><b>7. RESET FUNCTION</b> When the Gamepad is abnormal, such as the button is incorrect, crash, and the connection cannot be connected, you can try to restart the Gamepad. <b>Reset way:</b> Press the Reset key next to the USB port to reset the Gamepad.</p>	<p><b>IN THE BOX</b></p> <p>Gamepad, USB Dongle, Manual, Charging Cable</p>

Figure 4: The controller connected for charging, illustrating the high-quality Li-Ion battery.

## Power On/Off/Sleep

- **To Power On:** Press the **HOME** button for 1 second. The four LED indicators will blink to indicate search for connection.
- If the device is not connected within 10 seconds, the Gamepad will automatically shut down.
- The Gamepad will automatically shut down after 5 minutes of inactivity.
- **To Power Off:** Press and hold the **HOME** button for 5 seconds.
- In idle state, the Gamepad will automatically shut down after 10 minutes of no action, and the LED indicator will be off.

## Wireless Connection (2.4G)

The controller connects wirelessly via a 2.4 GHz USB dongle, offering a range of up to 6 meters.

# HIGH QUALITY LI-ION BATTERY

allows for longer wireless gaming sessions



Figure 5: The controller with its 2.4 GHz wireless dongle, enabling a stable connection.

## PC (X-Input & D-Input)

- **X-Input Mode (PCX360):** This is the default wireless mode for PC. LED3 will be steady on.
- **To Switch to D-Input (PC Analog) Mode:** In X-Input mode, press and hold **SELECT + START** for 5 seconds. LED1, LED2, LED3, LED4 will blink quickly. Upon successful connection, LED1 and LED2 will turn off, and LED3 will be steady on.
- **To Switch Back to X-Input Mode:** Press and hold **SELECT + START** for 5 seconds again.

## PlayStation 3

When used with a PS3 console, the controller is plug-and-play. The PS3 console will automatically assign the corresponding LED indicator.

## Android Devices

When using the controller with an Android device via USB wireless mode, it is plug-and-play. The Android device will automatically assign the corresponding LED indicator.

## Wired Connection

The controller can also be used in wired mode by connecting it directly to your device with a USB cable.

### PC (X-Input & D-Input)

- **X-Input Mode (PCX360):** This is the default wired mode for PC. LED3 will be steady on.
- **To Switch to D-Input (PC Analog) Mode:** In wired mode, short press the **HOME** key. LED1, LED2, LED3, LED4 will blink quickly. Upon successful connection, LED1 and LED2 will turn off, and LED3 will be steady on.
- **To Switch Back to X-Input Mode:** Long press the **HOME** key for 5 seconds.

### PlayStation 3

When used with a PS3 console via USB wired mode, the controller is plug-and-play. The PS3 console will automatically assign the corresponding LED indicator.

### Android Devices

When using the controller with an Android device via USB wired mode, it is plug-and-play. The Android device will automatically assign the corresponding LED indicator.

## 3. OPERATING FUNCTIONS

---

### TURBO Function

The TURBO function allows a button to repeatedly register input when held down.

- **To Set TURBO:** Press and hold the desired function key (e.g., **A** key), then press the **TURBO** key. The TURBO function is now active for that key.
- **To Cancel TURBO:** Press the **TURBO** key again while holding the key for which TURBO was set. This disables the acceleration function for that specific key.
- Applicable keys for TURBO function: A, B, X, Y, L1, R1, L2, R2.

### Screen Capture / Switch Mode

The **TURBO** key also functions as a screen capture or mode switch button, depending on the connected platform.



Figure 6: Illustration of the dual vibration motors providing immersive haptic feedback.



Figure 7: Close-up of the L2/R2 Hall Effect magnetic triggers, designed for accuracy and durability.

## 4. MAINTENANCE

---

- Keep the controller dry. Avoid exposing it to moisture, humidity, or extreme temperatures.
- Clean the controller with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Store the controller in a safe place when not in use to prevent damage.
- Avoid dropping or subjecting the controller to strong impacts.

## 5. TROUBLESHOOTING

---

### Connection Issues / Unresponsive Buttons

If the controller experiences abnormal connection, incorrect button responses, or crashes, a reset may be required.

- **Reset Method:** Locate the reset key next to the USB port on the controller. Use a thin, pointed object (like a paperclip) to

press the reset button.

- After resetting, attempt to reconnect the controller to your device.

## Charging Issues

- Ensure the charging cable is securely connected to both the controller and the power source.
- Verify that the power source (charger or USB port) is functional.
- Try using a different USB charging cable or power adapter.

## 6. SPECIFICATIONS

---

<b>Brand</b>	Ant Esports
<b>Model Name</b>	GP365 Pro
<b>Compatible Devices</b>	Android, PC, Playstation 3
<b>Controller Type</b>	Gamepad
<b>Connectivity Technology</b>	2.4G Wireless, USB Wired
<b>Product Features</b>	Hall Effect Triggers, Dual Vibration, TURBO Function, Ergonomic Design, Xbox Style Joystick Placement
<b>Button Quantity</b>	16
<b>Hardware Platform</b>	PC
<b>Power Source Type</b>	Battery Powered (High Quality Li-Ion)
<b>Compatible Video Game Console Models</b>	Sony PlayStation 3
<b>Item Weight</b>	199 Grams
<b>Item Dimensions</b>	15.5 x 9.8 x 5.8 Centimeters
<b>Color</b>	Black Grey
<b>Wireless Range</b>	Up to 6 meters
<b>Charging Cable Length</b>	0.8 meters

## 7. WHAT'S IN THE BOX

---

- Ant Esports GP365 Pro Wireless Gamepad
- USB Dongle
- User Manual
- USB Charging Cable

## 8. WARRANTY AND SUPPORT

---

### Warranty Information

This product comes with a **1 Year Manufacturer Warranty** from the date of purchase.

## Customer Support

For further assistance, product information, or warranty claims, please contact Ant Esports support:

- **Website:** [www.antesports.com](http://www.antesports.com)
- **Email:** [support@antesports.com](mailto:support@antesports.com)
- **Additional Resources:** You can find more information and support by scanning the QR code or visiting <https://bit.ly/3S6slUw>.