

[Manuals.plus](#) /

› [Aigostar](#) /

› Aigostar 5.5 Liter Non-Stick Inner Pot for Panda Multi-Cooker Instruction Manual

Aigostar Panda Compatible Inner Pot

Aigostar 5.5 Liter Non-Stick Inner Pot for Panda Multi-Cooker Instruction Manual

Model: Panda Compatible Inner Pot

1. PRODUCT OVERVIEW

This manual provides essential information for the safe and effective use of your Aigostar 5.5 liter non-stick inner pot, designed exclusively for the Aigostar Panda multi-cooker. Please read these instructions carefully before first use and retain them for future reference.



Image 1.1: The Aigostar 5.5 liter non-stick inner pot, featuring a dark grey interior and exterior with a silver rim.

Key Features:

- **Non-Stick Interior:** This Aigostar inner pot features a high-quality non-stick coating, safe for food preparation. It is suitable for cooking rice, various meats, yogurt, and more.
- **Premium Quality:** The non-stick inner pot is BPA-free for food contact materials and manufactured without PFOA or PTFE, ensuring safe and high-quality cooking.
- **Easy to Clean:** The non-stick coating facilitates easy cleaning, eliminating the need for scrubbing. It is also dishwasher safe.
- **Precise Measurements:** The inner pot includes measurement markings to assist with precise ingredient measurement and ensure safe pressure cooking.
- **Compatibility Note:** This inner pot is exclusively compatible with the Aigostar Panda multi-cooker.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage to the product or injury, please observe the following safety guidelines:

- Always ensure the inner pot is correctly seated within the Aigostar Panda multi-cooker before operation.

- This inner pot is designed for use only with the Aigostar Panda multi-cooker. Do not attempt to use it with other appliances or on stovetops, induction cooktops, or in conventional ovens.
- Avoid using metal utensils, abrasive cleaners, or scouring pads that could scratch or damage the non-stick coating. Use wooden, silicone, or plastic utensils.
- Always allow the inner pot to cool down before cleaning or handling after cooking. Use oven mitts or heat-resistant gloves when handling a hot pot.
- Do not overfill the pot beyond the maximum fill line indicated by the markings to prevent overflow during cooking.
- Keep out of reach of children.
- Inspect the pot for any damage before each use. If damaged, discontinue use and replace.

3. SETUP

1. **Unpacking:** Carefully remove the inner pot from its packaging. Retain packaging for future storage or transport if needed.
2. **Initial Cleaning:** Before first use, wash the inner pot thoroughly with warm soapy water. Rinse completely and dry with a soft cloth.
3. **Placement:** Ensure the Aigostar Panda multi-cooker's heating element is clean and free of debris. Place the clean and dry inner pot securely into the multi-cooker's base. Ensure it sits flat and is properly centered.

Pentola Interna per Pentola a Pressione Solo per Aigostar Panda



Image 3.1: The Aigostar inner pot positioned next to the Aigostar Panda multi-cooker, illustrating its intended use.

4. OPERATING INSTRUCTIONS

The inner pot functions as the cooking vessel within your Aigostar Panda multi-cooker. Refer to your Aigostar Panda multi-cooker's instruction manual for specific cooking programs and settings.

1. **Add Ingredients:** Place your desired ingredients into the inner pot. Observe the measurement markings inside the pot to ensure you do not exceed the maximum fill line, especially for pressure cooking.
2. **Close Lid:** Once ingredients are added, place the lid onto your Aigostar Panda multi-cooker and secure it according to the multi-cooker's instructions.
3. **Select Program:** Choose the appropriate cooking program and settings on your Aigostar Panda multi-cooker.
4. **Cooking:** The inner pot will heat evenly to cook your food.
5. **Serving:** After cooking, carefully remove the inner pot from the multi-cooker using heat-resistant gloves. Serve food directly from the pot or transfer to a serving dish.



Image 4.1: A collage showing the Aigostar inner pot used for cooking various meals, including rice, stews, and curries, within the Aigostar Panda multi-cooker.

5. MAINTENANCE AND CLEANING

Proper care and cleaning will extend the life of your non-stick inner pot.

- **Cool Down:** Always allow the inner pot to cool completely before cleaning. Soaking with warm water can help loosen stuck-on food.
- **Hand Washing:** For best results and to preserve the non-stick coating, hand wash with warm soapy water and a soft sponge or cloth.
- **Dishwasher Safe:** The inner pot is dishwasher safe. Place it on the top rack if possible to prevent damage from other items.
- **Avoid Abrasives:** Do not use steel wool, abrasive scrubbers, or harsh chemical cleaners, as these can damage the non-stick surface.
- **Drying:** Dry the pot thoroughly after washing to prevent water spots.

- **Storage:** Store the inner pot in a dry place. Avoid stacking heavy items inside it that could scratch the coating.



Image 5.1: An infographic highlighting key features of the Aigostar inner pot, including its high-quality aluminum alloy, food-grade non-stick coating, robust construction, dishwasher-safe property, and heat resistance up to 900°C.

6. TROUBLESHOOTING

This section addresses common issues related to the inner pot. For issues related to the Aigostar Panda multi-cooker itself, please consult its dedicated instruction manual.

Problem	Possible Cause	Solution
Food sticking to the pot.	Non-stick coating damaged; improper cleaning; insufficient oil/liquid.	Ensure only non-abrasive utensils are used. Clean thoroughly after each use. Use a small amount of cooking oil if necessary. If coating is significantly damaged, consider replacement.

Problem	Possible Cause	Solution
Pot does not fit correctly in the multi-cooker.	Debris in the multi-cooker base; pot is not the correct model.	Check the multi-cooker's heating element for any food particles or obstructions. Confirm that this is the correct Aigostar 5.5L inner pot for the Panda multi-cooker.
Stains or discoloration on the pot.	Hard water deposits; certain food pigments.	These are usually cosmetic and do not affect performance. For hard water stains, a solution of vinegar and water can help, followed by thorough rinsing.

7. SPECIFICATIONS

Feature	Detail
Brand	Aigostar
Model Compatibility	Aigostar Panda Multi-Cooker
Capacity	5.5 Liters
Product Dimensions	23.8 x 23.8 x 15.7 cm (Length x Width x Height)
Coating Description	Non-stick (BPA-free, PFOA-free, PTFE-free)
Oven Safe	No
Suitable for Stovetop	No
Dishwasher Safe	Yes
Wattage (Multi-Cooker)	1000 watts (Note: This refers to the compatible Aigostar Panda multi-cooker's wattage)

Dimensione del Prodotto



Image 7.1: The Aigostar inner pot with its capacity (5.5L) and physical dimensions (23.8 cm diameter, 15.7 cm height) clearly indicated.



Image 7.2: Close-up views of the Aigostar inner pot, showing the internal measurement markings for cups and maximum fill level, as well as the non-stick interior and exterior base.

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or customer support, please refer to the documentation included with your original Aigostar Panda multi-cooker or visit the official Aigostar website. Keep your purchase receipt as proof of purchase.

Aigostar Official Website: www.aigostar.com

