

## Candy EY4061DW4/1-S

# Candy EY4061DW4/1-S Washing Machine User Manual

Model: EY4061DW4/1-S

## 1. INTRODUCTION

Thank you for choosing the Candy EY4061DW4/1-S Front Load Washing Machine. This appliance is designed to provide efficient and reliable laundry care for your home. This user manual contains important information on the installation, operation, maintenance, and troubleshooting of your washing machine. Please read it carefully before using the appliance and keep it for future reference.

## 2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Unplug the appliance before performing any maintenance or cleaning.
- Do not install or store the appliance where it will be exposed to temperatures below freezing or exposed to the weather.
- Do not use extension cords or adapters with this appliance.
- The appliance is equipped with an Aquastop safety system to prevent water overflow.
- This model includes a child lock feature for added safety.

## 3. INSTALLATION AND SETUP

The Candy EY4061DW4/1-S is a freestanding front-load washing machine. Proper installation is crucial for optimal performance and safety.

### **3.1 Unpacking**

Carefully remove all packaging materials. Check for any transport damage. Keep packaging materials out of reach of children.

### **3.2 Removing Transit Bolts**

Before use, remove all transit bolts located at the rear of the machine. These bolts secure the drum during transport and must be removed to prevent damage during operation. Store them for future transport if needed.

### **3.3 Positioning the Appliance**

Place the washing machine on a firm, level surface. Adjust the feet to ensure the appliance is stable and level. This helps to reduce vibration and noise during operation.



Figure 1: Angled view of the washing machine, showing its compact design suitable for freestanding installation.

### 3.4 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure all connections are tight to prevent leaks. Position the drain hose into a suitable drain pipe or sink, ensuring it is securely fixed to prevent displacement during draining.

### 3.5 Electrical Connection

Plug the power cord into a grounded electrical outlet (220-240V). Do not use extension cords or multi-plugs. Ensure the power cord is not trapped or crushed by the appliance.

## 4. OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Candy washing machine.



Figure 2: Front view of the washing machine, highlighting the control panel and door.

#### 4.1 Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine; the maximum capacity is 6 kg. Close the door firmly until it clicks shut.



Figure 3: The washing machine with its door open, revealing the stainless steel drum.

## 4.2 Adding Detergent

Pull out the detergent drawer. Add the appropriate amount of detergent and fabric softener to the designated compartments. Refer to your detergent packaging for recommended dosages.

## 4.3 Program Selection

Turn the program selector knob to choose your desired wash program. The machine offers 15 wash programs, including:

- 20°C
- Cotton
- Cotton 40°C
- Delicates/Silk
- Eco 40-60°C
- Hand/Wool
- Hygiene/Allergy Care
- Jeans/Denim
- Prewash
- Quick 30min
- Rinse

- Spin/Drain
- Synthetics

#### 4.4 Adjusting Settings

Use the control buttons to adjust settings such as spin speed (up to 1000 rpm) and temperature, if available for the selected program. This model features adjustable spin speed and temperature.

#### 4.5 Delay Start Function

The machine supports a delay start function of up to 9 hours. Press the delay start button repeatedly to set the desired delay time.

#### 4.6 Starting a Wash Cycle

Press the Start/Pause button to begin the wash cycle. The LED program indicator will illuminate to show the current stage of the cycle.

#### 4.7 Add Garment (Pause) Function

If you need to add forgotten garments during a cycle, press the Start/Pause button. Wait for the door to unlock (this may take a few minutes depending on water level and temperature), add the garments, and then close the door and press Start/Pause again to resume.

### 5. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and efficiency of your washing machine.

#### 5.1 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

#### 5.2 Cleaning the Detergent Drawer

Periodically remove and clean the detergent drawer under running water to prevent detergent residue buildup.

#### 5.3 Drum Cleaning (Autoclean Function)

This model features an autoclean function for the drum. Run this program regularly (e.g., once a month) to remove detergent residues and prevent odors. Consult the control panel for how to activate the drum clean cycle.

#### 5.4 Cleaning the Filter

The filter should be cleaned regularly to prevent blockages. Refer to the appliance's specific instructions for accessing and cleaning the filter, usually located at the bottom front of the machine.

### 6. TROUBLESHOOTING

Before contacting customer service, try the following solutions for common issues:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Door not closed properly; Program not selected; Start button not pressed.	Check power connection; Ensure door is latched; Select a program; Press Start/Pause button.
No water intake	Water tap closed; Water inlet hose kinked; Water supply interrupted.	Open water tap; Straighten hose; Check water supply.
Machine vibrates excessively	Transit bolts not removed; Appliance not level; Uneven load.	Remove transit bolts; Adjust leveling feet; Redistribute laundry in the drum.
Water leakage	Hose connections loose; Detergent drawer clogged; Drain hose improperly positioned.	Tighten hose connections; Clean detergent drawer; Secure drain hose.
Excessive foam	Too much detergent used.	Reduce detergent quantity. The machine has a foam control system.

## 7. TECHNICAL SPECIFICATIONS

Feature	Specification
Appliance Placement	Freestanding
Loading Type	Front-load
Product Color	White
Built-in Display	No
Control Type	Buttons, Rotary knob
Door Hinge	Left
Inverter Technology	No
Drum Material	Stainless steel
Drum Volume	48 L
Basket Capacity	6 kg
Maximum Spin Speed	1000 RPM
Spin-drying Efficiency Class	C
Number of Wash Programs	15
Noise Emission Class	C
Noise Level (Spin)	77 dB
Delay Start	Yes (up to 9 hours)



Feature	Specification
Water Overflow Protection System	Yes
Load Balancing System	Yes
Aquastop Safety System	Yes
Foam Control System	Yes
Cycle Duration (max)	198 min
Rinse Function	Yes
Adjustable Spin Speed	Yes
Adjustable Temperature	Yes
Add Garment (Pause) Function	Yes
Remote Smartphone Support	No
Wi-Fi Controlled	No
Child Protection	Yes
Self-cleaning (Autoclean)	Yes
Remaining Time Indicator	No
LED Program Indicator	Yes
Energy Efficiency Class	B (Scale A to G)
Energy Consumption (100 cycles)	49 kWh
Water Consumption (per cycle)	40 L
AC Input Voltage	220-240 V
Width	600 mm
Depth	480 mm
Height	850 mm
Weight	60 kg



Figure 4: Energy efficiency label, indicating Class B rating.

## 8. WARRANTY AND SUPPORT

8.1 Warranty Information





This product is covered by a manufacturer's warranty. For specific details regarding warranty terms and conditions, please refer to the warranty card included with your appliance or visit the official Candy website. Keep your proof of purchase for warranty claims.


8.2 Customer Support

If you encounter any issues not covered in the troubleshooting section or require technical assistance, please contact Candy customer support. Contact details can typically be found on the manufacturer's website or in the documentation provided with your appliance.

For returns or issues related to your purchase from Amazon, please refer to Amazon's return policy. If you received a defective or damaged product, consult Amazon's help page on returns and refunds. For specific information on purchases made through the Marketplace, consult the relevant help page.

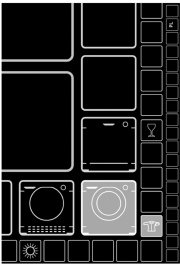Related Documents - EY4061DW4/1-S

	<p><a href="#">Instrukcja obsługi pralki Candy</a></p> <p>Szczegółowa instrukcja obsługi dla pralki Candy, zawierająca informacje o instalacji, bezpiecznym użytkowaniu, programach, konserwacji i rozwiązywaniu problemów.</p>
	<p><a href="#">Candy CSTG282DE/1-S 8kg Smart Top-Load Washing Machine</a></p> <p>Discover the Candy CSTG282DE/1-S, an 8kg top-load washing machine with 1200 RPM spin speed and Class D energy efficiency. Features Smart Touch NFC technology, Mix Power System+, Gentle Touch Opening, and 16 versatile programs for optimal laundry care.</p>
	<p><a href="#">Candy GVW 364TC Washer Dryer: Features and Specifications</a></p> <p>Discover the Candy GVW 364TC, a space-saving washer dryer with a 6kg wash capacity, 4kg drying capacity, and 1300 RPM spin speed. This guide details its features, programs, performances, and technical specifications.</p>
	<p><a href="#">Candy HE 1294TWM6/1-S Ultra Hygiene Washing Machine Specifications</a></p> <p>Detailed specifications for the Candy HE 1294TWM6/1-S Ultra Hygiene washing machine, including features, technical characteristics, energy efficiency, and dimensions.</p>

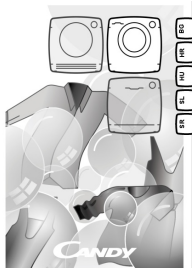

### [Candy Перална Машина: Пълно Ръководство за Безопасна и Ефективна Употреба](#)

Открийте как да използвате вашата нова Candy перална машина безопасно и ефективно с това изчерпателно ръководство. Включва инструкции за инсталация, поддръжка, програми и съвети за пестене на енергия и вода.



### [Candy Bianca Washing Machine User Manual and Guide](#)

Comprehensive user manual for the Candy Bianca washing machine, covering installation, operation, maintenance, troubleshooting, and program details for optimal use and care.