

Salter EK2408

Salter One Cup Coffee Machine

Model: EK2408

INTRODUCTION

Thank you for choosing the Salter One Cup Coffee Machine. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new coffee maker. Please read these instructions thoroughly before first use and keep them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycle.
- This appliance is not dishwasher safe.

COMPONENTS

Familiarize yourself with the parts of your Salter One Cup Coffee Machine:

- Water Reservoir
- Lid
- Filter Basket
- Reusable Filter
- Brewing Outlet
- Power Button with Indicator Light
- Drip Tray
- 420ml Stainless Steel Travel Mug with Lid



Image: The Salter One Cup Coffee Machine shown with its included stainless steel travel mug. The machine is compact and black with a silver band, and the mug is silver with a black lid and grip.



Image: The Salter One Cup Coffee Machine with the travel mug in place, sitting on a kitchen counter next to a wooden cutting board and other kitchen items.

BEFORE FIRST USE

Before using your coffee machine for the first time, it is recommended to clean all removable parts and run a brewing cycle with water only to flush the system.

1. Wash the reusable filter, travel mug, and mug lid in warm, soapy water. Rinse thoroughly and dry.
2. Fill the water reservoir with clean water up to the MAX fill line (430ml).
3. Place the reusable filter into the filter basket. Do not add coffee at this stage.
4. Place the travel mug (without its lid) on the drip tray.
5. Close the lid of the coffee machine.
6. Plug the coffee machine into a suitable power outlet.
7. Press the power button to start a brewing cycle. The indicator light will illuminate.
8. Allow the machine to complete the cycle, dispensing all the water into the mug.

9. Discard the hot water and unplug the machine. Allow it to cool down.

OPERATING INSTRUCTIONS: MAKING COFFEE

Follow these steps to brew a fresh cup of coffee:

1. Ensure the coffee machine is unplugged and cool.
2. Open the lid of the coffee machine.
3. Place the reusable filter into the filter basket.
4. Add your desired amount of ground coffee or a coffee pod into the reusable filter. **Do not overfill.**



Image: A spoon is shown pouring ground coffee into the reusable filter of the coffee machine, demonstrating how to add coffee.

5. Fill the water reservoir with fresh, cold water up to the 430ml MAX fill line.
6. Close the lid securely.
7. Place the 420ml stainless steel travel mug (without its lid) or a standard coffee cup on the drip tray.



Image: The Salter One Cup Coffee Machine is shown brewing coffee into a white standard coffee cup, illustrating its versatility.

8. Plug the coffee machine into a suitable power outlet.
9. Press the power button. The indicator light will illuminate, and brewing will begin.



Image: A hand is shown pressing the power button on the side of the Salter One Cup Coffee Machine, indicating the start of the brewing process.

10. The brewing process typically takes 3-4 minutes. The machine will automatically turn off once the water reservoir is empty.
11. Once brewing is complete, unplug the machine. Carefully remove the mug.
12. If using the travel mug, secure its lid before taking it on the go.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your coffee machine.

Daily Cleaning:

1. Always unplug the coffee machine and allow it to cool completely before cleaning.
2. Remove the reusable filter and discard used coffee grounds. Rinse the filter under running water.
3. Wash the reusable filter, travel mug, and mug lid in warm, soapy water. Rinse thoroughly and dry.



Image: A hand is shown removing the lid from the stainless steel travel mug, indicating it's ready for cleaning or use.

4. Wipe the exterior of the coffee machine with a soft, damp cloth. Do not use abrasive cleaners or immerse the machine in water.
5. Clean the drip tray and its cover.

Descaling:

Mineral deposits (limescale) can build up in your coffee machine over time, affecting performance. Descale your machine every 2-3 months, or more frequently if you have hard water.

1. Prepare a descaling solution according to the descaler manufacturer's instructions, or use a mixture of white vinegar and water (1:2 ratio).
2. Pour the descaling solution into the water reservoir.
3. Place an empty mug on the drip tray.
4. Run a brewing cycle with the descaling solution.
5. After the cycle, discard the solution.
6. Rinse the reservoir thoroughly with fresh water.
7. Run 2-3 cycles with fresh water only to flush out any remaining descaling solution.

TROUBLESHOOTING

If you encounter issues with your coffee machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee does not brew.	No water in reservoir; Machine not plugged in; Power button not pressed.	Fill reservoir; Plug in machine; Press power button.
Coffee tastes weak.	Not enough coffee grounds; Coffee too coarsely ground; Too much water.	Add more coffee; Use finer ground coffee; Use correct water amount.
Coffee overflows.	Too much coffee grounds; Filter clogged; Mug too small.	Reduce coffee grounds; Clean filter; Use the included travel mug or a suitable size cup.
Brewing is slow.	Limescale buildup.	Descale the machine as per instructions.

SPECIFICATIONS

Key technical details for the Salter One Cup Coffee Machine:

- **Model Number:** EK2408
- **Power:** 700W
- **Dimensions (D x W x H):** 17.5 x 13 x 24.5 cm
- **Weight:** 1.14 kg
- **Water Reservoir Capacity:** 430 ml
- **Travel Mug Capacity:** 420 ml
- **Filter Type:** Reusable
- **Compatible Coffee:** Ground coffee, coffee pods
- **Material:** Metal (main body), Stainless Steel (travel mug)
- **Special Features:** Reusable filter, Travel mug included
- **Power Source:** AC adapter (EU Plug)
- **Country of Origin:** China

WARRANTY AND SUPPORT

Salter products are designed to meet high-quality standards. For warranty information, technical support, or to purchase replacement parts, please refer to the contact details provided with your purchase or visit the official Salter website. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question