

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [T-Fal](#) /
- › T-fal Compact Sandwich Maker SM155DU0 Instruction Manual

T-Fal SM155DU0

T-fal Compact Sandwich Maker SM155DU0 Instruction Manual

Brand: T-Fal | Model: SM155DU0

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the safe and efficient operation of your T-fal Compact Sandwich Maker. Designed for simplicity, this appliance allows for quick preparation of various sandwiches. Its PTFE nonstick coating plates facilitate easy cleaning, and its compact design with vertical and cord storage ensures convenient placement in any kitchen.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

- Do not use appliance for other than intended household use.

3. PRODUCT FEATURES

- **Ultra Compact Design:** Easy-to-store sandwich maker that saves space with vertical storage.
- **Convenient Handling:** Features a carry handle for easy transport and integrated space underneath to store the cord.
- **Non-Stick Coating:** Equipped with PTFE nonstick plates for quick and easy cleanup after use.
- **Indicator Light:** A clear indicator light signals when preheating is complete and the sandwich maker is ready for use.
- **Safety Features:** Includes a safety lock button and an insulated handle to ensure safe operation during every use.

4. SETUP

1. **Unpack the Appliance:** Carefully remove the sandwich maker and all accessories from its packaging. Dispose of packaging materials responsibly.
2. **Initial Cleaning:** Before first use, wipe the non-stick cooking plates with a damp cloth or sponge. Dry thoroughly.
3. **Positioning:** Place the sandwich maker on a clean, dry, stable, and heat-resistant surface, away from walls and curtains to ensure proper ventilation.
4. **Power Connection:** Unwind the power cord and plug the appliance into a suitable electrical outlet.

5. OPERATING INSTRUCTIONS

1. **Preheating:** Close the sandwich maker and plug it into the power outlet. The indicator light will illuminate, signaling that the appliance is preheating.
2. **Ready to Use:** Once the sandwich maker reaches the optimal cooking temperature, the indicator light will turn off (or change color, depending on the model), indicating it is ready for use.
3. **Placing Ingredients:** Open the sandwich maker using the cool-touch handle. Place your bread and fillings onto the bottom cooking plate. Do not overfill.
4. **Cooking:** Carefully close the lid and engage the safety lock button. The indicator light may re-illuminate during cooking.
5. **Monitoring:** Cook for approximately 2-5 minutes, or until your sandwich is golden brown and the cheese is melted. Cooking time may vary based on ingredients and desired crispness.
6. **Removing Sandwiches:** Once cooked, open the lid and carefully remove the sandwiches using a heat-resistant plastic or wooden spatula to avoid damaging the non-stick coating.
7. **Switching Off:** Unplug the appliance from the power outlet after use.

READY INDICATOR LIGHT
Shows when it's preheated
and ready to use

T-fal
Ultra compact



Image: The indicator light signals when the sandwich maker is preheated and ready for use.



FAST & DELICIOUS
Enjoy 4 tasty sandwiches
in 3 minutes

Image: The T-fal Compact Sandwich Maker in use, preparing delicious sandwiches.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your sandwich maker.

1. **Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Wipe Plates:** Use a soft, damp cloth or sponge to wipe the non-stick cooking plates. For stubborn food residue, a small amount of mild dish soap can be used. Avoid abrasive cleaners or scouring pads, as these can damage the non-stick coating.
3. **Exterior Cleaning:** Wipe the exterior of the appliance with a damp cloth. Do not immerse the appliance in water or any other liquid.
4. **Cord Storage:** Once clean and dry, wrap the power cord around the designated storage area for neat keeping.



Image: Cleaning the non-stick plates of the T-fal Compact Sandwich Maker is simple and quick.

7. TROUBLESHOOTING

If you encounter issues with your T-fal Compact Sandwich Maker, please refer to the following common solutions:

- **Appliance not heating:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the outlet is functional by plugging in another appliance.
- **Food sticking to plates:** Ensure the non-stick plates are clean and free from residue. Lightly grease the plates with cooking spray or butter before adding ingredients, if desired.
- **Uneven cooking:** Ensure the lid is fully closed and the safety lock is engaged during cooking. Avoid overfilling the sandwich maker, which can prevent even contact with the heating plates.

For persistent issues, please contact customer support.

8. SPECIFICATIONS

- **Brand:** T-Fal

- **Model Number:** SM155DU0
- **UPC:** 010942228790
- **Special Feature:** Non-Stick Coating
- **Color:** Black and Stainless Steel
- **Material:** Stainless Steel
- **Product Dimensions:** 10.41"D x 10.24"W x 4.72"H
- **Wattage:** 625 watts
- **Item Weight:** 2.87 pounds
- **Included Components:** Indicator Light
- **Number of Settings:** 1
- **Manufacturer:** Groupe SEB



Image: Product dimensions for the T-fal Compact Sandwich Maker.

COMPACT & EASY TO STORE
Lightweight design to fit
anywhere



Image: The compact design allows for convenient vertical storage.

9. WARRANTY AND SUPPORT

This T-fal Compact Sandwich Maker is covered by a manufacturer's warranty. For specific warranty details, including duration and coverage, please refer to the warranty card included with your purchase or visit the official T-Fal website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact T-Fal customer service. Contact information can typically be found on the product packaging or the official brand website.