

[Manuals.plus](#) /

› [Gemmy](#) /

› Gemmy Orchestra of Light 24 LED Multi-Function Multicolor 18-inch Hanging Snowflake User Manual

Gemmy 883105

Gemmy Orchestra of Light 24 LED Multi-Function Multicolor 18-inch Hanging Snowflake User Manual

Model: 883105

1. INTRODUCTION

This manual provides essential information for the safe and effective operation of your Gemmy Orchestra of Light 24 LED Multi-Function Multicolor 18-inch Hanging Snowflake. Please read this manual thoroughly before installation and use, and retain it for future reference.



Image 1.1: The 18-inch LED snowflake illuminated with various colors, showcasing its multi-functionality.

2. SAFETY INFORMATION

WARNING:

To reduce the risk of fire, electric shock, or injury to persons, observe the following:

- Read all instructions before using this product.
- Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or tacks.
- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- This is an electrical product, not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire

insulation.

- Do not cover the product with cloth, paper, or any material not part of the product when in use.
- This product is equipped with a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. Do not alter or replace the plug.

3. PACKAGE CONTENTS

- 1 x Gemmy Orchestra of Light 18-inch Hanging Snowflake (Model: 883105)
- 1 x Power Cord (5.5-ft white cord)

Note: The Orchestra of Lights Indoor WiFi Hub is **NOT** included and is required for full functionality. It is sold separately.

4. SETUP INSTRUCTIONS

1. **Unpack the Snowflake:** Carefully remove the snowflake from its packaging. Inspect for any damage.
2. **Choose a Location:** Select a suitable indoor or outdoor location for hanging. Ensure the location is protected from extreme weather conditions and has access to a power outlet. The snowflake is designed for outdoor use.
3. **Hang the Snowflake:** Use the integrated hanging loop/cord to securely suspend the snowflake. Ensure it is hung at a height where it will not be easily disturbed or damaged.



Image 4.1: The LED snowflake hanging from a snow-covered branch in an outdoor setting, demonstrating typical placement.

4. **Connect to Power:** Plug the 5.5-ft white power cord into a standard electrical outlet. Ensure the outlet is suitable for outdoor use if placed outdoors (e.g., GFCI protected).



Image 4.2: A polarized plug, illustrating the connection method for the power cord.

5. **Connect to Orchestra of Lights Hub (Required for App Control):** If you intend to use the app control and synchronization features, ensure your Orchestra of Lights Indoor WiFi Hub is set up and connected to your home network. Refer to the Hub's instruction manual for setup details.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

Once plugged in, the snowflake will illuminate with a default light pattern. To access its full range of features, including hundreds of color and effect combinations, app control is required.

5.2 App Control and Synchronization

- 1. Download the App:** Download the free "Orchestra of Lights" app from your smartphone's app store (available for iOS and Android).
- 2. Connect to Hub:** Open the app and follow the on-screen instructions to connect to your Orchestra of Lights Indoor WiFi Hub.
- 3. Add Snowflake:** Within the app, add your 18-inch Hanging Snowflake to your Orchestra of Lights setup. The app will guide you through the process of discovering and pairing the device.
- 4. Customize Effects:** Use the app to select from dozens of color and lighting effects. You can customize patterns, colors, and brightness.
- 5. Synchronize:** The snowflake will synchronize with other Orchestra of Lights products connected to the same hub, creating a unified light show.

5.3 Music and Beat Detection (Optional)

To enjoy music and beat detection features (6 built-in holiday songs or your own music via Bluetooth), at least one Orchestra of Lights product with speaker capability (e.g., Projection Set With Speaker or Universal Virtuoso Speaker) is required. This snowflake itself does not have speaker capabilities.

6. MAINTENANCE

- Cleaning:** Disconnect from power before cleaning. Wipe the snowflake with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Storage:** When not in use, store the snowflake in its original packaging or a protective container in a cool, dry place, away from direct sunlight and moisture.
- Inspection:** Periodically inspect the power cord and the snowflake for any signs of damage, such as frayed wires or cracked plastic. Do not use if damaged.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Snowflake does not light up.	Not plugged in; power outage; faulty outlet; damaged cord.	Ensure plug is fully inserted. Check power supply. Test outlet with another device. Inspect cord for damage.
Cannot control with app.	Hub not connected; snowflake not paired; app issue.	Ensure Orchestra of Lights Hub is powered and connected to Wi-Fi. Follow app instructions to pair the snowflake. Restart app and/or phone.
Lights are not synchronizing.	Snowflake not added to the same group/scene in the app as other devices.	Verify all Orchestra of Lights products are correctly configured and grouped within the app.

8. SPECIFICATIONS

Model: 883105

Brand: Gemmy

Product Type: Hanging LED Snowflake

Dimensions: 18 inches (Length)

Light Source: 24 LED lights

Light Color: Multicolor

Special Features: Color Changing, App Controlled

Indoor/Outdoor Usage: Outdoor

Power Source: Electric

Cord Length: 5.5 ft

Voltage: 12 Volts

Material: Plastic

Item Weight: 5 pounds

Control Method: App (requires Orchestra of Lights Indoor WiFi Hub, sold separately)

UPC: 191245831051

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Gemmy website. Keep your proof of purchase for warranty claims.

For further assistance, contact Gemmy customer service.