

[Manuals.plus](#) /

› [Play-Doh](#) /

› Play-Doh Sizzlin' Grill Playset (Model G0500) Instruction Manual

Play-Doh G0500

Play-Doh Sizzlin' Grill Playset Instruction Manual

Model: G0500

1. SAFETY INFORMATION

WARNING: CHOKING HAZARD – Small parts may be generated. Not for children under 3 years.

Play-Doh compound contains wheat. Not intended to be eaten.

2. PACKAGE CONTENTS

Before beginning, ensure all components are present:

- Grill playset
- 3 Play-Doh food stampers
- Pretend burger and hot dog buns
- Decorating tool
- Spatula
- Tongs
- 2 Cups
- 2 Plates
- 2 Forks
- 2 Knives
- Roller
- 10 cans of Play-Doh Brand Modeling Compound (total 20 oz/567 g)



Image: The complete Play-Doh Sizzlin' Grill Playset with all included accessories and Play-Doh cans.

3. SETUP INSTRUCTIONS

1. **Unpack the Playset:** Carefully remove all components from the packaging.
2. **Battery Installation:** Locate the battery compartment on the grill playset. Insert 3 AA batteries (not included) according to the polarity indicators. Securely close the battery compartment.
3. **Assemble the Grill:** The grill playset requires no assembly. Ensure the grill lid opens and closes smoothly.



Image: A child interacting with the Play-Doh Sizzlin' Grill Playset, demonstrating its size and features.

4. OPERATING INSTRUCTIONS

Follow these steps to use your Play-Doh Sizzlin' Grill Playset:

1. **Create Play-Doh Food:** Use the included Play-Doh compound and various stampers (e.g., burger, hot dog, shrimp, vegetables) to create pretend food items.
2. **Activate Lights and Sounds:** Open the grill lid. Press the red button on the front panel of the grill to activate the glowing grill grate and sizzling sound effects.
3. **Grill Marks Feature:** Place a Play-Doh food creation onto the center of the grill grate. Close the grill lid firmly. Open the lid to reveal realistic pretend grill marks on your Play-Doh food.
4. **Use Accessories:** Employ the spatula and tongs to handle your Play-Doh creations. The decorating tool can be used to add toppings or details to your food.
5. **Serve:** Use the plates, cups, forks, and knives to serve your pretend BBQ meal.



Image: Applying grill marks to Play-Doh food.



Image: Activating the sizzling lights and sounds.



Image: The grill mark stamping mechanism inside the lid.



Image: Using the Play-Doh decorating tool.

Official Product Video

Your browser does not support the video tag.

Video: An official demonstration of the Play-Doh Sizzlin' Grill Playset features, including lights, sounds, and creating Play-Doh food.

5. MAINTENANCE

- **Cleaning Play-Doh:** To clean Play-Doh compound from surfaces, allow it to dry completely, then scrape it off. For fabric, allow to dry, then brush off. If necessary, wash with mild soap and cold water.
- **Inkpad Care:** The inkpad for grill marks can be closed by an adult if desired, allowing for play without the grill mark feature.
- **Storage:** Store Play-Doh compound in its airtight containers after use to prevent drying. Store the playset and accessories in a clean, dry place.

6. TROUBLESHOOTING

- **Lights and Sounds Not Working:** Ensure 3 AA batteries are correctly installed and are not depleted. Replace batteries if necessary.
- **Play-Doh Drying Out:** If Play-Doh compound becomes dry, add a few drops of water and knead it to restore its softness.
- **Grill Marks Not Appearing:** Ensure the Play-Doh food is placed directly on the designated area and the lid is pressed down firmly.

7. SPECIFICATIONS

Feature	Detail
Brand Name	Play-Doh
Model Number	G0500

Manufacturer	Hasbro
Age Range	3+ Years
Power Source	Battery (3 AA batteries required, not included)
Material Type	Plastic
Item Dimensions	5.24 x 22.01 x 15.98 inches
Item Weight	3.58 Kilograms
Included Components	Grill playset, 3 play food stampers, pretend burger and hot dog buns, decorating tool, spatula, tongs, 2 cups, 2 plates, 2 forks, 2 knives, roller, and 10 cans of Play-Doh Brand Modeling Compound (total 20 oz/567 g).

8. WARRANTY AND SUPPORT

This product is covered by a **1 Year Manufacturer Warranty**. For any product inquiries or support, please refer to the contact information provided on the product packaging or visit the official Play-Doh website.