

## TVON TV Stand for Bedroom

# TVON Swivel Floor TV Stand Instruction Manual

Model: TV Stand for Bedroom

## 1. INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, and maintenance of your TVON Swivel Floor TV Stand. This stand is designed to support most 32-60 inch flat or curved screen televisions weighing up to 88 lbs (40 kg). It features a swivel mount, height adjustment, and an elegant wooden base for stability and aesthetic integration into various living spaces.

Please read this manual thoroughly before beginning assembly to ensure correct installation and safe operation.

## 2. SAFETY INFORMATION

---

**WARNING:** Failure to read and follow all instructions may result in personal injury or damage to the product or property.

- Do not exceed the maximum weight capacity of 88 lbs (40 kg).
- Ensure your TV's VESA pattern is compatible with the stand (Min: 100x100mm, Max: 400x400mm).
- This product is intended for indoor use only.
- Always use two people to lift and position the television during assembly.
- Verify that all screws are securely tightened before use. Do not overtighten screws.
- Keep children and pets away from the assembly area.
- Place the TV stand on a level and stable surface.
- Regularly check the stand for any signs of wear or damage.

## 3. PACKAGE CONTENTS

---

Please verify that all components are present and undamaged before proceeding with assembly. If any parts are missing or damaged, contact customer support.

- Wooden Base
- Main Support Column

- TV Mounting Bracket
- Base Feet Supports (pre-attached or separate)
- Hardware Kit (various screws, washers, spacers for TV and stand assembly)
- Cable Management Ties
- Instruction Manual

## 4. SPECIFICATIONS

Feature	Detail
Brand	TVON
Model Number	TV Stand for Bedroom
Material	Alloy Steel, Wood
Color	BLACK
TV Size Compatibility	32-60 inches
Maximum Weight Capacity	88 lbs (40 kg)
VESA Compatibility	Min: 100x100mm, Max: 400x400mm
Swivel Range	±35° (70° total)
Height Adjustment	51.7 inches to 54 inches (3 levels)
Base Dimensions	16.7 inches x 12.2 inches (approx.)
Product Dimensions	17.3 x 14.4 x 37.9 inches (assembled, without TV)
Item Weight	14.7 pounds

## 5. COMPATIBILITY CHECK

Before assembly, ensure your television meets the following criteria:

- **TV Size:** Your TV screen size must be between 32 and 60 inches.
- **TV Weight:** Your TV must weigh no more than 88 lbs (40 kg).
- **VESA Pattern:** Check the four mounting holes on the back of your TV. Measure the horizontal and vertical distance between these holes. This is your VESA pattern. It must be between 100x100mm and 400x400mm. Common VESA patterns include 100x100, 200x100, 200x200, 300x200, 300x300, 400x200, 400x300, and 400x400mm.

# Wide Compatibility



Image: Compatibility diagram illustrating supported TV sizes (32-60 inches), maximum weight (88 lbs), and VESA patterns (100x100mm to 400x400mm).

## 6. ASSEMBLY INSTRUCTIONS

---

Follow these steps carefully for proper assembly. It is recommended to have a second person assist during certain steps, especially when handling the television.

### Step 6.1: Prepare the Base

Place the wooden base on a clean, flat surface. Identify the pre-attached base feet supports. These supports can be folded out to enhance stability or folded in to allow the stand to be placed closer to a wall.

# Innovative Safety Base Design

✔ Space saving

✔ Drill-Free Assembly



Supporting Foot & Non-Slip Pads



Easily Folded Feet Support Closer to the Wall



Image: Close-up of the base showing supporting feet and non-slip pads, with an illustration of how the feet can be folded for wall proximity.

Ensure the non-slip pads are securely attached to the bottom of the base feet to prevent scratches and provide additional stability.



Image: Detailed view of the wooden base, highlighting its thickness, non-slip feet, compact footprint, and integrated cable management solution.

### Step 6.2: Attach the Main Support Column

Secure the main support column to the center of the wooden base using the provided screws and tools from the hardware kit. Ensure the column is firmly attached and upright.

### Step 6.3: Install the TV Mounting Bracket

Attach the TV mounting bracket to the top of the main support column. Use the designated screws and ensure it is oriented correctly for your TV's VESA pattern.

### Step 6.4: Attach the TV to the Bracket

With assistance, carefully lift your television and align its VESA mounting holes with the bracket. Use the appropriate screws, washers, and spacers from the hardware kit to secure the TV to the bracket. Ensure the TV is centered and level.

### Step 6.5: Cable Management

Utilize the integrated cable management system on the main support column. Gather all TV and device cables and route them neatly along the column using the provided cable ties. This helps maintain an organized appearance and prevents tripping hazards.

## 7. OPERATING INSTRUCTIONS

### 7.1: Swivel Function

The TV mount allows for a  $\pm 35^\circ$  swivel range (70° total). Gently push the sides of your television to adjust the viewing angle. Avoid forcing the swivel beyond its intended range.

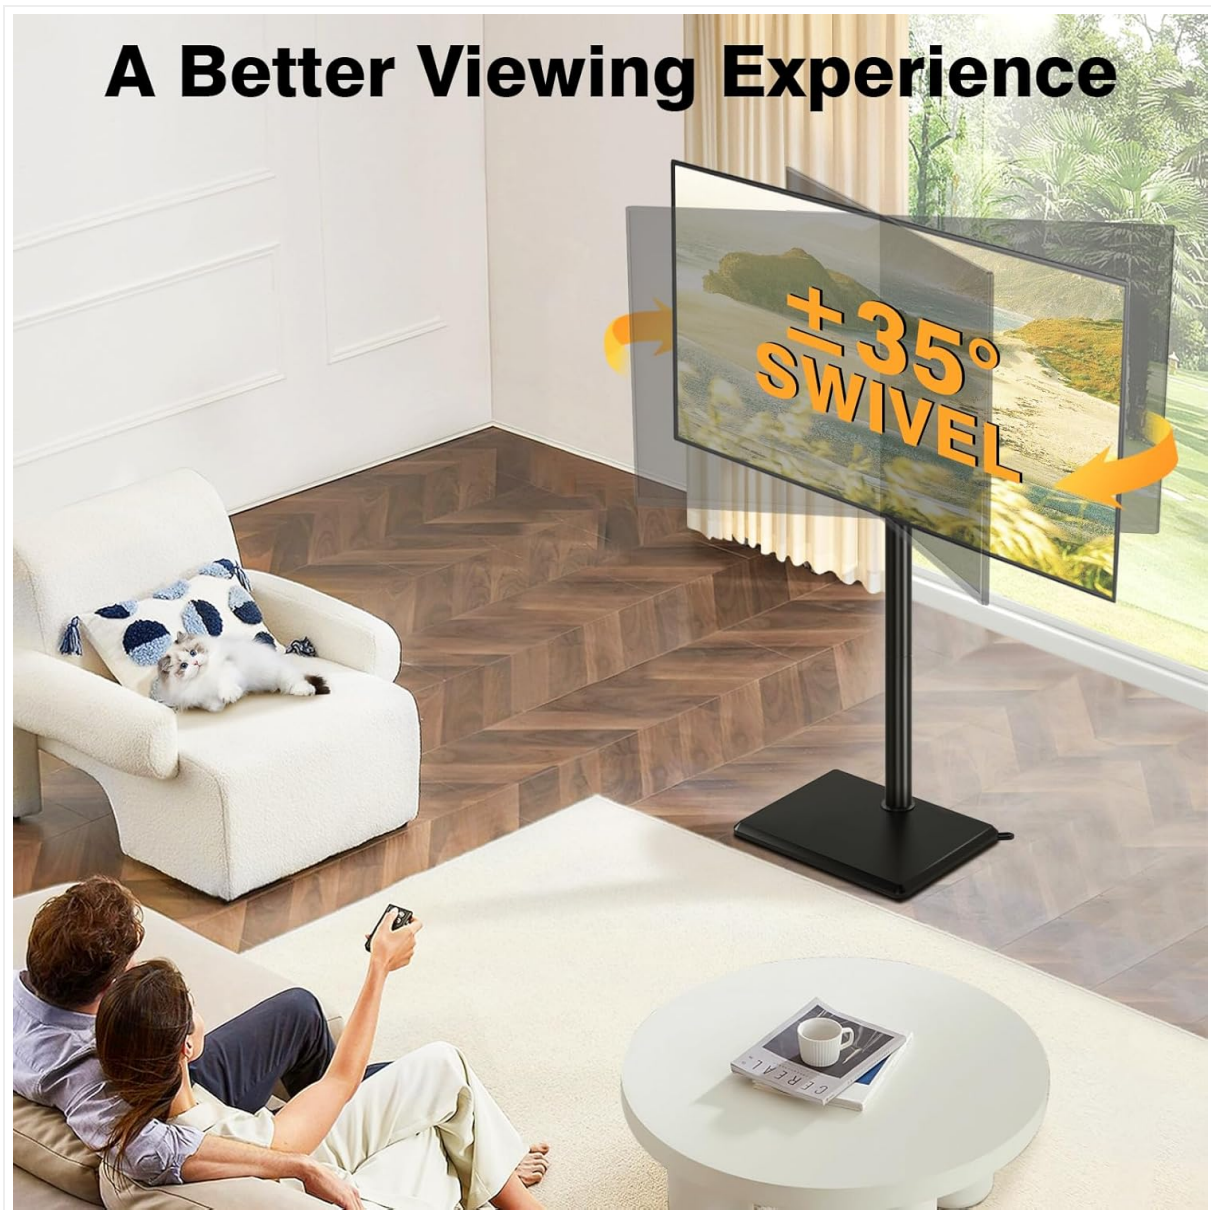


Image: Diagram showing the television swiveling left and right by 35 degrees from the center position.

### 7.2: Height Adjustment

The TV stand offers three height adjustment levels, ranging from 51.7 inches to 54 inches. To adjust the height, you may need to temporarily remove the TV from the bracket and reposition the bracket on the main support column to the desired height setting. Refer to the assembly instructions for re-attaching the TV.

# Height Adjustable

## Optional Height for Your Needs



Image: Illustration demonstrating the adjustable height feature, with measurements indicating the minimum (51.7") and maximum (54") heights.

## 8. MAINTENANCE

---

To ensure the longevity and proper function of your TVON Swivel Floor TV Stand, follow these maintenance guidelines:

- **Cleaning:** Wipe the stand with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary, but do not overtighten.
- **Stability:** Ensure the stand remains on a level surface. If moved, re-verify stability before placing the TV back on the stand.

## 9. TROUBLESHOOTING

---

- **Stand is unstable:**
  - Ensure all screws are securely tightened.
  - Verify the stand is on a flat, level surface.

- Check that the base feet supports are properly extended if desired for maximum stability.
- **TV does not fit the mount:**
  - Re-check your TV's VESA pattern, size, and weight against the specifications in Section 5.
  - Ensure you are using the correct screws and spacers from the hardware kit for your TV model.
- **Difficulty with swivel or height adjustment:**
  - Ensure no cables are obstructing movement.
  - For height adjustment, the TV must be removed before repositioning the bracket.

## 10. CUSTOMER SUPPORT

---

For any questions, concerns, or assistance with your TVON Swivel Floor TV Stand, please contact our customer service team. We are prepared to solve your problems with prompt reply by phone or email.

Please refer to the product packaging or the official TVON website for the most current contact information.