

evoloop JK-156D

Evoloop Electric Tea Kettle (Model JK-156D) Instruction Manual

Model: JK-156D | Brand: Evoloop

INTRODUCTION

Thank you for choosing the Evoloop Electric Tea Kettle. This manual provides important information regarding the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions thoroughly before first use and retain them for future reference.

Important Safety Instructions

- Read all instructions before using the kettle.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the kettle base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Always ensure the lid is securely closed during operation.
- The kettle must only be used with the base provided.

PRODUCT OVERVIEW

The Evoloop Electric Tea Kettle (Model JK-156D) is designed for efficient and safe water boiling. It features a 1.0L capacity, 1500W power, and a 100% stainless steel interior for pure water.

Key Features

- **304 Stainless Steel Interior:** Ensures no plastic contact with water, providing a BPA-free boiling experience.
- **Fast Boiling:** 1500W power heats water in 2-4 minutes. Boils 1 cup in under 60 seconds.
- **Automatic Shut-Off & Boil-Dry Protection:** Enhances safety by automatically turning off when water boils or if the kettle is empty.
- **Convenient Design:** Includes a spout filter, one-touch switch, non-slip handle, LED indicator light, and a 360° rotating base.
- **Retro Aesthetic:** Adds a stylish touch to any kitchen decor.

Product Components



Figure 1: Evoloop Electric Tea Kettle. This image displays the overall design of the kettle, highlighting its light green color and chrome accents.

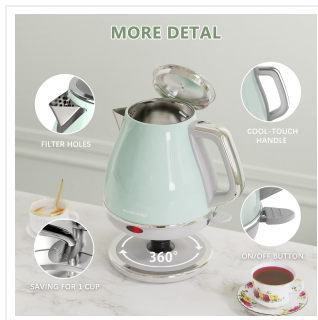


Figure 2: Detailed view of kettle features. This image points out the filter holes, cool-touch handle, 360-degree rotating base, and the on/off button for easy identification.



Figure 3: Dripless V-shaped spout. This image shows water being poured from the kettle, illustrating the effective design of the spout to prevent drips.

Product Demonstration Videos

Video 1: Evoloop 1L Retro Electric Kettle Overview. This video provides a general overview of the Evoloop 1L retro electric kettle, showcasing its design and features.

Video 2: Evoloop 1.0L Electric Kettle Features. This video highlights specific features and functionalities of the Evoloop 1.0L electric kettle.

SPECIFICATIONS

Brand	evoloop
Model Name	JK
Item Model Number	JK-156D
Color	green
Special Feature	Manual
Package Information	Kettle
Finish Type	Mirror Satin
Product Dimensions	9.5"L x 5.9"W x 8.2"H
Included Components	Lid
Product Care Instructions	Hand Wash
Recommended Uses	Boiling
Item Weight	2.09 pounds

SETUP

Before First Use

1. Remove all packaging materials from the kettle and its base.

2. Wipe the exterior of the kettle with a damp cloth. Do not immerse the kettle or base in water.
3. Fill the kettle with clean water to the MAX fill line.
4. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.

Placing the Kettle on the Power Base

- Place the power base on a dry, flat, stable surface.
- Ensure the power cord is securely plugged into a grounded electrical outlet.
- Place the kettle firmly onto the power base. The 360° rotating base allows for easy placement from any angle.

OPERATING INSTRUCTIONS

Filling the Kettle

1. Remove the kettle from its power base.
2. Open the lid.
3. Fill the kettle with the desired amount of fresh water. Do not fill below the MIN mark or above the MAX mark. For single servings, use the '1 CUP' internal marking to save energy.
4. Close the lid securely.

Boiling Water

1. Place the filled kettle back onto the power base.
2. Press the ON/OFF switch down. The LED indicator light will illuminate, indicating the kettle is heating.
3. The kettle will automatically shut off once the water has boiled, and the indicator light will turn off.
4. Carefully lift the kettle from the base and pour the hot water. Be cautious of steam and hot surfaces.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Evoloop Electric Tea Kettle.

Cleaning the Exterior

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Ensure the power base and cord remain dry.

Cleaning the Interior (Descaling)

Mineral deposits from water can build up inside the kettle over time, affecting performance. Descale regularly, especially in hard water areas.

- Fill the kettle with a mixture of 1 part white vinegar and 2 parts water.
- Bring the mixture to a boil and let it stand for at least 30 minutes, or longer for heavy scale.
- Empty the kettle and rinse thoroughly with fresh water several times.
- For stubborn deposits, repeat the process or use a commercial descaling solution following its

instructions.

TROUBLESHOOTING

If you encounter any issues with your kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not heat up.	<ul style="list-style-type: none">• Kettle not properly placed on the base.• Power cord not plugged in.• No power at the outlet.• Boil-dry protection activated.	<ul style="list-style-type: none">• Ensure kettle is correctly seated on the base.• Check if the power cord is securely plugged into a working outlet.• Test the outlet with another appliance.• If boil-dry protection activated, remove kettle from base, let it cool for 15-20 minutes, then refill and restart.
Water is not boiling.	Kettle switch not engaged.	Press the ON/OFF switch down until the indicator light illuminates.
Kettle switches off too quickly.	Excessive mineral deposits (scale).	Descale the kettle as per the instructions in the Maintenance section.
Kettle is unusually loud during boiling.	Mineral deposits (scale) or normal boiling noise.	Descaling may reduce noise if caused by mineral buildup. Some noise is normal during the boiling process.

WARRANTY AND SUPPORT

Evoloop products are manufactured to high-quality standards. This product is covered by a limited warranty from the date of purchase. For specific warranty details, please refer to the warranty card included with your product or contact Evoloop customer support.

Customer Support

If you have any questions, require technical assistance, or need to claim warranty service, please contact Evoloop customer support through the retailer where the product was purchased or visit the official Evoloop website for contact information.