

Sriya Sriya29gb3s6eow-11

Sriya Portable Mini Countertop Dishwasher Instruction Manual

Model: Sriya29gb3s6eow-11

1. INTRODUCTION

Thank you for choosing the Sriya Portable Mini Countertop Dishwasher. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before using the dishwasher and retain it for future reference.

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your dishwasher, follow these basic precautions:

- Read all instructions before using the appliance.
- Ensure the power supply matches the specifications (US Plug 110V).
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children away from the dishwasher during operation.
- Use only detergents specifically designed for dishwashers.
- Do not open the door during operation, especially during hot cycles.
- Unplug the dishwasher before cleaning or performing any maintenance.
- Do not operate the dishwasher if it has a damaged cord or plug, or if it is malfunctioning.

3. PRODUCT OVERVIEW

The Sriya Portable Mini Countertop Dishwasher is designed for compact spaces, offering efficient cleaning for various dishware and even fruits and vegetables. It features a leak-proof design and multiple wash programs.



Figure 3.1: Front view of the Sriya Portable Mini Countertop Dishwasher.



Figure 3.2: Interior view of the dishwasher with the door open, displaying the dish racks.

Key Features:

- **Compact and Portable:** Designed for countertop placement, suitable for apartments and offices.
- **Leak-Proof Design:** Features a sealed body to prevent water leakage.
- **Multifunctional:** Capable of washing dishes, fruits, and vegetables.
- **72-Hour Long-Lasting Drying:** Automatic ventilation fan activation after 72 hours of storage to maintain freshness.
- **Multiple Wash Modes:** Includes Powerful, Standard, Fast, Fruit and Vegetable, Light, and Bowl Drying programs.
- **PTC Thermal Drying:** Efficient drying mode for dishware.
- **Upper and Lower Double Spraying:** Ensures thorough cleaning.

4. SETUP

4.1 Unpacking

1. Carefully remove the dishwasher from its packaging.

2. Remove all packing materials, including any tape or protective films.
3. Check for any damage during transit. If damage is found, do not operate the appliance and contact customer support.

4.2 Placement

Place the dishwasher on a stable, level countertop surface. Ensure there is adequate space around the unit for ventilation and access to the water tank and drainage.

4.3 Water Connection

This dishwasher features a built-in water tank for manual filling. It also includes a drainage pipe for wastewater removal.



Figure 4.1: Dishwasher with included accessories: power plug, measuring cup, and drainage pipe.

1. **Drainage:** Connect the provided drainage pipe to the designated outlet on the dishwasher. Ensure the other end of the pipe is directed into a sink or suitable drain to prevent water accumulation.
2. **Water Filling:** The dishwasher is designed for manual water filling into its internal tank. Use the provided measuring cup to add water to the inlet located on the top of the unit.



Figure 4.2: Close-up of the water inlet on the top of the dishwasher.

4.4 Power Connection

Plug the power cord into a grounded 110V AC electrical outlet. Ensure the outlet is easily accessible.

5. OPERATING INSTRUCTIONS

5.1 Loading Dishes

1. Open the dishwasher door.
2. Place dishes, bowls, and cutlery into the designated racks. Ensure items are arranged so that water spray can reach all surfaces. Avoid overcrowding.
3. Scrape off large food particles before loading.

5.2 Adding Water and Detergent

1. **Water:** Pour approximately 5 liters of water into the water inlet on top of the dishwasher using the provided

measuring cup. The dishwasher will indicate when the water tank is full.

2. **Detergent:** Add a small amount of dishwasher detergent to the detergent dispenser inside the unit. Refer to the detergent manufacturer's instructions for appropriate dosage.

5.3 Selecting a Wash Program

The control panel features various program options. Press the desired program button to select it.



Figure 5.1: Close-up of the control panel showing program selection buttons.

- **Powerful:** For heavily soiled dishes.
- **Standard:** For daily dishwashing needs.
- **Fast:** For lightly soiled dishes or quick washes.
- **Fruit and Vegetable:** A gentle cycle for cleaning produce.
- **Light:** For delicate items or minimal soil.
- **Bowl Drying:** A dedicated drying cycle.

5.4 Starting and Pausing

1. After selecting a program, press the **Start/Pause** button to begin the wash cycle.
2. To pause a cycle, press the **Start/Pause** button again. Press it once more to resume.

5.5 Drying Function

The dishwasher utilizes PTC Thermal Drying. Additionally, it features a 72-hour long-lasting drying function where the ventilation fan automatically activates after 72 hours of storage to prevent odors and maintain freshness.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your dishwasher.

6.1 Cleaning Filters

The dishwasher has filters that collect food particles. These should be cleaned regularly to prevent blockages and ensure efficient cleaning.

1. Unplug the dishwasher from the power outlet.
2. Locate and remove the filter assembly at the bottom of the wash tub.
3. Rinse the filters under running water to remove any debris. Use a soft brush if necessary.
4. Reinstall the filters securely.

6.2 Cleaning Interior and Exterior

- **Interior:** Wipe the interior surfaces with a damp cloth after each use. Periodically run a cleaning cycle with a dishwasher cleaner to remove mineral buildup.
- **Exterior:** Clean the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.3 Draining Residual Water

After each cycle, ensure the drainage pipe is properly positioned to allow all wastewater to exit the unit. If storing the dishwasher for an extended period, ensure it is completely drained and dry.

7. TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	No power; Door not closed properly; Program not selected.	Check power connection; Ensure door is latched; Select a wash program.
Dishes are not clean	Improper loading; Clogged filters; Insufficient detergent; Incorrect program.	Reload dishes correctly; Clean filters; Add appropriate detergent; Select a stronger program.
Water not draining	Drain pipe kinked or blocked; Filter clogged.	Check and clear drain pipe; Clean filters.
Leakage	Door seal damaged; Overfilling water tank; Improper drainage pipe connection.	Inspect door seal; Do not overfill water tank; Ensure drainage pipe is securely connected.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model	Srliya29gb3s6eow-11

Feature	Specification
Power	1000W
Voltage	110V (US Plug)
Water Consumption	5L
Drying Mode	PTC Thermal Drying
Spraying System	Upper and Lower Double Spraying
Dimensions (D x W x H)	20.87 x 20.87 x 19.69 inches
Weight	29 pounds
Function Programs	Powerful, Standard, Fast, Fruit and Vegetable, Light, Bowl Drying

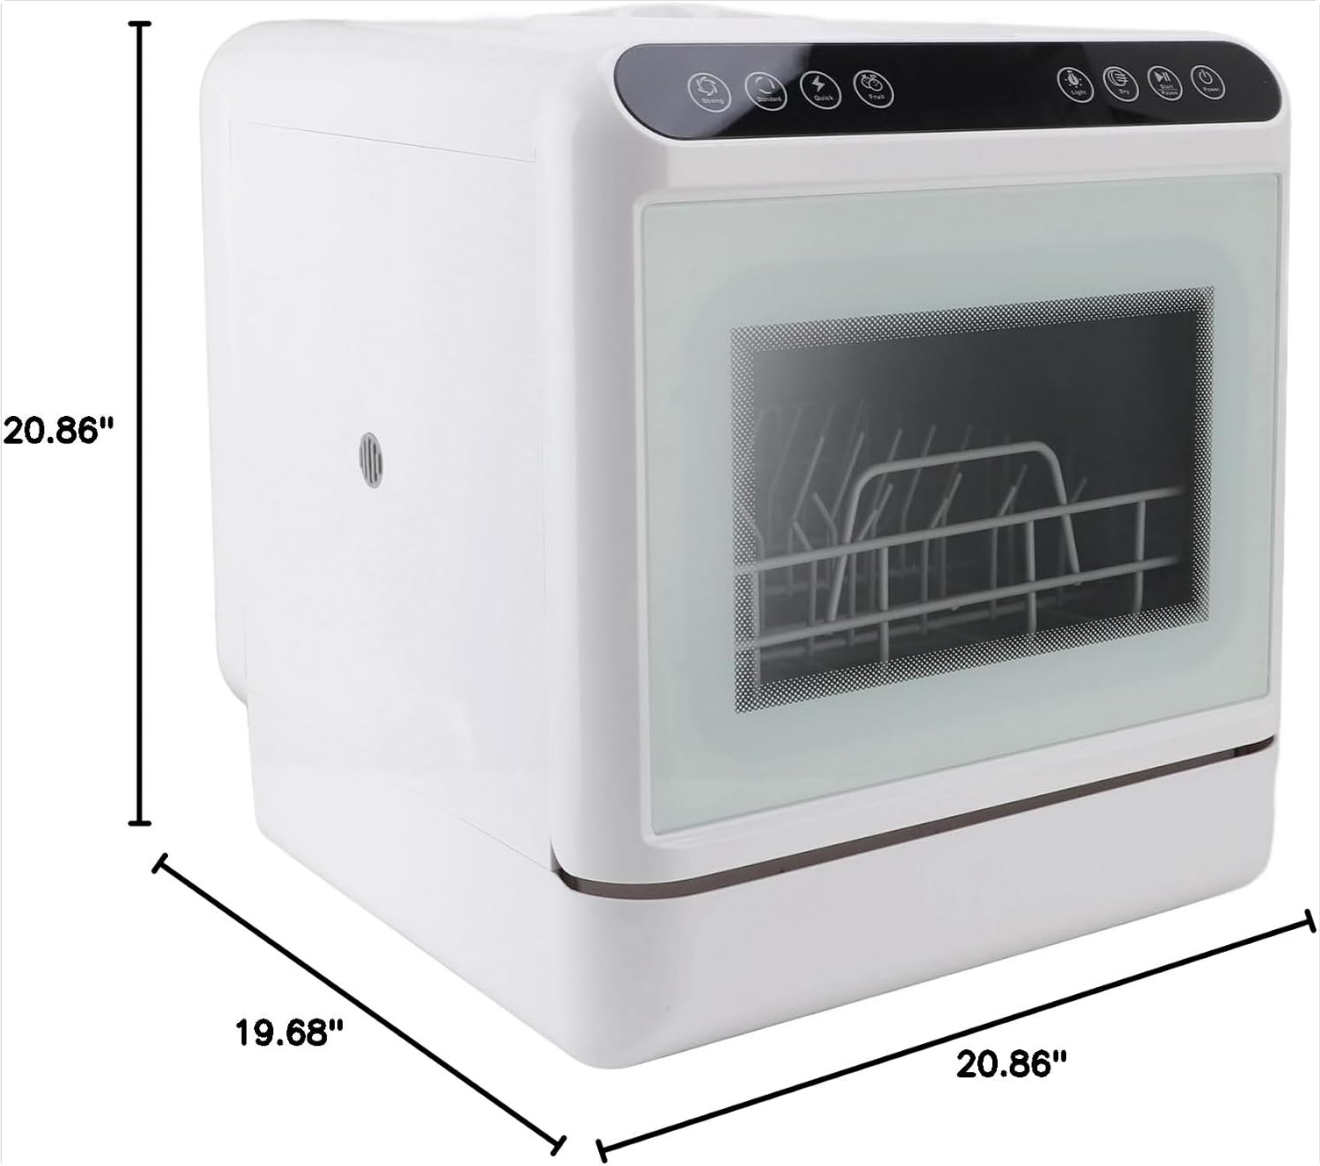


Figure 8.1: Dimensional diagram of the dishwasher.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact Sriya customer service. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question