



Manuals.plus /

› Marcree /

› Marcree 3-5 Gun Safe Digital Rifle Safes User Manual

**Marcree f1ea35b2-d172-4178-b33f-f5b05cf81316**

# Marcree 3-5 Gun Safe Digital Rifle Safe User Manual

Model: f1ea35b2-d172-4178-b33f-f5b05cf81316

## 1. INTRODUCTION

Thank you for choosing the Marcree 3-5 Gun Safe. This digital rifle safe is designed to provide secure storage for your firearms and valuables, featuring advanced security measures and convenient access options. Please read this manual thoroughly before installation and operation to ensure proper use and maximum security.



Image: The Marcree 3-5 Gun Safe, showcasing its sleek black exterior, digital keypad, and internal organization for firearms and accessories.

## 2. SAFETY INFORMATION

- Always keep the safe keys in a secure location, separate from the safe itself, and never inside the safe.
- Ensure the safe is securely mounted to prevent tipping or unauthorized removal.
- Keep the safe locked at all times when not in use, especially if children are present.
- Do not store flammable materials or liquids inside the safe.
- Familiarize yourself with all unlocking methods and alarm features before relying on the safe for security.

## 3. PACKAGE CONTENTS

Please verify that all items are included in your package:

- 1 x Marcree Gun Cabinet

- 2 x Keys
- 3 x Anchor Screws
- 1 x Instruction Manual (this document)
- 1 x Emergency Charging Cable

# 180° Door Opening Angle

Faster and easier access to your items

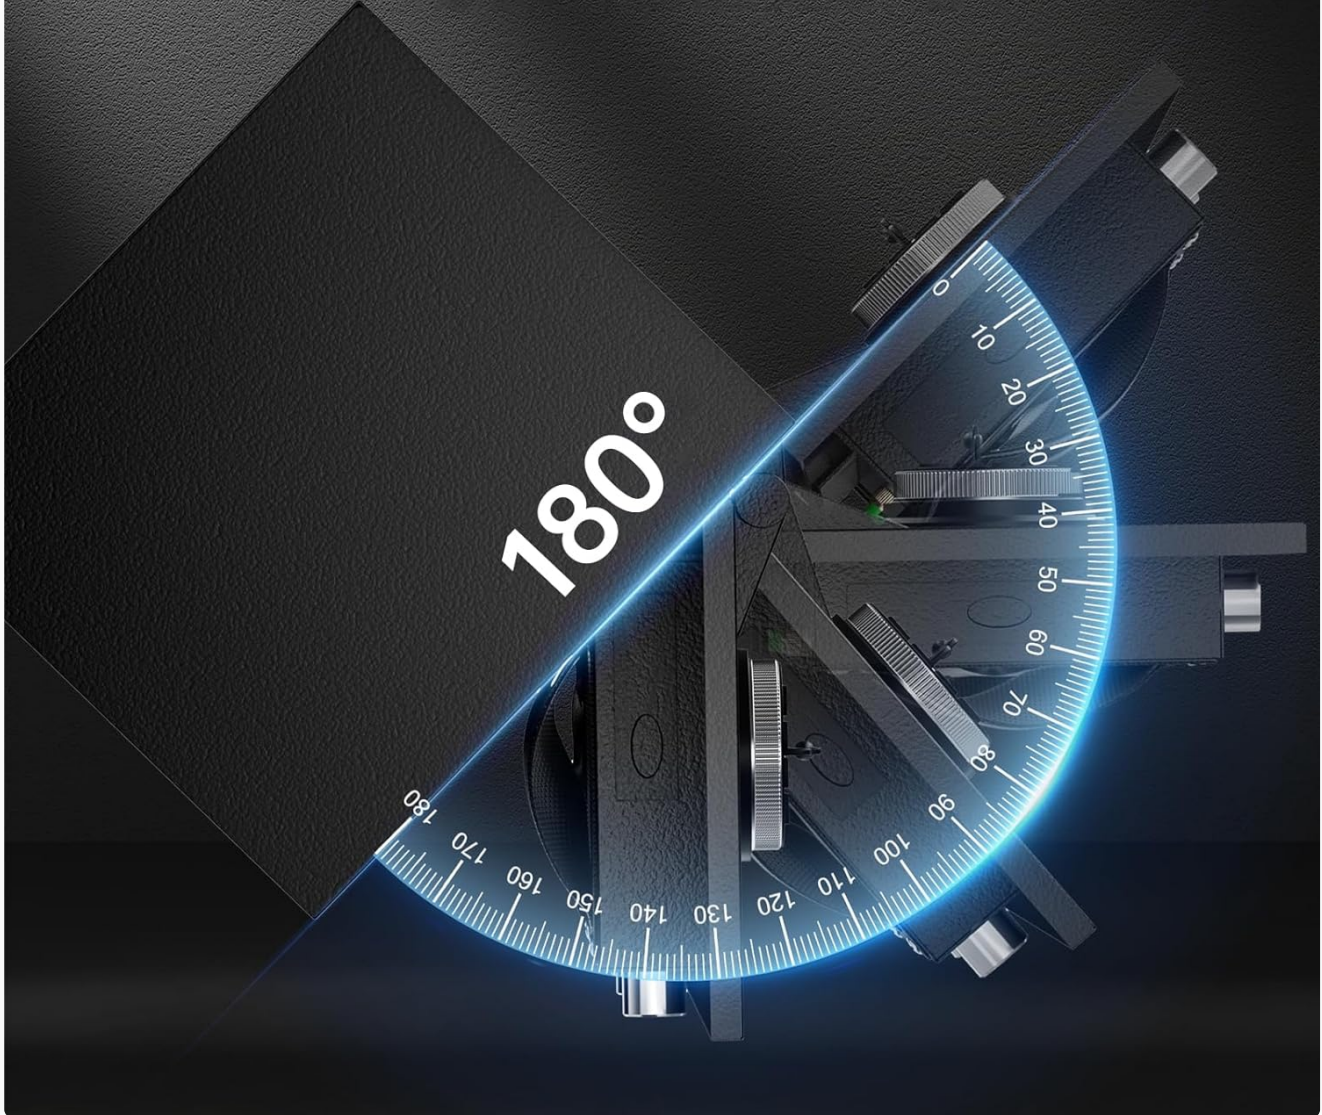


Image: A visual representation of the safe's packaging contents, including the safe unit, keys, anchor screws, instruction manual, and emergency charging cable.

## 4. SETUP AND INSTALLATION

### 4.1 Choosing a Location

Select a discreet and secure location for your safe. Consider areas that are out of sight and can be easily anchored to a wall or floor.

### 4.2 Anchoring the Safe

For maximum security, it is highly recommended to anchor the safe to a solid surface (wall or floor) using the

provided anchor screws. The safe features pre-drilled holes on the back for this purpose.

1. Position the safe in the desired location.
2. Mark the drilling points through the pre-drilled holes on the back of the safe onto the wall/floor.
3. Move the safe and drill pilot holes at the marked points using an appropriate drill bit for your wall/floor material.
4. Align the safe with the drilled holes and secure it using the provided anchor screws.



Image: A diagram showing the location of the three pre-drilled holes on the back of the safe, indicating how to use expansion screws for secure mounting.

## 5. OPERATING INSTRUCTIONS

### 5.1 Unlocking Methods

Your Marcree gun safe offers three flexible unlocking methods:

- **Key + Knob:** Insert the key into the lock and turn it while simultaneously turning the knob to open the door.
- **Password + Knob:** Enter your programmed digital password on the keypad, then turn the knob to open the door.
- **Emergency Charging Cable + Password + Knob:** If batteries are depleted, connect the emergency charging cable to the external port, enter your password, and turn the knob.

**Important: Ensure you do NOT lock the keys inside the cabinet to avoid access issues if you forget the password or if batteries are dead.**

## Packaging Information

Safe\*1 1

Keys\*2 2

Anchor screws\*3 3

Instruction manual\*1 4

USB\*1 5

53.14in

43.3in

9.84in

11.81in

13.77in



Image: A visual guide demonstrating the two primary ways to open the safe: using a physical key in conjunction with the knob, or entering a digital password followed by turning the knob.

### 5.2 Setting Your Digital Password

Refer to the detailed instructions provided in the quick start guide for programming your initial digital password. Typically, this involves pressing a reset button inside the safe (with the door open), entering your desired code, and confirming it.

### 5.3 Dual Alarm System

The safe is equipped with an advanced dual alarm system for enhanced security:

- **Incorrect Entry Alarm:** If an incorrect combination is entered 3 times consecutively, the safe will sound an alarm for 60 seconds. Entering the correct password will disarm the alarm.
- **External Force Alarm:** The safe will also trigger an alarm if it detects significant impact or tampering by an external force.

# TWO WAYS TO OPEN



Image: A graphic explaining the dual alarm system, detailing how three incorrect password attempts or physical impact will activate the alarm.

## 5.4 Silent System and LED Light

- **Silent System:** To activate the silent system, long press the '9' button on the keypad. This allows for quiet operation, preventing audible beeps during entry.
- **LED Light:** An internal LED light illuminates the safe's interior, aiding visibility in low-light conditions. Note: The LED light will not activate when the safe is opened using only the key.

## 5.5 Lockable Bottom Drawer

The safe features a uniquely designed lockable bottom drawer, allowing for secure separation of firearms and ammunition or other small valuables. This drawer provides convenient access while maintaining an additional layer of security.



Image: A detailed view of the safe's lockable bottom drawer, highlighting its capacity for storing smaller items like ammunition or personal valuables.

## 6. MAINTENANCE

- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Battery Replacement:** The electronic lock is powered by batteries (typically AA). Replace batteries when the low battery indicator appears or if the keypad becomes unresponsive. Use high-quality alkaline batteries.
- **Lubrication:** Periodically lubricate the door hinges and locking bolts with a small amount of light machine oil to ensure smooth operation.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with password.	Incorrect password entered; low batteries.	Re-enter correct password carefully. Replace batteries or use emergency charging cable.
Alarm sounds unexpectedly.	Multiple incorrect entries; physical impact.	Enter correct password to disarm. Check for signs of tampering.
Keypad is unresponsive.	Dead batteries.	Connect emergency charging cable or replace batteries.
Door is stiff or difficult to open/close.	Hinges or bolts need lubrication; obstruction.	Lubricate hinges and bolts. Check for any obstructions around the door frame.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Marcree
Model Number	f1ea35b2-d172-4178-b33f-f5b05cf81316
Product Dimensions (D x W x H)	11.81" x 13.77" x 53.14"
Lock Type	Electronic, Key
Capacity	3-5 Guns (5 load)
Material	Alloy Steel (Thickened Stainless Steel Materials)
Special Features	Alarm System, Anti-Theft, Anti-Tipping, Combination Lock, Lockable Bottom Drawer, Silent System, LED Light
Mounting Type	Floor Mount
Item Weight	59.1 pounds



**SUITABLE FOR ALL KINDS OF HIDDEN PLACES**

More concealed into the wall

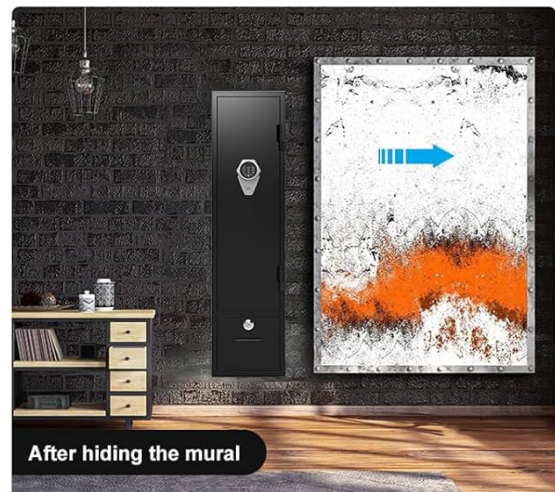


Image: A visual representation of the safe's robust construction, emphasizing its multi-layered alloy steel and features designed for enhanced security against drilling, prying, and crushing.

## 9. WARRANTY AND SUPPORT

The Marcree 3-5 Gun Safe comes with a **6-month warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For warranty claims, technical support, or any questions regarding your safe, please contact Marcree customer service. Refer to the contact information provided on the product packaging or the official Marcree website.

When contacting support, please have your product model number (f1ea35b2-d172-4178-b33f-f5b05cf81316) and proof of purchase readily available.