

Coleshome ZJZ-ZX7CSBJ

Coleshome L-Shaped Corner Desk with 7 Drawers, Power Outlets, and LED Lights

Model: ZJZ-ZX7CSBJ

Brand: Coleshome

1. INTRODUCTION

Thank you for purchasing the Coleshome L-Shaped Corner Desk. This manual provides essential information for the safe assembly, operation, and maintenance of your new desk. Please read these instructions carefully before beginning assembly and retain them for future reference.

This versatile L-shaped desk is designed to optimize your workspace, offering ample storage, integrated power solutions, dynamic LED lighting, and an ergonomic monitor stand. Its reversible design allows for flexible configuration to suit various room layouts, making it ideal for home offices, gaming setups, or study areas.

2. SAFETY INSTRUCTIONS

- Always follow the assembly instructions carefully.
- Ensure all parts are securely fastened before use.
- Do not overload the desk or shelves beyond their weight capacity.
- Keep electrical components (power outlets, LED lights) away from liquids.
- Use only the provided power adapter for the LED lights and power outlets.
- Avoid placing hot items directly on the desk surface without protection.
- Keep small parts and packaging materials away from children.

3. PACKAGE CONTENTS

Please verify that all components listed below are present before starting assembly. If any parts are missing or damaged, contact customer support.

- Desktop Panels (Main, Side, Corner)

- Steel Frame Components
- Fabric Drawers (7 units)
- Power Outlet Unit (2 AC, 2 USB)
- LED Light Strip with Controller
- Monitor Stand
- CPU Stand (Pull-out)
- Assembly Hardware (screws, bolts, connectors)
- Assembly Tools (e.g., Allen wrench, screwdriver)
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly is recommended with two people for ease and safety. Clear assembly instructions and all necessary tools are included. Follow the numbered steps provided in the separate assembly guide for detailed instructions.

1. **Prepare the Area:** Clear a spacious area for assembly. Lay out all components and hardware.
2. **Assemble the Frame:** Connect the steel frame components according to the diagrams in the assembly guide. Ensure all connections are secure.
3. **Attach Desktop Panels:** Secure the main, side, and corner desktop panels to the assembled frame.
4. **Install Storage Shelves:** Attach the open storage shelves as indicated.
5. **Insert Fabric Drawers:** Assemble the fabric drawers and slide them into their designated compartments.
6. **Mount Monitor Stand:** Position and secure the monitor stand on the main desktop.
7. **Install Power Outlet Unit:** Integrate the power outlet unit into its designated slot on the desk. Connect its power cable.
8. **Apply LED Light Strip:** Attach the LED light strip along the designated area, typically under the monitor stand or along the back edge of the desk. Connect it to the power outlet unit.
9. **Adjust Foot Pads:** Adjust the leveling foot pads at the bottom of the desk legs to ensure stability on uneven floors.



Image 1: Fully assembled Coleshome L-Shaped Corner Desk, showcasing its storage, monitor stand, and integrated lighting. The desk is white with multiple drawers and open shelves, supporting two monitors, a keyboard, and other office/gaming accessories.

5. OPERATING INSTRUCTIONS

5.1. LED Lighting

The integrated LED light strip offers customizable illumination for your workspace.

- **Power On/Off:** Use the inline controller or remote (if included) to turn the LED lights on or off.
- **Color Selection:** Cycle through 10 different colors to match your mood or environment.
- **Lighting Modes:** Choose from 10 dynamic lighting modes, such as fade, strobe, or flash, to create an immersive atmosphere.
- **Brightness Adjustment:** Adjust the brightness level to your preference.

5.2. Power Outlets

The desk includes a built-in power outlet unit for convenient device charging and power access.

- **AC Outlets:** Two standard AC outlets are available for powering monitors, laptops, or other electronics.
- **USB Ports:** Two USB ports are provided for charging smartphones, tablets, or other USB-powered devices.
- **Usage:** Plug the desk's main power cord into a wall outlet. Then, connect your devices to the integrated outlets.

5.3. Storage Drawers and Shelves

The desk features 7 fabric drawers and open shelves for organization.

- **Fabric Drawers:** Use the drawers for storing office supplies, documents, and personal items. Ensure items are not excessively heavy or sharp to prevent damage to the fabric.
- **Open Shelves:** Utilize the open shelves for printers, books, decorative items, or frequently accessed accessories.

- **CPU Stand:** The pull-out CPU stand provides a dedicated space for your computer tower, keeping it off the floor and protected from dust.

5.4. Monitor Stand

The elevated monitor stand promotes an ergonomic viewing height.

- **Ergonomics:** Place your monitor(s) on the stand to raise them to eye level, reducing neck and eye strain.
- **Space Utilization:** The space beneath the monitor stand can be used for storing a keyboard, mouse, or other small items when not in use.

6. MAINTENANCE

- **Cleaning Surfaces:** Wipe desk surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Fabric Drawers:** For fabric drawers, spot clean with a mild detergent and water. Allow to air dry completely. Do not machine wash.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Tighten if necessary.
- **Cable Management:** Regularly organize cables to prevent tangles and potential hazards.

7. TROUBLESHOOTING

7.1. LED Lights Not Working

- Ensure the LED light strip is properly connected to the power outlet unit.
- Verify that the power outlet unit is plugged into a functional wall socket.
- Check the inline controller or remote for battery issues or proper function.

7.2. Power Outlets Not Functioning

- Confirm the desk's main power cord is securely plugged into a working wall outlet.
- Test the wall outlet with another device to ensure it is supplying power.
- Avoid overloading the outlets. If multiple high-power devices are connected, try reducing the load.
- Note: Some power outlets on desks may not provide sufficient power for high-demand charging (e.g., fast charging for certain laptops). They are generally suitable for powering devices or standard charging.

7.3. Desk Instability

- Ensure all assembly hardware is tightened securely.
- Adjust the leveling foot pads on the bottom of the desk legs to compensate for uneven flooring.
- Verify that the desk is placed on a flat, stable surface.

8. SPECIFICATIONS

Feature	Detail
Brand	Coleshome
Model Number	ZJZ-ZX7CSBJ

Feature	Detail
Product Dimensions (L x W x H)	199.5 cm x 145.5 cm x 89.7 cm (approx. 78.5 x 57.3 x 35.3 inches)
Product Weight	33.5 kg (approx. 73.8 lbs)
Color	White
Number of Drawers	7 (Fabric)
Power Outlets	2 AC outlets, 2 USB ports
LED Lighting	10 colors, 10 lighting modes
Assembly Required	Yes
Special Features	Reversible design, Monitor stand, CPU stand, Adjustable foot pads

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Coleshome customer service directly. Keep your purchase receipt as proof of purchase.

© 2025 Coleshome. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question