

FDW Big and Tall Office Chair

FDW Big and Tall Office Chair Instruction Manual

Model: Big and Tall Office Chair (B0DMVRDLH2)

1. PRODUCT OVERVIEW

The FDW Big and Tall Office Chair is designed for comfort and durability, featuring an ergonomic design, high back support, and a robust construction suitable for various body types. This manual provides instructions for assembly, operation, maintenance, and troubleshooting to ensure optimal use of your chair.



Image 1.1: The FDW Big and Tall Office Chair (White) in an office environment.

2. INCLUDED COMPONENTS

Before assembly, ensure all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Chair Backrest
- Seat Cushion
- Armrests (Left and Right)
- Chair Base (5-star)
- Casters (5 pieces)
- Gas Lift Cylinder
- Mechanism Plate
- Hardware Pack (screws, washers, Allen wrench)

3. SETUP AND ASSEMBLY

Assembly typically takes 15-30 minutes. Follow these general steps for proper setup:

1. **Attach Casters to Base:** Insert each of the five casters into the holes at the end of each leg of the chair base. Push firmly until they click into place.
2. **Insert Gas Lift:** Place the gas lift cylinder into the center hole of the assembled chair base.
3. **Attach Mechanism Plate to Seat:** Secure the mechanism plate to the underside of the seat cushion using the provided screws. Ensure the front of the mechanism faces the front of the seat.
4. **Attach Armrests:** Connect the armrests to the seat cushion and the backrest using the designated screws. Do not overtighten initially to allow for minor adjustments.
5. **Connect Seat to Backrest:** Align the seat cushion with the backrest and secure them together with the remaining screws. Once all screws are in place, tighten them securely.
6. **Place Assembled Top onto Gas Lift:** Carefully place the assembled seat and backrest onto the gas lift cylinder, ensuring the center hole of the mechanism plate aligns with the top of the gas lift.

PRODUCT DIMENSION

Unit-Inch



Image 3.1: The FDW Big and Tall Office Chair fully assembled.

4. OPERATING INSTRUCTIONS

Your FDW office chair offers several adjustable features for personalized comfort:

- **Height Adjustment:** To raise the seat, lift the lever located under the right side of the seat while taking your weight off the chair. To lower the seat, lift the lever while seated. Release the lever at the desired height.
- **Recline/Rocking Function:** Pull the lever on the right side of the chair (the same lever for height adjustment) outwards to unlock the rocking mechanism. Push it inwards to lock the chair in an upright position.
- **Tilt Tension:** The round knob located under the front of the seat allows you to adjust the tension of the rocking mechanism. Turn clockwise to increase tension (making it harder to recline) and counter-clockwise to decrease tension (making it easier to recline).
- **360-Degree Swivel:** The chair is designed to swivel 360 degrees, allowing for easy movement and access to different areas of your workspace without needing to stand up.

BIG THAT COMFORTABLE

LOAD CAPACITY UP TO 500LBS

This Big & Tall office chair are designed to accommodate larger and taller body types.




Image 4.1: Illustration of the rocking mode and tilt tension adjustment.

HIGH-LEVEL SEAT COMFORT



**Comfortable
Soft Cushion**

**Ergonomic Design
of Armrest**

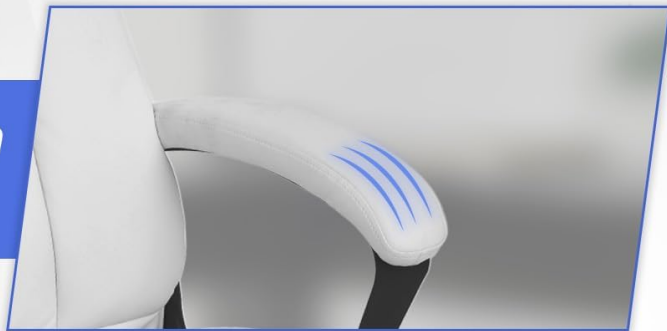

360degree Swivel

Image 4.2: Details of seat comfort, ergonomic armrests, and swivel functionality.

5. MAINTENANCE

Regular maintenance helps prolong the life and performance of your office chair:

- **Cleaning:** For faux leather surfaces, wipe with a soft, damp cloth. For tougher stains, use a mild soap solution and immediately wipe dry. Avoid harsh chemicals or abrasive cleaners.
- **Check Fasteners:** Periodically check all screws and bolts to ensure they are tight. Retighten if necessary to maintain stability and prevent squeaking.
- **Caster Care:** Keep casters clean by removing any hair or debris that may accumulate around them. This ensures smooth rolling.
- **Gas Lift:** The gas lift is a sealed unit and requires no user maintenance. If it fails to function, contact customer support.

6. TROUBLESHOOTING

Refer to the following common issues and solutions:

- **Chair is unstable or wobbly:**
 - Ensure all assembly screws are securely tightened.
 - Verify that the gas lift is properly seated in the base and mechanism plate.
- **Chair squeaks:**
 - Tighten all screws, especially those connecting the seat, backrest, and armrests.
 - Apply a small amount of silicone lubricant to moving parts if the squeaking persists after tightening.
- **Height adjustment not working:**
 - Check if the height adjustment lever is fully engaged.
 - Ensure the gas lift cylinder is not damaged. If it is, contact customer support for replacement.
- **Casters not rolling smoothly:**
 - Remove any hair, dust, or debris from the caster wheels.
 - Ensure casters are fully inserted into the chair base.

7. SPECIFICATIONS

Detailed specifications for the FDW Big and Tall Office Chair:

Attribute	Detail
Brand	FDW
Model Number	Big and Tall Office Chair
Color	White
Upholstery Material	Faux Leather
Frame Material	Nylon
Fill Material	Foam, Polyester
Product Dimensions (D x W x H)	28"D x 29"W x 51"H
Item Weight	45 Pounds
Maximum Weight Recommendation	500 Pounds
Seat Depth	21 inches
Back Style	High Back
Required Assembly	Yes

ROCKING MODE

The rocking mode can relax you from heavy work



Tilt Tension Knob

90°

120°



Out for reclining in for lock

Image 7.1: Detailed product dimensions in inches.

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact FDW customer service directly. If you require assistance with assembly, operation, or troubleshooting that is not covered in this manual, please reach out to FDW customer support.

You can typically find contact information on the FDW official website or through your retailer's customer service portal.