

JKXKBADXH-CLEAR

Portable Mini Washing Machine User Manual

Model: JKXKBADXH-CLEAR

Brand: generic

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Portable Mini Washing Machine. Retain this manual for future reference.

- Ensure the power supply matches the voltage specified on the appliance.
- Do not immerse the main unit in water or other liquids.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.
- Unplug the machine from the power outlet when not in use or before cleaning.
- Do not operate the machine if the power cord or plug is damaged. Contact customer support for assistance.
- Use only the accessories provided or recommended by the manufacturer.
- Do not overload the machine. Adhere to the specified capacity for optimal performance and safety.
- Place the machine on a stable, level surface during operation.
- Avoid washing delicate items that require dry cleaning or specific hand-wash only instructions.

2. PRODUCT OVERVIEW

The Portable Mini Washing Machine is designed for compact spaces and small garment washing. It features two cleaning modes and a dehydration function.

2.1 Components

- Main Washing Unit (with pulsator)
- Foldable Dehydration Basket
- Power Adapter
- Lid



Figure 2.1: The Portable Mini Washing Machine, showing the main washing unit and the separate foldable dehydration basket.

2.2 Key Features

- **Compact Design:** Measures approximately 10 x 10 x 11.1 inches (25.5 cm x 25.5 cm x 28.2 cm), ideal for small living spaces.
- **6L Capacity:** Suitable for small garments.
- **Two Cleaning Modes:** Offers versatile washing options.
- **360° Deep Cleaning:** Utilizes front and reverse pulsators for effective stain removal.
- **Dehydration Function:** Integrated foldable basket for water removal.
- **Durable Material:** Constructed from environmentally friendly ABS material.
- **LED Touch Panel:** For easy operation.



Figure 2.2: Product dimensions, illustrating the compact size of the washing machine.



Mother and baby artifacts are made for cleansing

Product
features

Multiple functional upgrades to better
understand your laundry needs

Product median



Figure 2.3: Overview of the washing machine's functional upgrades, including deep cleaning, quiet operation, and 6L capacity.



**Environmentally friendly
ABS material is safer
Foldable drain basket
LED touch panel**

Figure 2.4: Detailed view highlighting the environmentally friendly ABS material, the foldable drain basket, and the LED touch panel.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the washing machine on a flat, stable, and dry surface. Ensure there is enough space around the unit for proper ventilation and operation.
3. **Power Connection:** Connect the power adapter to the machine and then plug it into a suitable power outlet.
4. **Initial Cleaning:** Before first use, it is recommended to run a short cycle with clean water to remove any manufacturing residues.

4. OPERATING INSTRUCTIONS

4.1 Preparing Garments

- Separate clothes by color and fabric type.
- Check garment care labels for washing instructions.
- Remove any sharp objects from pockets.



Figure 4.1: Recommended garment capacities for various small items such as underwear, socks, and t-shirts.

4.2 Washing Cycle

1. **Add Water:** Fill the washing machine with an appropriate amount of water, ensuring it covers the garments but does not exceed the maximum fill line.
2. **Add Detergent:** Add a small amount of liquid detergent suitable for machine washing. Avoid excessive foaming detergents.
3. **Load Garments:** Place the garments into the washing unit. Do not overload. Refer to Figure 4.1 for capacity guidelines.
4. **Select Mode:** Use the LED touch panel to select one of the two available cleaning modes. The display will show the selected mode or remaining time.
5. **Start:** Press the start button to begin the washing cycle.
6. **Separate Washing:** For hygiene, consider washing certain items like baby clothes or undergarments separately.



Figure 4.2: The washing machine demonstrating the concept of separate bucket washing for improved hygiene.

4.3 Dehydration Function

1. After the washing cycle is complete, remove the washed garments from the main unit.
2. Insert the foldable dehydration basket into the main unit.
3. Place the washed garments evenly inside the dehydration basket. Do not overfill.
4. Close the lid.
5. Select the dehydration mode on the LED touch panel.
6. Press the start button. The machine will spin to remove excess water.
7. Once the dehydration cycle is complete, carefully remove the garments.

Note: The dehydration function is designed to remove excess water, not to fully dry garments.

5. MAINTENANCE

5.1 Cleaning the Machine

- Always unplug the machine before cleaning.
- Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Rinse the inside of the washing unit and the dehydration basket with clean water after each use.

- Ensure all parts are thoroughly dry before storing.

5.2 Storage

- Store the machine in a cool, dry place away from direct sunlight and extreme temperatures.
- Ensure the machine is completely dry before storing to prevent mold or mildew.
- The compact design allows for easy storage in small spaces.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; Power outlet issue; Damaged power cord.	Ensure power cord is securely plugged in; Test outlet with another device; Contact customer support if cord is damaged.
Washing cycle not starting.	Lid not closed properly; Mode not selected.	Ensure lid is securely closed; Select a washing mode on the LED panel.
Poor washing performance.	Overloaded; Insufficient water/detergent; Incorrect mode.	Reduce load size; Add appropriate amount of water/detergent; Select suitable washing mode.
Machine is noisy during operation.	Unstable surface; Uneven load.	Place machine on a stable, level surface; Redistribute garments evenly inside.
Dehydration not effective.	Overloaded dehydration basket; Garments not evenly distributed.	Reduce load in basket; Arrange garments evenly.



Figure 6.1: The washing machine is designed for quiet operation, minimizing disturbance.

7. SPECIFICATIONS

Attribute	Detail
Brand	generic
Model Number	JKXKBADXH-CLEAR
Capacity	6 Liters
Product Dimensions	Approx. 10 x 10 x 11.1 inches (25.5 x 25.5 x 28.2 cm)
Item Weight	Approx. 4.41 pounds (2 kg)
Material	ABS
Color	Clear

8. WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or contact the seller directly.

For any questions, concerns, or technical support, please contact our responsive after-sales support team.

We are committed to ensuring your satisfaction.

Contact Information: Please refer to your purchase receipt or the seller's information on the platform where the product was purchased for direct contact details.

Note: Protection plans may be available for purchase separately. Refer to your retailer for details.