

- Manuals.plus /
- › [TEFTYMON](#) /
- › TEFTYMON 4K 64MP Digital Camera User Manual

TEFTYMON DC101

TEFTYMON 4K 64MP Digital Camera User Manual

Model: DC101

1. INTRODUCTION

Thank you for choosing the TEFTYMON 4K 64MP Digital Camera. This manual provides essential information for setting up, operating, and maintaining your new camera. Please read it thoroughly to ensure optimal performance and longevity of your device. This camera is designed for capturing high-quality photos and videos, making it ideal for photography enthusiasts, vlogging, and travel.



The TEFTYMON 4K 64MP Digital Camera, showcasing its compact design, flip screen, and included accessories like batteries and a 32GB SD card.

2. What's in the Box

Please verify that all items are present in your package:

- 1x TEFTYMON 4K 64MP Digital Camera
- 1x 32GB Memory Card
- 2x Rechargeable Batteries
- 1x Type C Cable
- 1x UV Filter
- 1x Lens Cap
- 1x User's Manual (this document)
- 2x Straps (Short and Long)
- 1x Camera Bag

A Perfect Gift for Beginners



Digital Camera



2 x Rechargeable Batteries



32GB SD Card



Lens Cap



Lens Film



Charging Cable



User's Manual



Short Strap



Long Strap



Camera Bag

An overview of the items included in the camera package, such as the camera, batteries, memory card, and various accessories.

3. SETUP

3.1 Installing the Memory Card and Battery

1. Push the TF card into its slot until it clicks into place. Ensure the card is inserted in the correct orientation.
2. Slide or press the lock to release the battery cover.
3. Insert the battery with correct direction, aligning the contacts properly.
4. Close the battery cover securely until it locks.



Visual instructions demonstrating the proper steps for inserting the TF memory card and rechargeable battery into the camera.

3.2 Charging the Battery

Connect the camera to a power source using the provided Type C cable. The charging indicator will illuminate during charging and turn off when fully charged. It is recommended to fully charge both batteries before first use.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press and hold the power button located on the top of the camera to turn it on or off.

4.2 Autofocus

The camera features an advanced 64MP autofocus system. To achieve sharp and clear images, gently press the shutter button halfway down. The camera will automatically adjust focus. Once focus is locked (indicated by a green frame on the screen), press the shutter button fully to capture the photo.



Demonstration of the innovative 64MP autofocus feature, showing how pressing the shutter halfway achieves sharper images.

4.3 180° Flip Screen


The 3.0-inch IPS screen can be flipped 180 degrees, making it ideal for self-portraits, vlogging, and monitoring your shots while in front of the camera.



The 3.0-inch 180° flip screen in action, demonstrating its utility for easy selfies and vlogging.

4.4 Digital Zoom

Utilize the 16X digital zoom to bring distant subjects closer. Adjust the zoom using the zoom lever on the camera body. Note that digital zoom may reduce image quality compared to optical zoom.

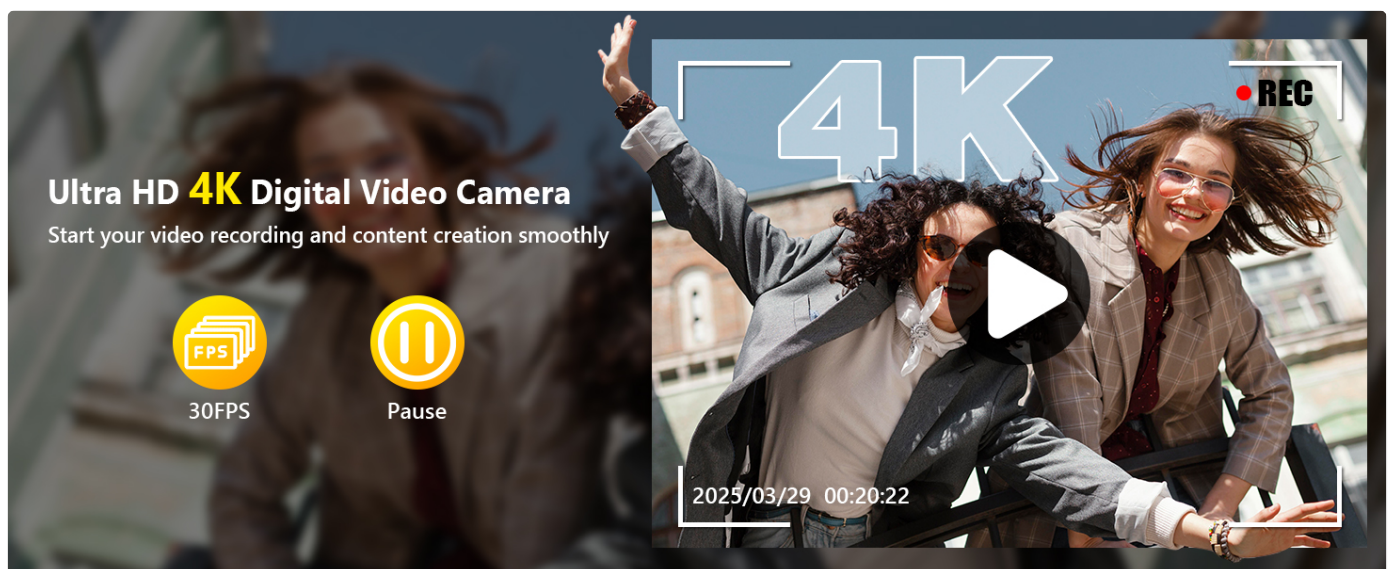

A visual representation of the 16X digital zoom capability, showing progressive magnification of a distant lighthouse.

4.5 Flashlight and Hotshoe

The camera features a built-in flashlight for illuminating subjects in low-light conditions. Additionally, a hotshoe mount is available for connecting external fill lights or microphones (sold separately) to enhance your recording setup.

How to **Connect** Via WIFI?

- 1. Long-press the camera's MENU button to enable the camera's WiFi.
- 2. Open the Wi-Fi settings of your phone, and connect to the Wi-Fi SSID named "DC102W-xxxx" and enter the password.
- 3. Start the App Viipulse and click "Add Camera"
- 4. Once added, you can access the camera's photos and videos!

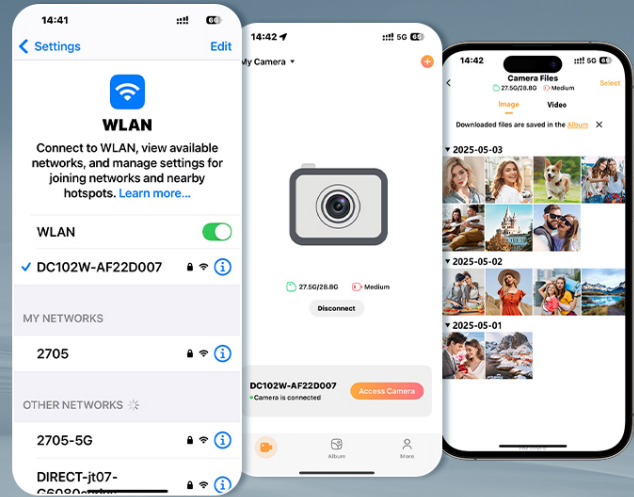


Illustration of the camera's hotshoe for external accessories and the effect of the built-in flashlight in low light.

4.6 Webcam Functionality

Connect the camera to your computer via the Type C cable to use it as a webcam for live streaming, video calls, or online meetings. Select 'PC Camera' mode on the camera when prompted.

4.7 Special Features

- **Time-Lapse Recording:** Capture sequences of images over time to create dynamic time-lapse videos.
- **Slow Motion:** Record videos in slow motion for dramatic effects.
- **Video Pause:** Pause and resume video recording within a single file, simplifying editing.
- **Anti-Shake:** Digital image stabilization helps reduce blur caused by camera movement, ensuring stable and clear pictures.
- **Filters & Exposure Compensation:** Apply various creative filters and adjust exposure compensation to fine-tune your photos.
- **Continuous Shooting:** Capture a rapid sequence of photos by holding down the shutter button.
- **Self-Timer:** Set a delay (2s, 5s, 10s) before the photo is taken, allowing you to get into the frame.
- **Smile & Face Detection:** The camera can automatically detect smiles and faces to optimize focus and exposure.
- **Beauty Face:** Enhance facial features in photos for a more flattering look.

How to contact sellers on Amazon?

Buy Now

Payment [Secure transaction](#)
Ships from Amazon
Sold by [TEFTYMON-US](#)

Have a question for TEFTYMON-US?

Ask a question

 
What can I help you with?

[An order I have placed](#)
[An item for sale](#)

A collage showcasing various camera functionalities such as webcam for live streaming, time-lapse, slow motion, smile capture, and beauty face mode.



A visual comparison demonstrating the effectiveness of the anti-shake feature, showing a clear image versus a blurry one without stabilization.

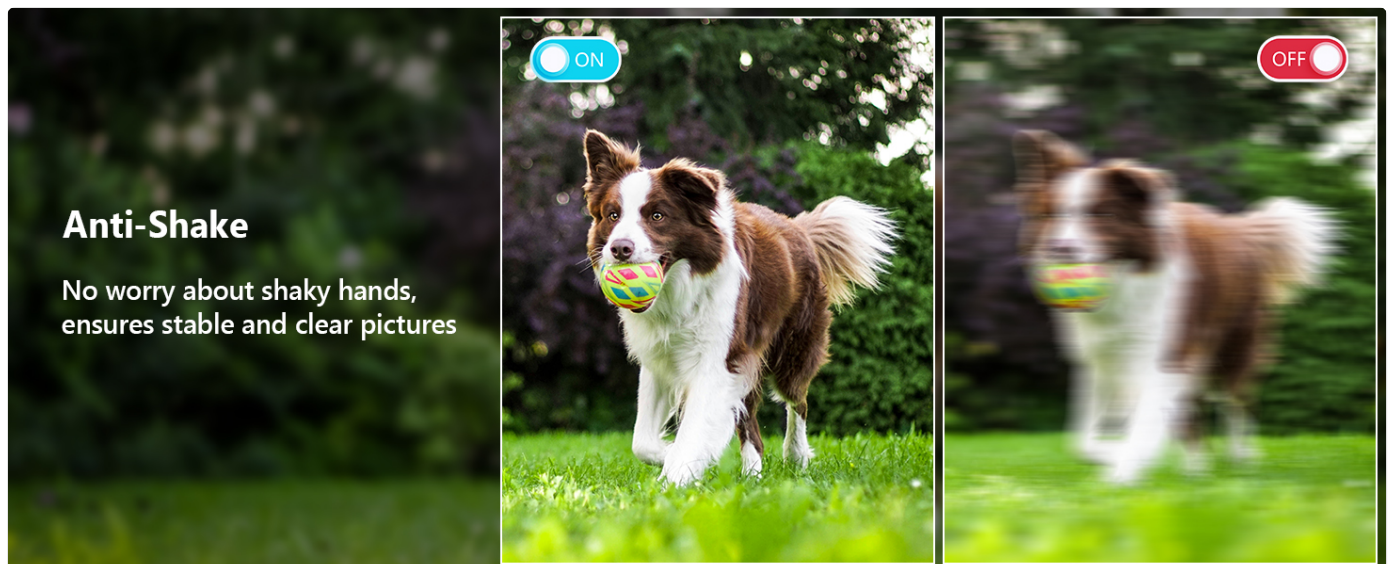

Examples of 20 different filter effects and 7 levels of exposure compensation available on the camera.

4.8 WiFi Connection and File Transfer

The camera features built-in WiFi for easy sharing and remote control via your smartphone.

Connecting via WiFi:

1. **Long-press the camera's MENU button** to enable the camera's WiFi.
2. **Open the Wi-Fi settings of your phone**, and connect to the Wi-Fi SSID named "DC102W-xxxx" and enter the password.
3. **Start the App Viipulse** and click "Add Camera".
4. Once added, you can access the camera's photos and videos!


20 Kinds of Filter Effects



7 Kinds of Exposure Compensation



 Diagram illustrating the WiFi connection process for easy sharing of photos and videos to social media platforms.

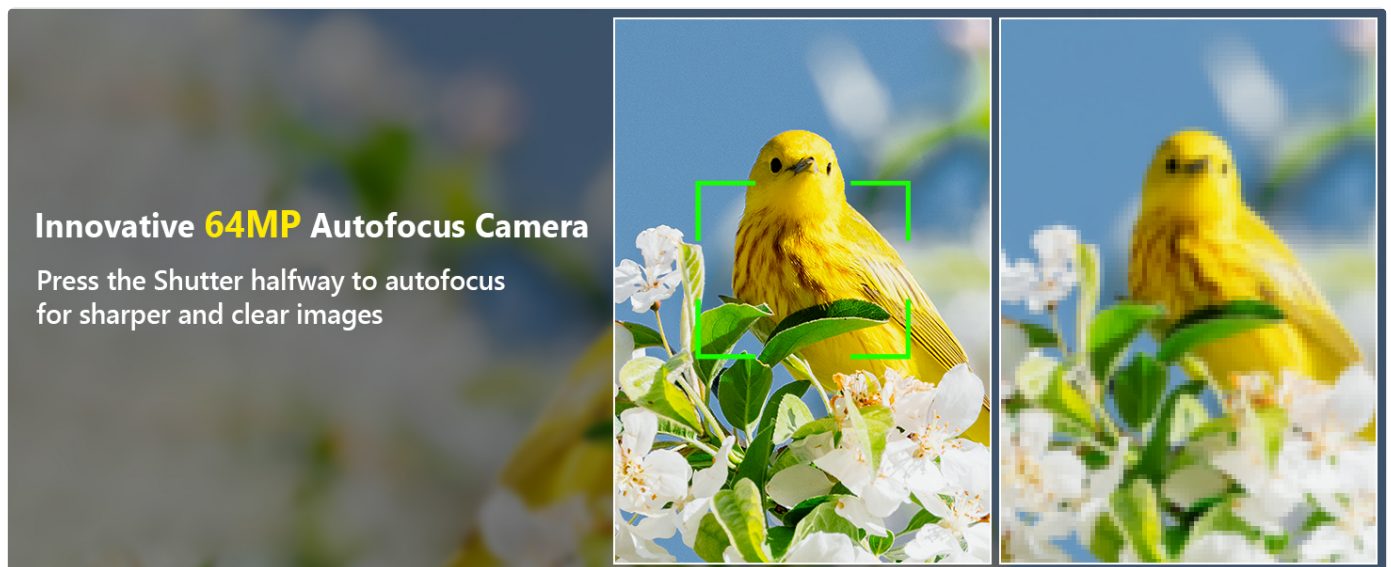

Detailed steps on how to connect the camera to a smartphone using WiFi, including app interface examples.


Downloading Files to Computer:

Connect the camera with your computer via the USB C cable. Then, select "MSDS" mode on the camera screen to access your files for easy download.

Hotshoe & Flashlight



Hotshoe can be connected with an external fill light or microphone.

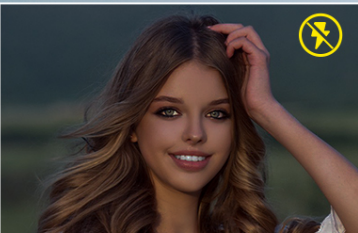

Built-in Flashlight ensures clear pictures even in low light conditions

Instructions on how to connect the camera to a computer using a USB-C cable for easy file transfer.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.
- **Battery Care:** Do not expose batteries to high temperatures or dispose of them in fire. Use only the provided charger and batteries.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on	Battery is dead or incorrectly inserted.	Charge the battery or reinsert it correctly.
Cannot take photos/videos	Memory card is full, locked, or not inserted.	Delete files, unlock the card, or insert it properly.
Images are blurry	Autofocus failed, camera shake, or dirty lens.	Ensure autofocus locks, use anti-shake, clean lens.
WiFi connection issues	Incorrect password, app not running, or signal interference.	Re-enter password, restart app/camera, move closer to camera.

7. SPECIFICATIONS

Feature	Detail
Model Name	DC101
Photo Sensor Resolution	64 MP
Video Resolution	2160p (4K)
Display Type	LCD
Screen Size	3 Inches (180° Flip Screen)
Digital Zoom	16x
Autofocus	Yes
Connectivity Technology	USB, Wi-Fi
Memory Storage Capacity	32 GB (included), supports up to 256 GB SDHC
Battery Type	Lithium Ion (2 included)
Special Features	Webcam, Hotshoe, Built-in Fill Light, Anti-Shake, Time Lapse, Slow Motion, Beauty Face, Continuous Shooting, Self-Timer, Smile Detection
Item Dimensions (D x W x H)	1.8"D x 4.5"W x 2.8"H

8. WARRANTY AND SUPPORT

Your TEFTYMON Digital Camera comes with a **1-Year Warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For any questions, technical assistance, or warranty inquiries, please contact our customer support team. We are committed to assisting you within 12 hours or less.



Our dedicated customer support team is available to assist you with any inquiries.

Protection Plans

Additional protection plans are available for purchase to extend coverage beyond the standard warranty:

- **2-Year Protection Plan:** Extends coverage for an additional 24 months.
- **3-Year Protection Plan:** Extends coverage for an additional 36 months.
- **Complete Protect:** A comprehensive plan covering eligible past and future purchases (monthly billing).

© 2025 TEFTYMON. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DMW2ZXBK>

More documents and user manuals: <https://manuals.plus/>