

[Manuals.plus](#) /

› [IINE](#) /

› IINE Mini Retro Wireless Controller User Manual

IINE B0DMW8MPHY

IINE Mini Retro Wireless Controller User Manual

Model: B0DMW8MPHY

1. PRODUCT OVERVIEW

The IINE Mini Retro Wireless Controller is a compact, pocket-sized gaming controller designed for multi-platform compatibility. It supports classic and retro games across various systems, including Nintendo Switch/OLED, PC (X-input), Android, and iOS devices. Weighing only 35 grams, it is highly portable and features a durable design with an iconic D-pad. The controller also includes a turbo function for enhanced gameplay and can be used for various multi-functional tasks beyond gaming, such as navigating flashcards or presentations.



Figure 1: IINE Mini Retro Wireless Controller (Black)

This image displays the black version of the IINE Mini Retro Wireless Controller, highlighting its compact size and button layout, including the D-pad, A/B/X/Y buttons, and Capture/Home buttons. A wrist strap is attached for portability.

2. PACKAGE CONTENTS


Please verify that all items are present in your package:

- 1 × IINE Mini Retro Wireless Controller
- 1 × User Manual
- 1 × Keychain
- 1 × USB-C Charging Cable

3. SPECIFICATIONS

Feature	Description
Product Name	IINE Mini Retro Ananke Controller
Material	PC, Copper
Compatibility	Nintendo Switch/OLED, PC (X-input), Android, iOS (native gamepad games only)
Dimensions	2.75 x 1.69 x 0.62 inches (approx. 70 x 43 x 16 mm)
Weight	Approx. 35 grams (0.002 ounces)
Battery Life	Up to 16 hours of gaming time on a single charge
Battery Type	Rechargeable (USB-C charging)
Features	Turbo function, Interchangeable D-pad/Joystick functionality, Keychain/Hand strap included

DETAILED PARAMETERS

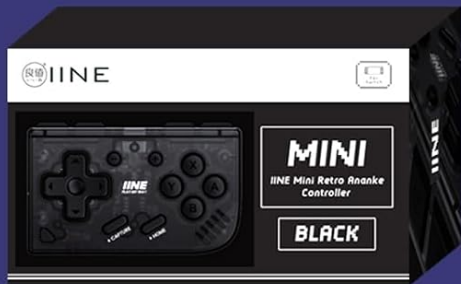

- Product Name: IINE Mini Retro Ananke Controller
- Material: PC, Copper
- Compatible: Switch/PC/Android/iOS
- Size: 2.75*1.69*0.62(inch)
- Quality: Pass
- List: Controller*1, Charging Cable*1, Manual*1

Figure 2: Detailed Product Parameters

This image provides a visual representation of the controller's dimensions and lists its key specifications, including material, compatibility, and included accessories.

4. SETUP & CONNECTION

The IINE Mini Retro Wireless Controller offers versatile connectivity across multiple platforms. Ensure your device's Bluetooth is enabled before attempting to pair.

4.1 Pairing with Nintendo Switch/OLED

1. On your Nintendo Switch, navigate to the "Controllers" menu.
2. Select "Change Grip/Order" or "Find Controllers".
3. Press and hold the **[Pairing]** button on the top edge of the IINE Mini Retro Controller until the indicator lights begin to flash.
4. The Switch will detect the controller. Once detected, press the **[Home]** button to wake up the Switch from sleep mode or confirm connection.

Your browser does not support the video tag.

Video 1: Introduction of IINE Mini Controller

This video demonstrates the compact size of the controller, its compatibility with Anki software for word memorization, the ability to wake up a Nintendo Switch, the D-pad and joystick swap function, portability with the hand strap, and compatibility with Android, iOS, and Switch devices for various emulator games.

4.2 Pairing with PC (Windows)

1. Ensure Bluetooth is enabled on your PC.
2. Press and hold the **[B + Home]** buttons on the controller until the indicator lights flash.
3. On your PC, go to Bluetooth settings and select "Add device" or "Add Bluetooth or other device".
4. Choose "Bluetooth" and select "Pro Controller" or similar from the list of available devices.
5. The controller will connect as an X-input device.

4.3 Pairing with Android Devices

1. Enable Bluetooth on your Android phone or tablet.
2. Press and hold the **[B + Pairing]** buttons on the controller until the indicator lights flash.
3. In your Android device's Bluetooth settings, search for new devices and select "Pro Controller" or similar to pair.
4. The controller is compatible with native gamepad games on the Android app store.

4.4 Pairing with iOS Devices

1. Enable Bluetooth on your iOS device (iPhone, iPad).
2. Press and hold the **[B + Pairing]** buttons on the controller until the indicator lights flash.
3. In your iOS device's Bluetooth settings, search for new devices and select "Pro Controller" or similar to pair.
4. Note: This controller can only support native gamepad games on the iOS App Store.

DIVE INTO COUNTLESS GAMES

Support Multi-Platform Gaming



• SWITCH



• PC



• ANDROID



• IOS

Note: Can only support native gamepad games on iOS APP Store

Figure 3: Multi-Platform Compatibility

This image illustrates the controller's broad compatibility with various gaming platforms, including Nintendo Switch, PC, Android smartphones, and iOS devices, allowing users to dive into countless games.

5. OPERATING INSTRUCTIONS

5.1 Turbo Function

The controller features a turbo function, allowing users to adjust the shooting speed for rapid input. This is particularly useful for games requiring fast button presses, such as otome games or for quickly turning pages in digital documents.

- To activate Turbo: Press and hold the **[Turbo]** button, then press the desired action button (e.g., A, B, X, Y).
- To adjust Turbo speed: While holding the **[Turbo]** button, use the **[+]** or **[-]** buttons to cycle through different turbo speeds.
- To deactivate Turbo: Press and hold the **[Turbo]** button, then press the action button again.

5.2 D-pad and Joystick Swap

For certain games or preferences, the functionality of the D-pad and the left joystick can be swapped. This allows for greater flexibility in control schemes.

- To swap D-pad and Joystick: Press and hold the **[Turbo]** button and the **[-]** button simultaneously. The controller's input mode will switch. Repeat the action to revert to the original setting.

5.3 Multi-functional Use

Beyond gaming, this controller can serve as a convenient multi-function tool:

- **Drawing Applications:** Use the controller for shortcuts in drawing software.
- **Word Memorization:** Compatible with software like Anki for navigating flashcards.
- **Presentations:** Easily turn pages in PPT presentations.



Figure 4: Key Features and Versatility

This image highlights the controller's multi-platform support, retro and portable design, turbo function, and the presence of ZL/ZR buttons. It also shows the controller's use for various tasks like navigating flashcards, playing adventure games, and assisting with drawing or page-flipping.

6. CHARGING

The IINE Mini Retro Wireless Controller is equipped with a rechargeable battery. Use the provided USB-C charging cable to charge the device.

- Connect the USB-C end of the cable to the controller's charging port.
- Connect the USB-A end to a compatible USB power source (e.g., computer USB port, wall adapter).
- A full charge provides up to 16 hours of gaming time.
- There is no explicit battery indicator mentioned in the product details, but the controller might act erratically or provide weird inputs when the battery is critically low.

7. TROUBLESHOOTING

If you encounter issues with your IINE Mini Retro Wireless Controller, please refer to the following common solutions:

- **Controller Not Responding/Frozen:** If the controller becomes unresponsive, it may need a reset. Locate the small reset hole on the back of the controller. Insert a thin object (like a paperclip) into the hole and press the hidden button inside to perform a hard reset.
- **Pairing Difficulties:** Ensure Bluetooth is enabled on your target device and that the controller is in the correct

pairing mode for that device (refer to Section 4). Try turning off and on both the controller and the device's Bluetooth.

- **Buttons Not Mapping Correctly (Android):** Some emulators or applications on Android may not automatically map all buttons. Check the in-app settings of your emulator or game for custom button mapping options.
- **Low Battery Indication:** While there isn't a dedicated battery indicator, the controller might act erratically or provide weird inputs when the battery is critically low. Charge the controller fully if you experience such symptoms.
- **Connectivity Issues:** If experiencing frequent disconnections, ensure there are no significant obstructions between the controller and your device, and that you are within the effective Bluetooth range.

8. WARRANTY & SUPPORT

For any questions regarding the product, technical support, or warranty claims, please feel free to contact the seller directly via the platform's QA section or email. Retain your purchase receipt for warranty purposes.

IINE is committed to providing quality gaming accessories and support for its products.

© 2025 IINE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question