

[Manuals.plus](#) /

› [OCZWV](#) /

› OCZWV WD28X10128 Universal Dishwasher Silverware Basket Instruction Manual

OCZWV WD28X10128

OCZWV WD28X10128 Universal Dishwasher Silverware Basket Instruction Manual

Model: WD28X10128

1. PRODUCT OVERVIEW

The OCZWV WD28X10128 Universal Dishwasher Silverware Basket is designed to replace worn or damaged silverware baskets in various dishwasher models. Constructed from stainless steel, it offers enhanced durability and corrosion resistance compared to traditional plastic baskets. Its universal design ensures compatibility with many major dishwasher brands and models.

This basket features multiple compartments for efficient organization of utensils, promoting thorough cleaning and preventing items from nesting or overlapping during the wash cycle. The fine mesh design helps prevent small items from falling through and potentially damaging the dishwasher's spray arm.



Figure 1: The OCZWV WD28X10128 Universal Dishwasher Silverware Basket.

2. COMPATIBILITY AND DIMENSIONS

This silverware basket is compatible with a wide range of dishwasher brands and models, including those from GE, Whirlpool, Kenmore, Maytag, Frigidaire, KitchenAid, Samsung, and LG. It is designed to replace baskets with part numbers such as WD28X10128, EA959351, WD28X10132, PS959351, WD28X10127, AH959351, WP8562043, and WD28X10131.

Before installation, verify that your dishwasher's lower rack area can accommodate the basket's dimensions. The minimum required lower height of your dishwasher must be greater than 10 inches for proper use.

- **Length:** 19 inches (approximately 48.26 cm)
- **Width:** 3.27 inches (approximately 8.31 cm)
- **Height:** 5.12 inches (approximately 13.00 cm), 7.87 inches (approximately 20.00 cm) including the cover.

Suitable for the following scenarios



Compatible with the following brands

For GE

PDW8200J03WW

PDWT380R10SS

CDW9380N20SS

PDWF400P00CC

CDWT280V05SS

PDW8280J03SS

PDW8200N00WW

GDWF100V55BB

PDW9280J10SS

PDWT280V00SS

ZBD6880N20SS

PDWT180R10SS

PDW8280J10SS

ZBD6880K10SS

PDWT380R30SS

GDWT368V55SS

PDWF400P00WW

PDW8280J00SS

GLD4408R00BB

GDWF100R30BB

GDWF100V55WW

PDW8280N00SS

PDW9280N00SS

PDW8200N00BB

PDWT180R30SS

ZBD6880K03SS

etc...

Figure 2: Detailed dimensions of the silverware basket. Please measure your dishwasher's available space before purchase.



Figure 3: The silverware basket shown within a dishwasher, highlighting its dimensions and fit.

3. SETUP AND INSTALLATION

Installation of the OCZWV WD28X10128 silverware basket is a straightforward process and typically requires no specialized tools.

1. **Remove Old Basket:** Carefully remove your existing silverware basket from the dishwasher's lower rack.
2. **Position New Basket:** Place the new stainless steel silverware basket onto the lower rack of your dishwasher. Ensure it sits securely and does not obstruct the spray arms or other moving parts.
3. **Verify Clearance:** Confirm that the lower height of your dishwasher is greater than 10 inches to allow for proper placement and operation of the basket, especially when the lid is open.



Easy to use
with handles



Has multiple
compartments



Made of high quality
304 stainless steel

PRODUCT DETAILS

It is suitable for all models of dishwashers that as long as your dishwasher can hold it.

It can also be used in the kitchen for loading knives and forks.

It can also be hung up as a draining basket.



Figure 4: The basket features multiple compartments and handles for easy placement and removal.

4. OPERATING INSTRUCTIONS

To achieve optimal cleaning results and ensure the longevity of your silverware and the basket:

1. **Load Utensils:** Place silverware and cutlery into the designated compartments. For best cleaning, mix forks and spoons with handles down, and knives with handles up. This prevents nesting and allows water to reach all surfaces.
2. **Utilize Lids:** The basket includes lids that can be opened at 90 degrees. When washing small items or to prevent lighter utensils from being displaced by water jets, close the lids over the compartments. Ensure the lids are open when loading taller items or for general use to allow for proper water circulation.
3. **Avoid Overloading:** Do not overfill the basket. Overloading can hinder water circulation and lead to inefficient cleaning.



Figure 5: Proper loading of silverware in the basket for effective cleaning.

Your browser does not support the video tag.

Video 1: Demonstration of the silverware basket's features, including its compartments and how the flaps can be opened.

5. MAINTENANCE AND CARE

The stainless steel construction of this basket ensures durability and corrosion resistance. To maintain its condition and hygiene:

- **Regular Cleaning:** Periodically remove the basket from the dishwasher and rinse it under running water to remove any food debris that may have accumulated in the mesh.
- **Deep Cleaning:** For a more thorough clean, the basket can be easily disassembled. Wash with warm, soapy water and a soft brush if necessary. Rinse thoroughly and allow to air dry before reassembling.
- **Inspection:** Regularly inspect the basket for any signs of wear or damage. While designed for durability, prompt attention to any issues can extend its lifespan.

WHY CHOOSE US?

- Poorly cleaned
- Lost or damaged
- Tableware
- Lids falling off

Crafted from high-quality 304 stainless steel



Small cutlery falls and damages the dishwasher wall



Basket cracked at the bottom and cutlery fell out



Figure 6: The basket is designed for easy disassembly and cleaning, ensuring hygiene and longevity.

6. TROUBLESHOOTING

If you encounter any issues with your silverware basket, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Utensils not cleaning properly	Overloading, improper loading, obstructed spray arm.	Ensure basket is not overloaded. Load utensils with sufficient space between them. Check that the basket does not block the dishwasher's spray arms.
Small items falling through	Lids not closed, very small items.	Ensure the compartment lids are closed when washing small items. For extremely small items, consider hand washing or using a dedicated small item holder if available in your dishwasher.

Problem	Possible Cause	Solution
Basket not fitting securely	Incorrect dimensions, obstruction.	Re-verify your dishwasher's internal dimensions against the basket's specifications. Ensure no debris or other items are preventing the basket from sitting flush on the lower rack.



Figure 7: Addressing common issues like old baskets falling apart or not cleaning properly with the upgraded design.

7. SPECIFICATIONS

- **Model Number:** WD28X10128
- **Material:** Stainless Steel
- **Color:** Stainless Steel
- **Dimensions (L x W x H):** 19 x 3.27 x 5.12 inches (7.87 inches including cover)
- **Item Weight:** 1.6 pounds
- **Compatibility:** Universal fit for many major dishwasher brands (GE, Whirlpool, Kenmore, Maytag, Frigidaire, KitchenAid, Samsung, LG) and specific part numbers (WD28X10128, EA959351, WD28X10132, PS959351, WD28X10127, AH959351, WP8562043, WD28X10131).
- **Included Components:** Stainless steel Dishwasher Silverware Basket

8. WARRANTY AND SUPPORT

The OCZWV WD28X10128 Universal Dishwasher Silverware Basket comes with a **6-month warranty** from the date of

purchase.

For any questions, concerns, or support needs regarding your product, please contact our professional feedback team.

We are committed to providing a satisfactory solution within 12 hours.

Please refer to your purchase documentation or the retailer's website for specific contact information.

