#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- MUSE /
- > MUSE M530KA Portable Bluetooth Karaoke Speaker User Manual

#### MUSE M-530 KA

# MUSE M530KA Portable Bluetooth Karaoke Speaker User Manual

Model: M-530 KA

## 1. Introduction

The MUSE M530KA is a portable Bluetooth karaoke speaker designed for entertainment. It features 30W power output, 6 dynamic light modes, and an IPX5 splash-resistant rating, making it suitable for various environments. The speaker includes accompaniment sound, 3 equalization modes, and multiple connectivity options for versatile audio playback.

#### **Key Features:**

- 30W Power Output
- 6 Light Modes
- IPX5 Splash Resistance
- · Accompaniment Sound Function
- 3 Equalization Modes
- · Auxiliary Input, Headphone Jack, Microphone Input
- USB Port for MP3 Playback
- · USB-C for Battery Charging
- Includes 2 Wireless Microphones



Figure 1: The MUSE M530KA portable Bluetooth karaoke speaker, showcasing its compact design and integrated LED lighting.

# 2. Setup

## 2.1. Unboxing and Components

Carefully remove all items from the packaging. Ensure all components are present:

- MUSE M530KA Karaoke Speaker
- 2 Wireless Microphones
- USB-C Charging Cable
- Quick Start Guide



Figure 2: Included accessories: the speaker, two wireless microphones, and the USB-C charging cable.

## 2.2. Charging the Speaker

Before first use, fully charge the speaker's internal battery using the provided USB-C cable. Connect the USB-C end to the speaker's charging port and the USB-A end to a compatible USB power adapter (not included).



Figure 3: Charging the speaker via its USB-C port. The speaker is portable once charged.

#### 2.3. Microphone Battery Installation

The wireless microphones require batteries (type not specified, typically AA or AAA). Open the microphone's battery compartment, insert the batteries according to the polarity markings, and close the compartment securely.

Your browser does not support the video tag.

Video 1: Demonstrates how to install batteries into wireless microphones and operate the speaker's controls. This video features a similar product (S55), but the general steps apply.

# 3. Operating Instructions

#### 3.1. Power On/Off

Locate the power button on the control panel. Press and hold to turn the speaker on or off. The LED display will illuminate upon powering on.

#### 3.2. Bluetooth Connection

- 1. Turn on the MUSE M530KA speaker. It will automatically enter Bluetooth pairing mode.
- 2. On your smartphone or other Bluetooth-enabled device, go to the Bluetooth settings.

- 3. Search for "MUSE M530KA" (or similar name like "M-530 KA") in the list of available devices.
- 4. Select the speaker to pair. A confirmation sound will indicate a successful connection.

#### Your browser does not support the video tag.

Video 2: Overview of a portable karaoke machine with wireless microphones, demonstrating Bluetooth 5.2 connectivity and various input options. This video features a similar product, but the general connection steps and features apply.

#### 3.3. Auxiliary Input (AUX)

Connect an external audio device (e.g., MP3 player, computer) to the speaker's AUX IN port using a 3.5mm audio cable. The speaker will automatically switch to AUX mode or you may need to select it using the mode button.

#### 3.4. USB MP3 Playback

Insert a USB flash drive containing MP3 audio files into the USB port. The speaker will automatically detect the drive and begin playing music. Use the playback controls (play/pause, next/previous track) on the speaker to manage your music.

#### 3.5. Microphone Usage

- Microphone Volume: Adjust the "MIC VOL" knob on the control panel to increase or decrease the microphone's volume.
- Echo Effect: Use the "ECHO" knob to add or reduce the echo effect on your voice.
- Accompaniment Sound: The speaker supports accompaniment sound, allowing you to sing along to music with reduced vocals. Refer to the quick start guide for specific controls related to this feature.

#### 3.6. Light Modes

The speaker features 6 dynamic light modes. Use the dedicated "LED" button on the control panel to cycle through the different lighting effects or turn them off.



Figure 4: The speaker's dynamic LED lights enhance the karaoke experience.

#### 3.7. Equalization Modes

The speaker offers 3 equalization modes to optimize sound for different music genres. Use the "BASS" and "TREBLE" knobs to fine-tune the audio output to your preference.

#### 4. Maintenance

- Keep the speaker and microphones dry. Avoid exposure to excessive moisture or liquids, despite its IPX5 rating.
- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the device in a cool, dry place when not in use.
- Remove batteries from microphones if storing for extended periods to prevent leakage.

## 5. Troubleshooting

- No Power: Ensure the speaker is fully charged. Check the USB-C connection.
- **No Sound:** Check the master volume and individual microphone/music volumes. Ensure Bluetooth is connected or the correct input mode (AUX/USB) is selected.
- **Microphone Not Working:** Ensure microphone batteries are correctly installed and charged. Power on the microphone. Check microphone volume.

• **Bluetooth Disconnection:** Ensure the speaker and connected device are within the effective range (typically up to 10 meters). Disconnect and re-pair the device.

# 6. Specifications

Feature	Detail
Brand	MUSE
Model Number	M-530 KA
Color	Black
Connectivity Technology	Bluetooth, USB Type A, USB Type C, 3.5mm Jack, Auxiliary
Special Feature	Integrated Microphone
Compatible Devices	MP3 Player, Smartphone
Power Source	Electrical Network (Rechargeable Battery)
Included Components	Quick Start Guide, Microphone

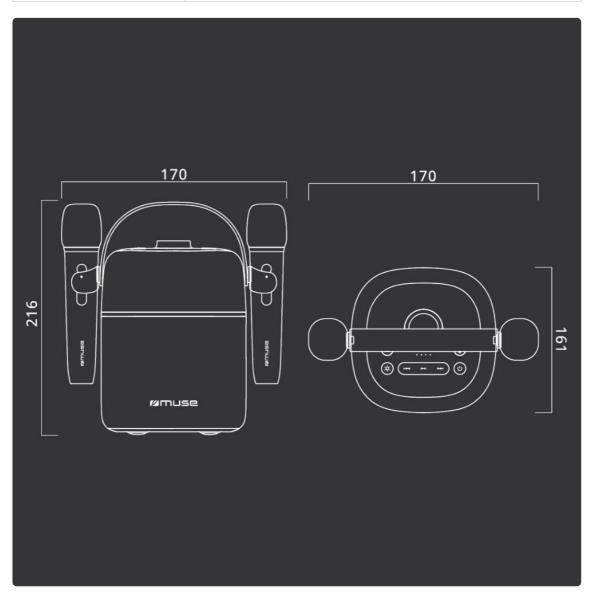


Figure 5: Dimensions of the MUSE M530KA speaker.

# 7. Warranty and Support

The MUSE M530KA comes with a three-year manufacturer's warranty against manufacturing defects. For warranty claims or technical support, please refer to the contact information provided in the Quick Start Guide or visit the official MUSE website.

Spare parts availability information is not available. Software updates are not guaranteed.

© 2024 MUSE. All rights reserved.

## Related Documents - M-530 KA

	MUSE M-35 BT User Manual: Portable CD/MP3 Player with Bluetooth & USB Comprehensive user manual for the MUSE M-35 BT portable radio, CD, and MP3 player. Learn how to use Bluetooth, USB playback, FM radio, and all features of this versatile audio device.
	MUSE M-238 BC Bone Conduction Earphones with MP3 Player - User Manual User manual for the MUSE M-238 BC bone conduction earphones with built-in MP3 player. Learn about setup, operation, Bluetooth pairing, charging, specifications, and safety warnings.
	Muse M-1009 MR Car Radio CD/MP3 Player with USB & Micro SD User Manual Comprehensive user manual for the Muse M-1009 MR car radio, covering installation, operation, features, troubleshooting, and specifications for CD, MP3, USB, and Micro SD playback.
FITTURE:	MUSE M-092 MR Car Radio MP3 Player User Manual Comprehensive user manual for the MUSE M-092 MR car radio, covering safety instructions, device description, basic operations, audio features, radio listening, USB/Micro SD playback, auxiliary input, maintenance, troubleshooting, and technical specifications.
POTTUSES  Satural Seasons	Muse M-1380 DBT Bluetooth Speaker User Manual Comprehensive user manual for the Muse M-1380 DBT Bluetooth speaker, covering setup, operation, features like DAB+/FM radio, CD playback, USB, Bluetooth, NFC, and troubleshooting.
emuse +	Manuel d'utilisation MUSE M-198 DAB : Autoradio DAB+/FM avec Bluetooth et USB Découvrez le manuel d'utilisation complet pour l'autoradio MUSE M-198 DAB. Apprenez à utiliser ses fonctions DAB/FM, Bluetooth, lecture USB/SD, et plus encore pour une expérience audio optimale dans votre véhicule.