

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EMERIO](#) /

› [EMERIO WK-132230 Stainless Steel Kettle User Manual](#)

EMERIO WK-132230

EMERIO WK-132230 Stainless Steel Kettle User Manual

Model: WK-132230

INTRODUCTION

Thank you for choosing the EMERIO WK-132230 Stainless Steel Kettle. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.

The EMERIO WK-132230 kettle features a 1.7-liter capacity, double-wall insulation, precise temperature control from 40°C to 100°C, pre-programmed tea settings, and a BPA-free design, ensuring a safe and convenient experience for heating water.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury, do not immerse cord, plugs, or the power base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Always ensure the lid is securely closed during operation.
- Do not overfill the kettle above the maximum fill line, as boiling water may be ejected.
- Do not operate the kettle if it is underfilled below the minimum fill line, as this may cause damage to the heating element.

- The kettle is designed for heating water only. Do not heat other liquids or food.
- This appliance is equipped with boil-dry protection. If the kettle is accidentally switched on without water, it will automatically switch off. Allow it to cool down before refilling.

PRODUCT OVERVIEW

The EMERIO WK-132230 kettle features a sleek design with a matte black finish and a wooden-look handle. Its double-wall construction ensures efficient insulation and a cool-touch exterior.

- Kettle Body (Stainless Steel Interior, Plastic Exterior)
- Hinged Lid
- Heat-Resistant Handle
- Digital Display with Touch Controls
- Power Base with Cord Storage
- Concealed Heating Element
- Water Level Markings (Min/Max)

Zum Kochen gebaut, Für die Ewigkeit gemacht

Langlebiges 304 Edelstahl & smartes Sicherheitsdesign.



Lebensmittelechter
Edelstahl



Füllmenge 1,7 L



Abgedecktes
Heizelement



Figure 1: Kettle Interior and Capacity. This image displays the interior of the EMERIO WK-132230 kettle, highlighting its food-grade stainless steel lining and the 1.7-liter maximum fill line. The concealed heating element is also visible at the bottom.

SETUP

- Unpacking:** Carefully remove the kettle and all accessories from the packaging. Retain the packaging for future storage or transport.
- Placement:** Place the power base on a dry, flat, and stable surface, away from the edge of the counter and out of reach of children. Ensure there is sufficient space around the kettle for steam to escape.
- First Use Cleaning:** Before using for the first time, fill the kettle with fresh water up to the maximum fill line. Boil the water (100°C) and then discard it. Repeat this process 2-3 times to remove any manufacturing residues.

OPERATING INSTRUCTIONS

- Filling the Kettle:** Open the hinged lid and fill the kettle with fresh water. Do not fill below the minimum (MIN) mark or above

the maximum (MAX) mark (1.7 liters). Close the lid securely.

2. **Placing on Power Base:** Place the kettle firmly onto the power base. Ensure it is properly seated.

3. **Powering On and Temperature Selection:**



Figure 2: Digital Display and Controls. This image illustrates the kettle's digital display, which includes temperature adjustment buttons, pre-programmed tea temperature settings, the keep warm function button, and the power on/off button.

- Press the power button (**An/Aus** on the display image) to turn on the kettle. The digital display will illuminate.
- **Manual Temperature Selection:** Use the temperature adjustment buttons (**Temperatur einstellung** on the display image, represented by '+' and '-' symbols) to select your desired temperature between 40°C and 100°C in 5°C increments. The current temperature will be displayed prominently.
- **Pre-programmed Tea Varieties:** The display offers 4 pre-programmed temperature settings optimized for different types of tea (e.g., green tea, black tea, herbal tea). Touch the corresponding icon to select.
- Once the desired temperature is set, the kettle will begin heating the water. The display will show the water's current temperature as it heats.

4. **Keep Warm Function:** After selecting your desired temperature, press the keep warm button (**Warmhaltefunktion** on the display image, represented by a wavy line icon). The kettle will maintain the selected temperature for up to 2 hours.

5. **Automatic Shut-off:** The kettle will automatically switch off once the selected temperature is reached or if it is lifted from the power base during operation.

6. **Pouring:** Carefully lift the kettle from its base and pour the hot water. The drip-free spout ensures clean pouring.

MAINTENANCE

Regular cleaning and maintenance will prolong the life of your kettle.

- Cleaning the Exterior:** Unplug the kettle and allow it to cool completely. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- Cleaning the Interior:** For general cleaning, rinse the interior with fresh water. Do not use abrasive materials that could scratch the stainless steel.
- Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. Descale your kettle regularly (e.g., monthly or every two months) to maintain efficiency.
 - Fill the kettle with a mixture of water and white vinegar (1:1 ratio) or a citric acid solution (follow product instructions).
 - Boil the solution and let it stand for at least 30 minutes, or longer for heavy scale.
 - Discard the solution and rinse the kettle thoroughly with fresh water several times to remove any residue and odor.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	No power supply. Kettle not properly seated on base.	Check if the plug is securely in the outlet. Ensure the kettle is correctly placed on the power base.
Water is not heating.	Kettle is underfilled. Boil-dry protection activated.	Ensure water level is between MIN and MAX marks. If boil-dry protection activated, unplug, let cool, then refill and restart.
Kettle switches off before boiling/reaching target temperature.	Limescale buildup.	Descale the kettle as described in the Maintenance section.
Water has an unusual taste or odor.	First use residues. Limescale buildup.	Perform first use cleaning again. Descale the kettle.

SPECIFICATIONS

Feature	Detail
Brand	EMERIO
Model Number	WK-132230
Color	Black/Wood look
Capacity	1.7 Liters
Power	2200 Watts
Voltage	230 Volts (AC)

Feature	Detail
Material	Stainless Steel, Plastic
Product Dimensions (L x W x H)	22.6 x 16 x 26 cm (approximate)
Item Weight	1.07 Kilograms
Special Features	Digital Display, Automatic Shut-off, Swivel Base, Drip-free Spout, Concealed Heating, Temperature Control, Digital Control, Hinged Lid, Double Wall, Heat-resistant Handle, Overheat Protection, Boil-dry Protection, One-touch Preset, Cordless, One-handed Operation, Indicator Light, Rapid Boiling
BPA-Free	Yes (all plastic parts in contact with food)

Kompakt. Clever. Empfohlen.

Erhitzt Wasser für jegliche Teesorten **ab 40°C, 360° drehbar auf der Basis und integriert sich ganz einfach in jede Küche.**



Figure 3: Kettle Dimensions. This image provides a visual representation of the EMERIO WK-132230 kettle's dimensions, indicating a height of 26 cm and a width of 22.5 cm.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

