

BLOKEES CC11

BLOKEES Transformers Classic Class Optimus Prime Model CC11 Instruction Manual

Model: CC11 | Brand: BLOKEES

INTRODUCTION

This instruction manual provides detailed guidance for the assembly, operation, and maintenance of your BLOKEES Transformers Classic Class Optimus Prime Model CC11. This officially licensed collectible figure features dynamic articulation, light-up effects, and movie-accurate details, designed for fans and collectors aged 12 and up.

SAFETY INFORMATION

WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.

Please keep all packaging materials and small components away from young children to prevent accidental ingestion.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Optimus Prime Figure (unassembled parts on runners)
- Interchangeable Hands (multiple pairs)
- Character-Specific Weapons (e.g., Energon Axe, Blaster)
- Display Stand Base
- Batteries (pre-installed for LED effects)
- Instruction Manual (this document)

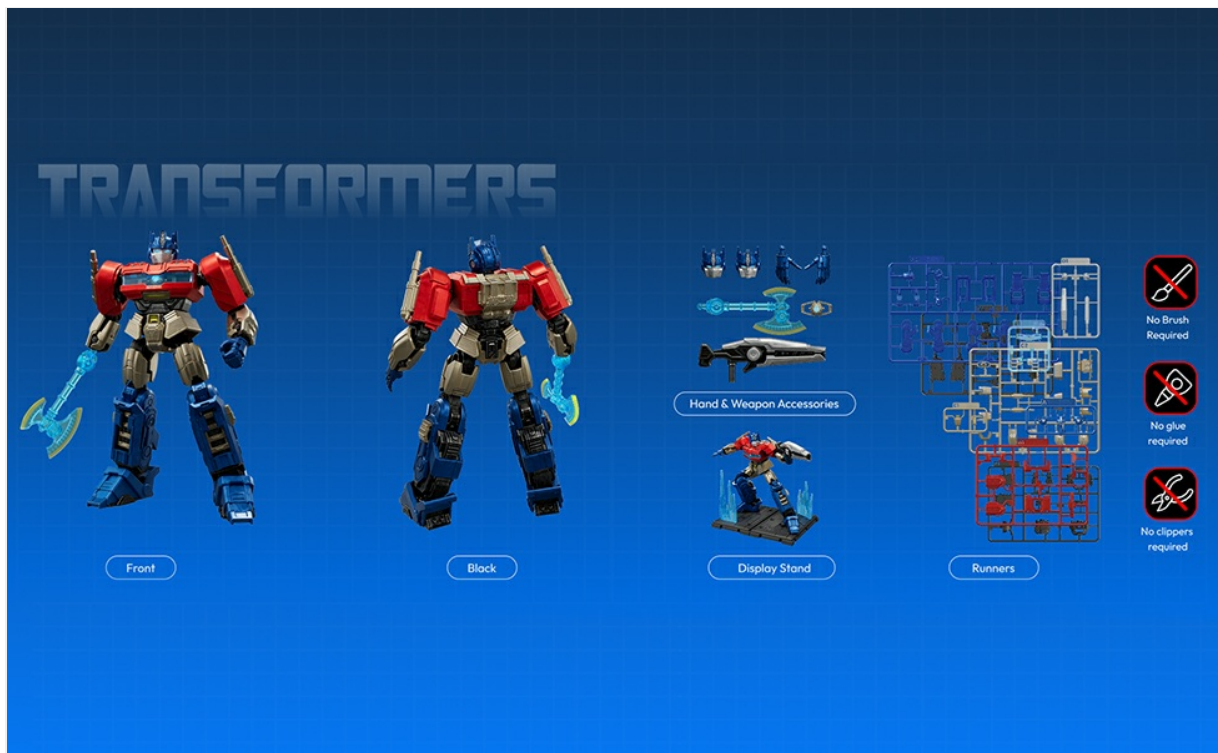


Figure 1: Overview of Optimus Prime components and accessories.

ASSEMBLY INSTRUCTIONS

The BLOKEES Optimus Prime figure is designed for easy snap-together assembly. No glue or special tools are required. Follow the step-by-step diagrams provided in the included printed instructions for best results.

1. Carefully remove all parts from the runners. Use a hobby nipper or twist parts gently to avoid stress marks.
2. Identify corresponding parts for each section (e.g., head, torso, arms, legs).
3. Assemble the torso first, ensuring all connections are secure.
4. Attach the arms and legs, paying attention to the correct orientation for articulation.
5. Connect the head to the assembled body.
6. Assemble the weapons and display stand as per the diagrams.
7. Ensure all joints move freely after assembly.



Figure 2: Fully assembled Optimus Prime figure on its display stand.

OPERATING INSTRUCTIONS

Your Optimus Prime figure features several interactive elements:

- **LED Light-Up Effects:** The figure includes built-in LED lights in the eyes and chest. These are powered by pre-installed batteries. To activate, locate the small switch on the back of the figure's head or torso (refer to the printed manual for exact location). Remove any plastic battery tab if present.
- **Dynamic Articulation:** The figure boasts over 20 movable joints, allowing for a wide range of battle-ready poses. Gently manipulate the joints to achieve desired stances. Avoid excessive force to prevent damage.
- **Interchangeable Parts:** Swap out hands and weapons to customize your display. Ensure parts click securely into place.
- **Display Stand:** Use the included display stand to stabilize the figure in dynamic poses. The stand provides additional support and enhances presentation.

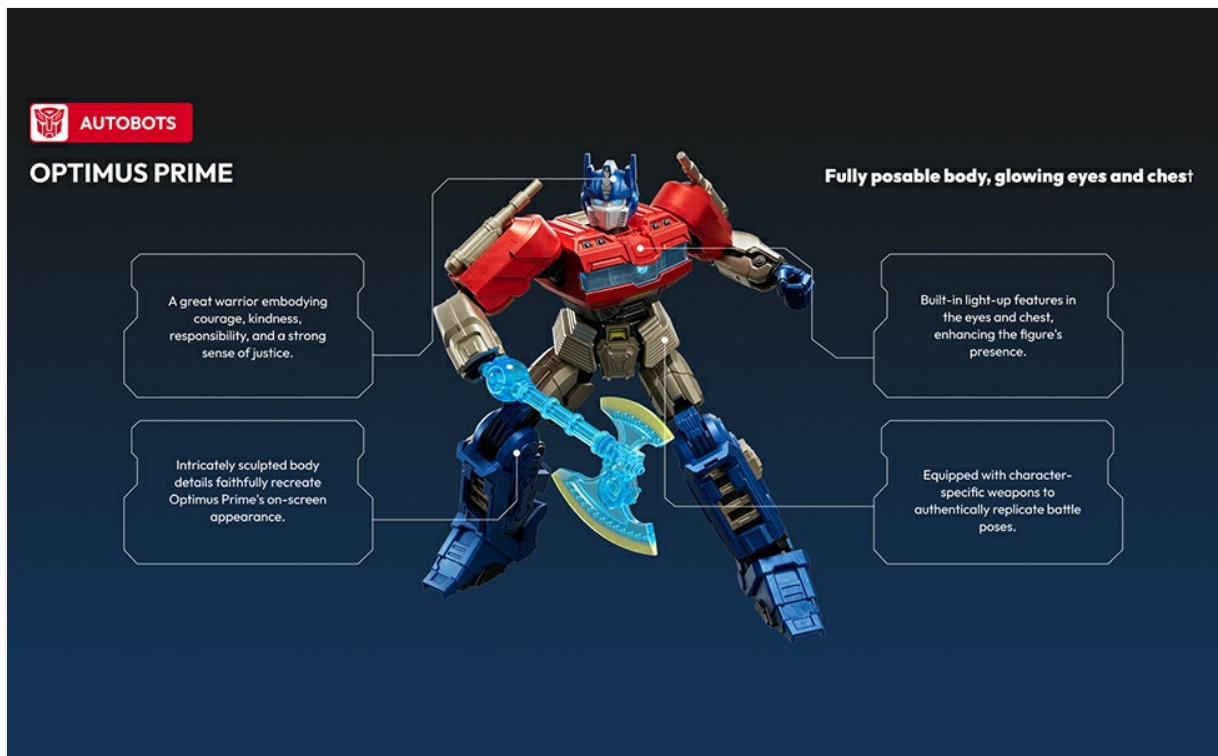


Figure 3: Key features of the Optimus Prime figure.

Your browser does not support the video tag.

Video 1: Official BLOKEES Transformers Classic Class video showcasing Optimus Prime and other figures in dynamic action.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to gently wipe dust from the figure. Avoid abrasive cleaners or solvents, as these may damage the paint or plastic.
- **Storage:** Store the figure away from direct sunlight, extreme temperatures, and high humidity to prevent discoloration or material degradation.
- **Battery Replacement:** If the LED lights dim or stop working, replace the nonstandard battery (included type) as indicated in the detailed printed manual. Ensure correct polarity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
LED lights do not turn on.	Battery tab still in place, batteries drained, or incorrect battery orientation.	Ensure the plastic battery tab is removed. Replace batteries if necessary, ensuring correct polarity. Check the power switch position.
Joints are stiff or difficult to move.	New figure stiffness, or parts not fully seated during assembly.	Gently work the joints to loosen them. Re-check assembly to ensure all parts are correctly snapped together.
Figure does not stand stably.	Improper pose balance or display stand not used.	Adjust the figure's pose to find a stable center of gravity. Utilize the included display stand for enhanced stability, especially for dynamic poses.

SPECIFICATIONS

- **Product Dimensions:** 10 x 6 x 3 inches
- **Item Weight:** 7.8 ounces
- **Model Number:** CC11
- **Manufacturer Recommended Age:** 12 years and up
- **Batteries:** 1 Nonstandard Battery (included)
- **Manufacturer:** Pai Technology Inc.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official BLOKEES website. Keep your proof of purchase for any warranty claims. For additional product information and updates, you may visit the [BLOKEES Store on Amazon](#).