

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [HADEN](#) /
- › [Haden Heritage 2-Slice Toaster Instruction Manual](#)

HADEN Heritage2S

Haden Heritage 2-Slice Toaster Instruction Manual

Model: Heritage2S | Brand: HADEN

INTRODUCTION

Thank you for choosing the Haden Heritage 2-Slice Toaster. This appliance combines classic design with modern functionality, offering reliable performance for your daily toasting needs. This manual provides essential information for safe operation, maintenance, and troubleshooting to ensure optimal use of your toaster.



The Haden Heritage 2-Slice Toaster, featuring a sleek black and chrome finish.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

PRODUCT FEATURES

The Haden Heritage 2-Slice Toaster is designed with user convenience and optimal toasting performance in mind. Key features include:

- **2 Wide Slots:** Accommodates various bread types, including bagels, waffles, and thick-sliced breads.
 - **Adjustable Browning Control:** A single dial allows you to select from 6 browning settings to achieve your preferred toast shade.
 - **Self-Centering Function:** Ensures even toasting by automatically positioning the bread in the center of the slots.
 - **Convenient Functions:** Dedicated buttons for Cancel (to stop toasting at any time), Defrost (for frozen items), and Bagel (to toast only one side of a bagel).
 - **Removable Crumb Tray:** Simplifies cleaning and helps maintain a tidy countertop.
 - **Non-Slip Feet:** Provides stability and prevents the toaster from sliding on your kitchen surface.
 - **Durable Construction:** Features a premium coated stainless steel housing for longevity and a classic aesthetic.
-



TOASTY MORNINGS

- Extra wide slots to accommodate thick slices of bread.
- Single dial with adjustable browning controls.



The toaster features extra wide slots and a single dial for adjustable browning control.



SELF-CENTERING FUNCTION

- Keeps bread in the perfect toasting position.



The self-centering function ensures bread is perfectly positioned for even toasting.

GETTING STARTED (SETUP)

Follow these steps to set up your new Haden Heritage Toaster:

1. **Unpack:** Carefully remove the toaster and all packaging materials. Retain packaging for future storage or transport if needed.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials like curtains or walls. Ensure there is adequate ventilation around the appliance.
3. **First Use (Burn-Off):** Before first use, operate the toaster without bread on the highest browning setting (6) for a few cycles. This will burn off any manufacturing residues and eliminate initial odors. It is normal for a slight smell or smoke to occur during this process. Ensure the area is well-ventilated.
4. **Clean Crumb Tray:** After the burn-off cycles, allow the toaster to cool completely, then remove and clean the crumb tray before regular use.

OPERATING YOUR TOASTER

Operating your Haden Heritage Toaster is straightforward:

1. **Plug In:** Ensure the toaster is plugged into a suitable electrical outlet.

2. **Insert Bread:** Place slices of bread, bagels, or other items into the toasting slots. The wide slots accommodate various thicknesses.
3. **Select Browning Level:** Turn the browning control dial to your desired setting, from 1 (lightest) to 6 (darkest).
4. **Lower Lever:** Push the toast lever down until it locks into place. The toaster will begin toasting. If the lever does not stay down, ensure the toaster is plugged in.
5. **Use Function Buttons (Optional):**
 - **CANCEL:** Press this button to stop the toasting cycle at any time and eject the toast.
 - **BAGEL:** Press this button after lowering the lever to toast only the cut side of bagels or buns. The outer heating elements will be less active.
 - **DEFROST:** Press this button after lowering the lever to toast frozen bread. This setting adds extra time to the toasting cycle to defrost the bread first.
6. **Ejection:** Once the selected browning cycle is complete, the toast will automatically pop up.



The toaster's wide slots can accommodate various types of bread.



CLASSIC STYLE MEETS CONTEMPORARY LIVING

- Premium coated stainless steel housing.
- Easy to clean with its removable sliding crumb tray.

The browning control dial allows precise adjustment of toast shade, complemented by Cancel, Bagel, and Defrost buttons.

CARE AND CLEANING (MAINTENANCE)

Regular cleaning will help maintain your toaster's performance and appearance:

1. **Always Unplug:** Before cleaning, ensure the toaster is unplugged from the power outlet and has cooled down completely.
2. **Clean Crumb Tray:** Pull out the removable crumb tray located at the bottom of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting. Clean the crumb tray regularly to prevent crumb buildup, which can be a fire hazard.
3. **Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. For stubborn marks, a mild non-abrasive cleaner can be used. Do not use abrasive pads or harsh chemicals.
4. **Do Not Immerse:** Never immerse the toaster body, cord, or plug in water or any other liquid.
5. **Storage:** When not in use, store the toaster in a clean, dry place. The power cord can be wrapped around the cord storage area (if available) on the bottom of the toaster.



The removable crumb tray slides out for easy cleaning, helping to keep your countertop tidy.

TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions:


Problem	Possible Cause	Solution
Toaster does not turn on / Lever does not stay down.	Toaster is not plugged in or power outlet is not active.	Ensure the toaster is securely plugged into a working electrical outlet. Check your circuit breaker.

Problem	Possible Cause	Solution
Bread is unevenly toasted.	Inconsistent bread thickness or moisture. Toaster elements may be dirty.	Ensure bread slices are of uniform thickness. Clean the crumb tray and check for any obstructions in the slots (when unplugged and cool).
Smoke or burning smell.	Crumbs accumulated in the toaster or food stuck in slots.	Immediately press the CANCEL button and unplug the toaster. Allow to cool, then remove and clean the crumb tray. Carefully remove any stuck food (only when unplugged and cool).
Toast is too light or too dark.	Browning control setting is incorrect for desired result.	Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast. Consider bread type and freshness.

SPECIFICATIONS

Detailed specifications for the Haden Heritage 2-Slice Toaster:

- **Brand:** HADEN
- **Model Number:** Heritage2S
- **Color:** Black & Chrome
- **Material:** Stainless Steel
- **Product Dimensions (D x W x H):** 11.5" x 7.5" x 7.5" (29.2 cm x 19.1 cm x 19.1 cm)
- **Specific Uses:** Bagel, Bread
- **Wattage:** 900 watts
- **Number of Slices:** 2
- **Number of Browning Settings:** 6
- **Special Features:** Cancel Function, Defrost Function, Bagel Function, Self-Centering, Removable Crumb Tray, Non-Slip Feet
- **Item Weight:** 2.6 Pounds (1.18 kg)
- **Finish Type:** Painted
- **Voltage:** 120 Volts
- **UPC:** 017342750975
- **Manufacturer:** Haden
- **Date First Available:** May 11, 2022

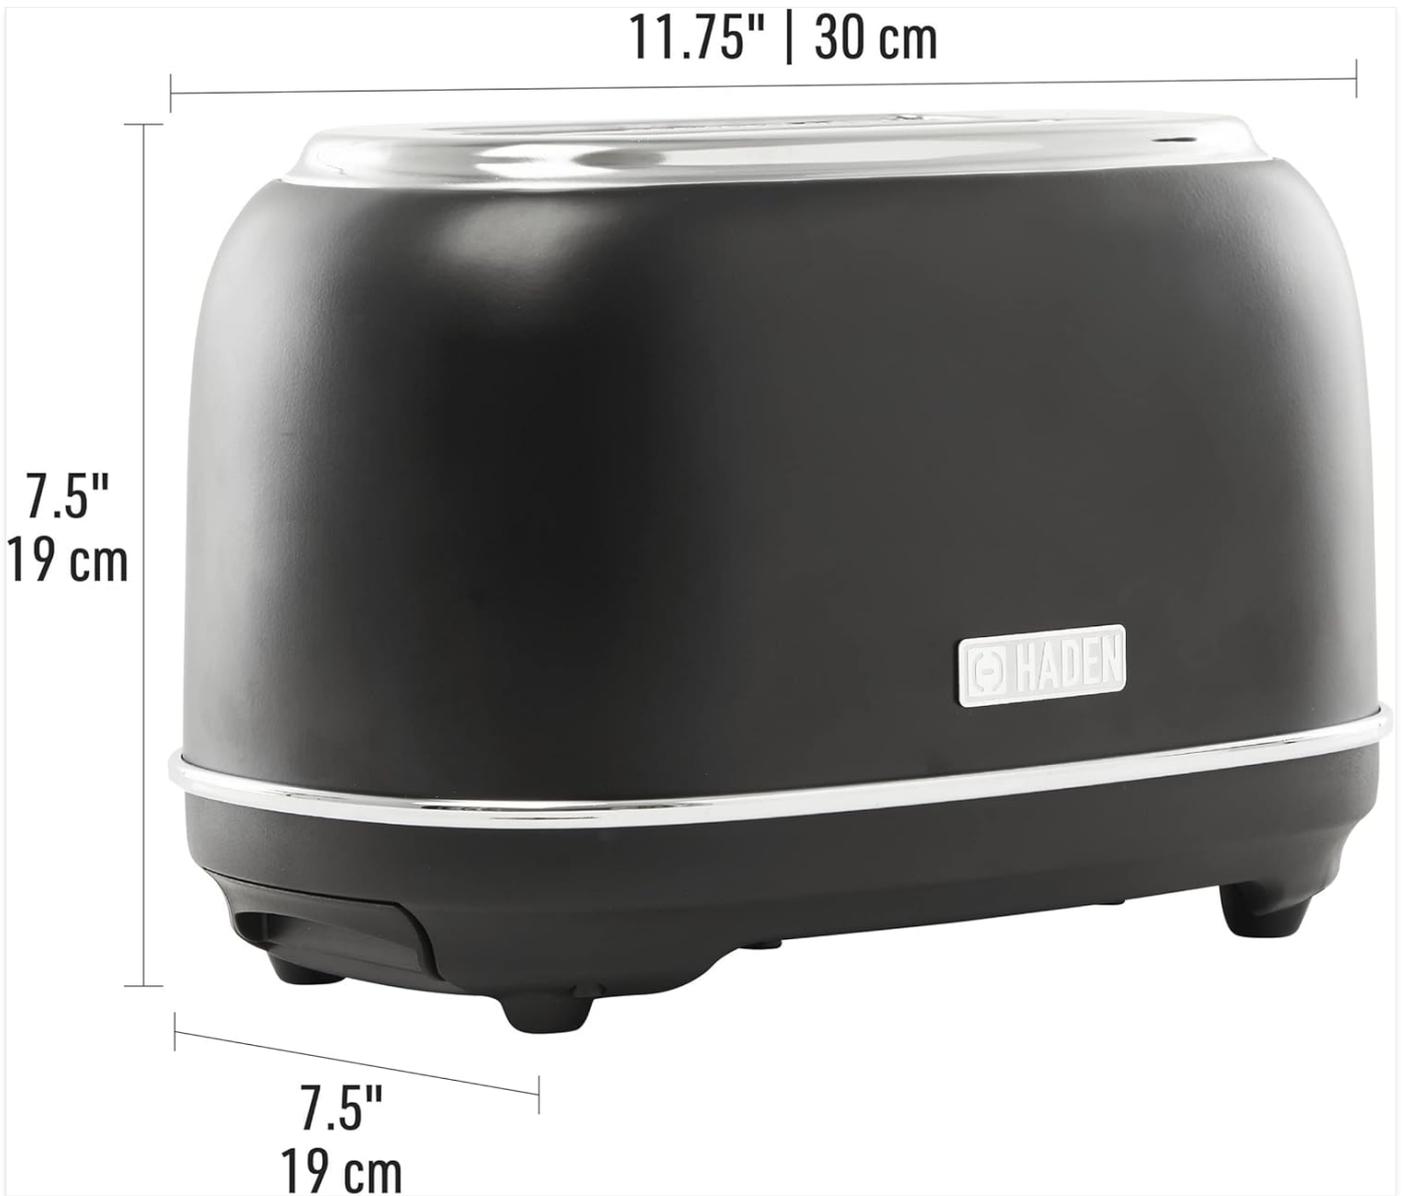

Product dimensions: 11.5 inches deep, 7.5 inches wide, and 7.5 inches high.

WARRANTY AND CUSTOMER SUPPORT

For any questions, concerns, or warranty inquiries regarding your Haden Heritage 2-Slice Toaster, please contact HADEN customer support. Refer to the product packaging or the official HADEN website for the most current contact information and warranty details.

You can visit the official HADEN store on Amazon for more information and product registration: [HADEN Store](#)