



Manuals.plus /

› SoundPEATS /

› SoundPEATS PearlClip Pro Ear Clip Earbuds Instruction Manual

SoundPEATS PearlClip Pro

SoundPEATS PearlClip Pro Ear Clip Earbuds Instruction Manual

Model: PearlClip Pro

Brand: SoundPEATS

INTRODUCTION

This manual provides detailed instructions for the SoundPEATS PearlClip Pro Open-Ear Wireless Earphones. Please read this guide thoroughly before using your device to ensure optimal performance and longevity. The PearlClip Pro earbuds offer a comfortable open-ear design, high-fidelity audio, and advanced features for an enhanced listening experience.

WHAT'S IN THE BOX

- SoundPEATS PearlClip Pro Earbuds (Left & Right)
- Charging Case
- USB-C Charging Cable
- User Manual (this document)



Game Mode

Achieve 80ms low latency in game mode, ensuring audio and video are perfectly synchronized for a comfortable gaming experience.

Image: The SoundPEATS PearlClip Pro earbuds, their charging case, and a USB-C charging cable laid out next to the product box.

SETUP

Initial Power On and Pairing

1. Remove the insulation film from the earbuds.
2. Place the earbuds back into the charging case and close the lid for 10 seconds.

3. Open the charging case lid. The earbuds will automatically power on and enter pairing mode.
4. On your device (phone, tablet, computer), enable Bluetooth.
5. Search for "SOUNDPEATS PearlClip Pro" in the Bluetooth device list and select it to connect.
6. A voice prompt will confirm successful connection.

Your browser does not support the video tag.

Video: Demonstrates how to pair Soundcore C50i earbuds for the first time. The process is similar for SoundPEATS PearlClip Pro.

SoundPEATS App Connection

- Download the "PeatsAudio" app from your mobile app store (App Store for iOS, Google Play for Android).
- Open the app and log in or register.
- Select the already paired "SOUNDPEATS PearlClip Pro" device within the app to establish connection.
- The app provides access to customized EQ settings, touch controls, and other functions.

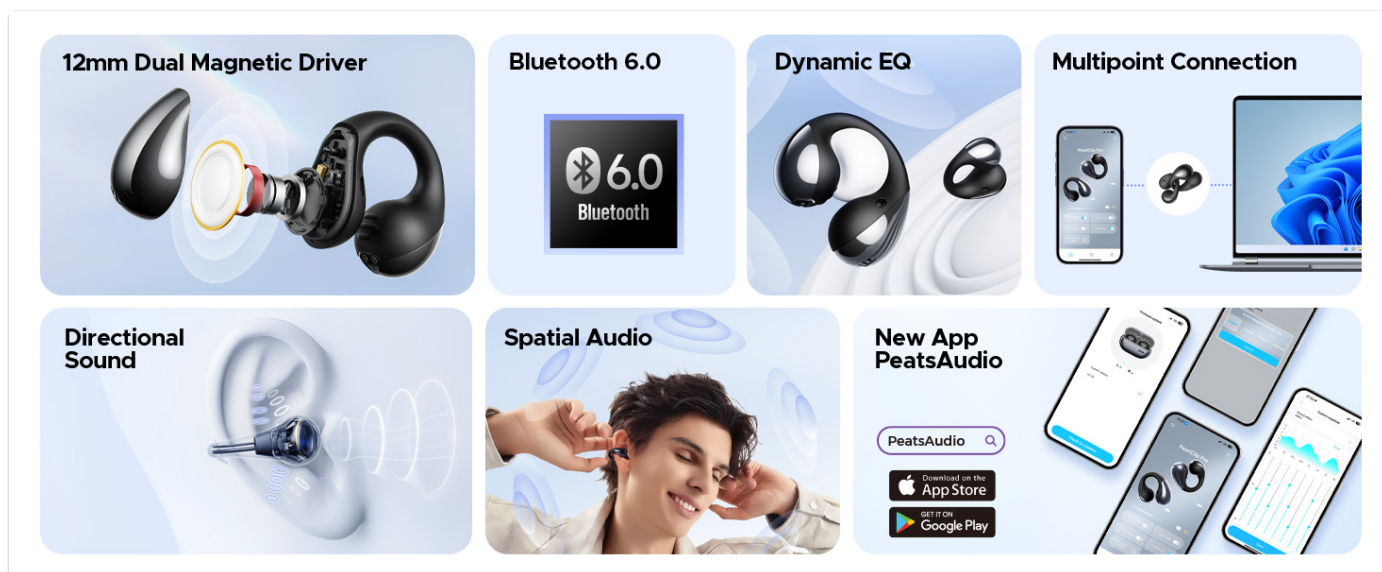


Image: Screenshot of the PeatsAudio app interface, displaying options for customized touch control, personalized EQ, and mode switching.

OPERATING INSTRUCTIONS

Touch Controls

The PearlClip Pro earbuds feature intuitive touch controls. These can be customized via the PeatsAudio app.

Action	Left Earbud	Right Earbud
Single Tap	Volume Down	Volume Up
Double Tap	Play/Pause Music, Answer/End Call	
Triple Tap	Game Mode/Normal Mode	Activate Voice Assistant
Long Press (1.5s)	Previous Track	Next Track
Long Press (1.5s) during incoming call	Reject Call	

App Functions

- **Dynamic EQ:** Adjust sound profiles to your preference. This can be turned off for longer battery life, though sound quality may decrease.

- **Game Mode:** Experience low-latency audio for gaming.
- **Find Earbuds:** If an earbud is misplaced while connected, use this function to make it ring.
- **Earbud Drainage:** Activate this function to vibrate and drain water if it enters the earbud cavity.
- **Custom Prompt Tone Volume:** Adjust the volume of earbud voice prompts.
- **Movie Mode:** Experience 360° spatial sound for an immersive audio experience.

Multi-point Connection

The PearlClip Pro supports simultaneous connection to two devices via Bluetooth. For example, you can connect to both a smartphone and a computer. One device can be used for playing music, while the other can be used for answering calls, ensuring you don't miss a call while listening to music.



Image: A visual representation of the SoundPEATS PearlClip Pro earbuds connected simultaneously to a smartphone and a laptop, demonstrating multi-point connectivity.

Your browser does not support the video tag.

Video: Demonstrates how to connect Truefree Clip C10 earbuds to two devices simultaneously. The process is similar for SoundPEATS PearlClip Pro.

WEARING INSTRUCTIONS

The PearlClip Pro earbuds are designed for an open-ear, secure fit. They weigh just 5.85g and are made with 70% liquid silicone and memory steel to adapt to various ear shapes.

1. Gently position the earbud against your outer ear.
2. Ensure the speaker faces forward, aligning the sound outlet with your ear canal for optimal audio.
3. Adjust the earbud up or down along your earlobe to find the most comfortable and secure position.

Ni-Ti Alloy
Memory Wire



Liquid Silicone
Only

5.85 g



Super Comfortable & Secure Fit

Ergonomic design fits the ear contour while providing stable and comfortable clamping force, reducing the burden on the ears. Made with liquid silicone (70%) and memory wire, ensuring durability and reliability.

Image: A person wearing the SoundPEATS PearlClip Pro earbuds, demonstrating their secure and comfortable fit on the earlobe.

Your browser does not support the video tag.

Video: Demonstrates how to wear Soundcore C50i earbuds. The wearing method is similar for SoundPEATS PearlClip Pro.

MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your earbuds.

- Regularly clean and disinfect the earbuds and charging contacts using alcohol and a clean cotton swab.
- Avoid situations where the earbuds cannot charge or power on due to lack of regular cleaning.
- Charge the charging case at least once every three months if not used for a long time.

Your browser does not support the video tag.

Video: Demonstrates cleaning and charging procedures for Truefree Clip C10 earbuds. The maintenance steps are similar for SoundPEATS PearlClip Pro.

TROUBLESHOOTING

Factory Reset

1. Delete the earbuds' pairing information from your device(s) Bluetooth list.
2. Place both earbuds into their corresponding slots in the charging case, ensuring they are properly seated and charging.
3. Close the charging case lid for 10 seconds, then open the lid again.
4. With the lid open, press and hold the charging case button for 10 seconds until the status indicator light flashes red rapidly three times. The reset is now complete.
5. After the factory reset is complete, the earbuds will automatically enter pairing mode, indicated by the charging case status light flashing white continuously.

Your browser does not support the video tag.

Video: Demonstrates how to perform a factory reset and force pairing mode for Soundpeats earbuds. The steps are applicable to SoundPEATS PearlClip Pro.

Force Enter Pairing Mode

1. Place both earbuds into their corresponding slots in the charging case, ensuring they are properly seated.
2. Close the charging case lid for 10 seconds, then open the lid again.
3. Press and hold the charging case button for 2 seconds. When the status indicator light flashes white continuously, the earbuds have entered pairing mode.

SPECIFICATIONS

- **Model Name:** PearlClip Pro
- **Brand:** SoundPEATS
- **Ear Placement:** Open Ear
- **Form Factor:** Clip-On
- **Connectivity Technology:** Wireless (Bluetooth 5.4)
- **Audio Driver Type:** Dynamic Driver (12mm Dual Magnetic)
- **Battery Life (Earbuds):** 6 Hours (single charge, Dynamic EQ Off)
- **Total Playtime (with Case):** Up to 24 Hours
- **Fast Charging:** 10 minutes charge provides 2 hours listening time
- **Water Resistance Level:** IPX5 (Water Resistant)
- **Control Method:** App, Touch
- **Special Features:** Open-Ear Design, Spatial Audio Effects, Auto-Adaptive Channels, MIC AI Noise Reduction (for calls)
- **Material:** Silicone, Steel

- **Item Weight:** 47.34 Grams (total)
- **Product Dimensions:** 7.22 x 2.41 x 4.55 cm

WARRANTY AND SUPPORT

SoundPEATS wireless earbuds are backed by a 30-day money-back guarantee and a 1-year free replacement warranty. Our team is always ready to help. Feel free to contact us at support@soundpeats.com with any questions.