

[Manuals.plus](#) /

› [AGPTEK](#) /

› AGPTEK A16 Bluetooth 5.3 MP3 Player User Manual

AGPTEK A16

AGPTEK A16 Bluetooth 5.3 MP3 Player User Manual

Model: A16 | Brand: AGPTEK

1. INTRODUCTION

Thank you for purchasing the AGPTEK A16 MP3 Player. This device is designed to provide a high-quality audio experience with its Bluetooth 5.3 connectivity and HIFI sound capabilities. It features a compact design, a built-in speaker, FM radio, voice recording, and expandable storage. This manual will guide you through the setup, operation, and maintenance of your new MP3 player.



Figure 1.1: AGPTEK A16 MP3 Player

2. PRODUCT OVERVIEW

2.1 Package Contents

- AGPTEK A16 MP3 Player
- USB-C Charging Cable
- Earphones
- Armband
- User Manual

2.2 Device Layout

Familiarize yourself with the buttons and ports on your AGPTEK A16 MP3 Player.



Figure 2.1: Front view of the player showing the screen and touch controls.



Figure 2.2: Side view of the player, indicating physical buttons and ports.

- **Power Button:** Press and hold to turn on/off. Short press to lock/unlock screen.

- **Volume Buttons (+/-):** Adjust volume.
- **Touch Controls:** Navigate menus, play/pause, skip tracks. These buttons illuminate for easy use.
- **USB-C Port:** For charging and data transfer.
- **3.5mm Audio Jack:** For wired earphones or external speakers.
- **MicroSD Card Slot:** For expandable storage.
- **Built-in Speaker:** For audio playback without external devices.

3. SETUP

3.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB-C cable to the player's USB-C port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status. A full charge typically takes approximately 2 hours.



Figure 3.1: Battery performance overview. Up to 10 hours via Bluetooth, up to 40 hours with wired earphones, and approximately 2 hours for a full charge.

3.2 Transferring Music and Files

To transfer files, connect the MP3 player to your computer using the USB-C cable. The player will appear as a removable disk. You can then drag and drop music files (MP3, WMA, APE, FLAC, WAV, DRM, ACELP, OGG, AAC-LC), videos (AMV), images (JPG, JPEG, BMP), and text files (TXT) into the appropriate folders on the device.

3.3 Inserting a MicroSD Card

The device has 16GB of internal storage and supports MicroSD cards up to 128GB. To expand storage, gently insert a MicroSD card into the card slot until it clicks into place. Ensure the card is inserted in the correct orientation.

3.4 Connecting Bluetooth Devices

The A16 MP3 player features Bluetooth 5.3 for stable and fast wireless connections. To pair with Bluetooth headphones or speakers:

1. Turn on the MP3 player and navigate to the Bluetooth menu.

2. Enable Bluetooth on the player.
3. Put your Bluetooth headphones or speaker into pairing mode.
4. On the MP3 player, select 'Search for devices' and choose your device from the list.
5. Once paired, the device will connect automatically in the future.

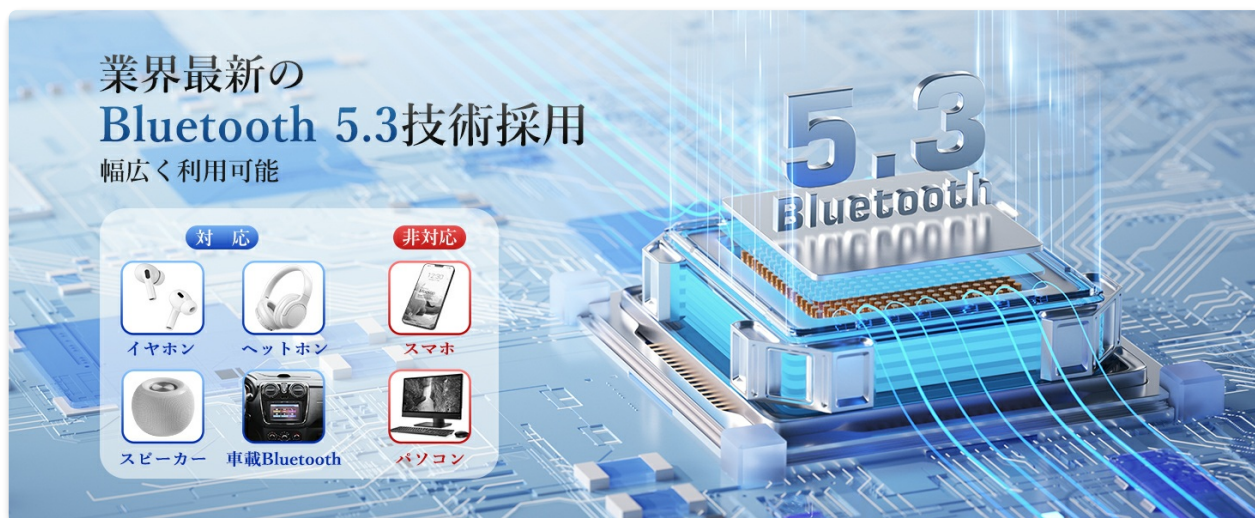


Figure 3.2: The player supports Bluetooth 5.3 for connecting to wireless earphones, headphones, and speakers.

4. OPERATING INSTRUCTIONS

4.1 Music Playback

From the main menu, select 'Music'. You can browse your music by artist, album, genre, or all songs. Use the touch controls to play, pause, skip tracks, and adjust volume. The player supports HIFI lossless sound quality for an immersive audio experience.

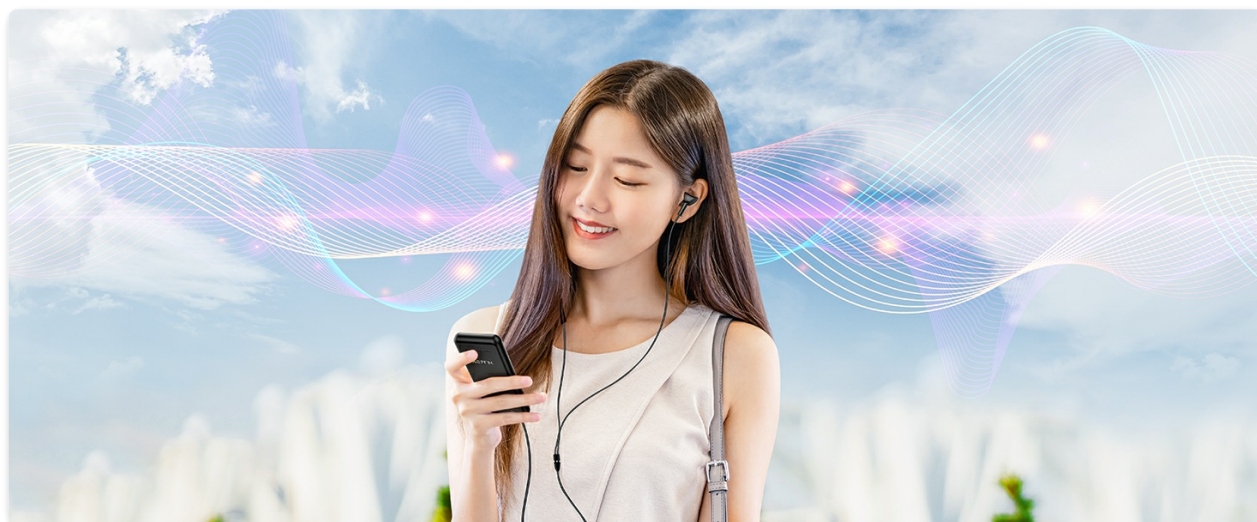


Figure 4.1: The player features HIFI ultra-high sound quality with a DSP chip for effective noise reduction.

4.2 FM Radio

To use the FM radio function, connect wired earphones to the 3.5mm audio jack; they act as the antenna. Navigate to the 'FM Radio' option from the main menu. You can perform an automatic search for stations or manually tune to frequencies between 76.0-108MHz.



Figure 4.2: The player's FM radio function, requiring wired earphones as an antenna.

4.3 Voice Recording

The A16 MP3 player includes a voice recording function. Select 'Recorder' from the main menu to start, pause, and save recordings. You can also connect external audio sources like a smartphone or CD player via a line-in cable (sold separately) for direct recording.



Figure 4.3: The player's voice recording feature, including direct recording from external devices.

4.4 Lock Button

To prevent accidental operations during use, especially when carrying the player, short press the power button to lock the screen and controls. Repeat the action to unlock.

4.5 Other Functions

The AGPTEK A16 also offers additional features:

- **Pedometer:** Track your steps during exercise.
- **E-book:** Read text files on the device.

- **Video Playback:** View AMV format videos.
- **Built-in Speaker:** Enjoy music without earphones.

カラフルディスプレイ 1.8インチ

1.8寸のカラースクリーンは、更に大きくて、更に明らかに見えて、更に便利に使えます。操作易いタッチパネル設計により、誰でも分かり易く、簡単に操作できる人気のbluetooth mp3プレイヤーです。



Figure 4.4: The player's built-in speaker allows for cable-free audio playback.

5. MAINTENANCE

5.1 Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the screen or casing.

5.2 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods. Store the device in a cool, dry place.

6. TROUBLESHOOTING

- **Device does not turn on:** Ensure the battery is charged. Connect to a power source and try again. If unresponsive, try holding the power button for 10-15 seconds for a hard reset.
- **Cannot connect via Bluetooth:** Ensure both the MP3 player and the Bluetooth device are in pairing mode and within range. Check if other Bluetooth devices are interfering. Try unpairing and re-pairing the devices.
- **No sound:** Check the volume level. Ensure earphones are properly connected or Bluetooth device is paired and connected. If using FM radio, ensure wired earphones are plugged in as an antenna.
- **Files not appearing:** Ensure files are in supported formats (MP3, WMA, etc.) and transferred to the correct folders. Disconnect and reconnect the player to your computer.
- **Screen is unresponsive:** If the screen is locked, short press the power button to unlock. If still unresponsive, perform a hard reset by holding the power button.

7. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Brand	AGPTEK
Model Number	A16
Memory Storage Capacity	16 GB (expandable up to 128 GB via microSD card)
Connectivity Technology	Bluetooth 5.3
Screen Size	1.8 Inches (TFT Display)
Supported Media Types	microSD Card
Supported Audio Formats	MP3, WMA, APE, FLAC, WAV, DRM, ACELP, OGG, AAC-LC
Supported Video Formats	AMV
Supported Image Formats	JPG, JPEG, BMP
Supported Text Formats	TXT
Battery Life (Music Playback)	Up to 40 hours (wired earphones), Up to 10 hours (Bluetooth)
Charging Time	Approx. 2 hours
Color	Black
Special Features	Bluetooth, HIFI Sound, Voice Recorder, FM Radio, Built-in Speaker, Pedometer, E-book, Lock Button

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This AGPTEK A16 MP3 Player comes with a 180-day warranty from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

8.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact AGPTEK customer support through the retailer where you purchased the product or visit the official AGPTEK website for contact information.

