

ShiftCam S-AB03-MN

ShiftCam SnapStand Max Instruction Manual

Model: S-AB03-MN | Brand: ShiftCam

INTRODUCTION

The ShiftCam SnapStand Max is a versatile and portable accessory designed to enhance your mobile photography and videography experience. It functions as both an extendable selfie stick and a stable tripod, featuring a magnetic mount for MagSafe-enabled devices, a secure clip mount for other smartphones, a 200-degree tilt head, and a detachable Bluetooth remote for convenient control. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your SnapStand Max.

WHAT'S IN THE BOX

Upon unboxing your ShiftCam SnapStand Max, please verify that all components are present:

- SnapStand Max (Selfie Stick & Tripod)
- Detachable Bluetooth Remote
- Silicone SnapClamp Clip (for non-MagSafe devices or added security)



Image: Components included with the ShiftCam SnapStand Max, showing the main unit, the detachable Bluetooth remote, and the SnapClamp.

KEY FEATURES

Compact & Extendable Design

The SnapStand Max is designed for portability, folding down to 11 inches for easy storage in a bag. It extends up to 70 inches (approximately 6 feet), providing significant reach for various shooting angles, from close-up selfies to wide group shots or elevated perspectives.

SnapStand Max MagSafe Attachment

Quickly attach your phone with MagSafe, so you're always ready to capture every moment.



Image: The SnapStand Max folded, illustrating its compact size for portability.

SnapStand Max

Extendable Height

Extends up to 6 feet,
perfect for capturing
content in any setting.



Image: The SnapStand Max fully extended, showing its impressive height for capturing wide scenes or group photos.

Versatile Dual-Functionality

This device seamlessly transitions between a stable tripod for hands-free recording, live streaming, video calls, and time-lapse photography, and an extendable selfie stick for capturing personal or group photos with ease.

Effortless Magnetic & Secure Clip Mount

The SnapStand Max features a strong magnetic mount compatible with MagSafe-enabled iPhones and cases, allowing for quick and secure attachment. For other smartphones or enhanced stability, the included silicone SnapClamp clip provides a firm grip.

SnapStand Max

Bluetooth Remote Control

Detachable remote for control in distance, perfect for group shots or video recording.

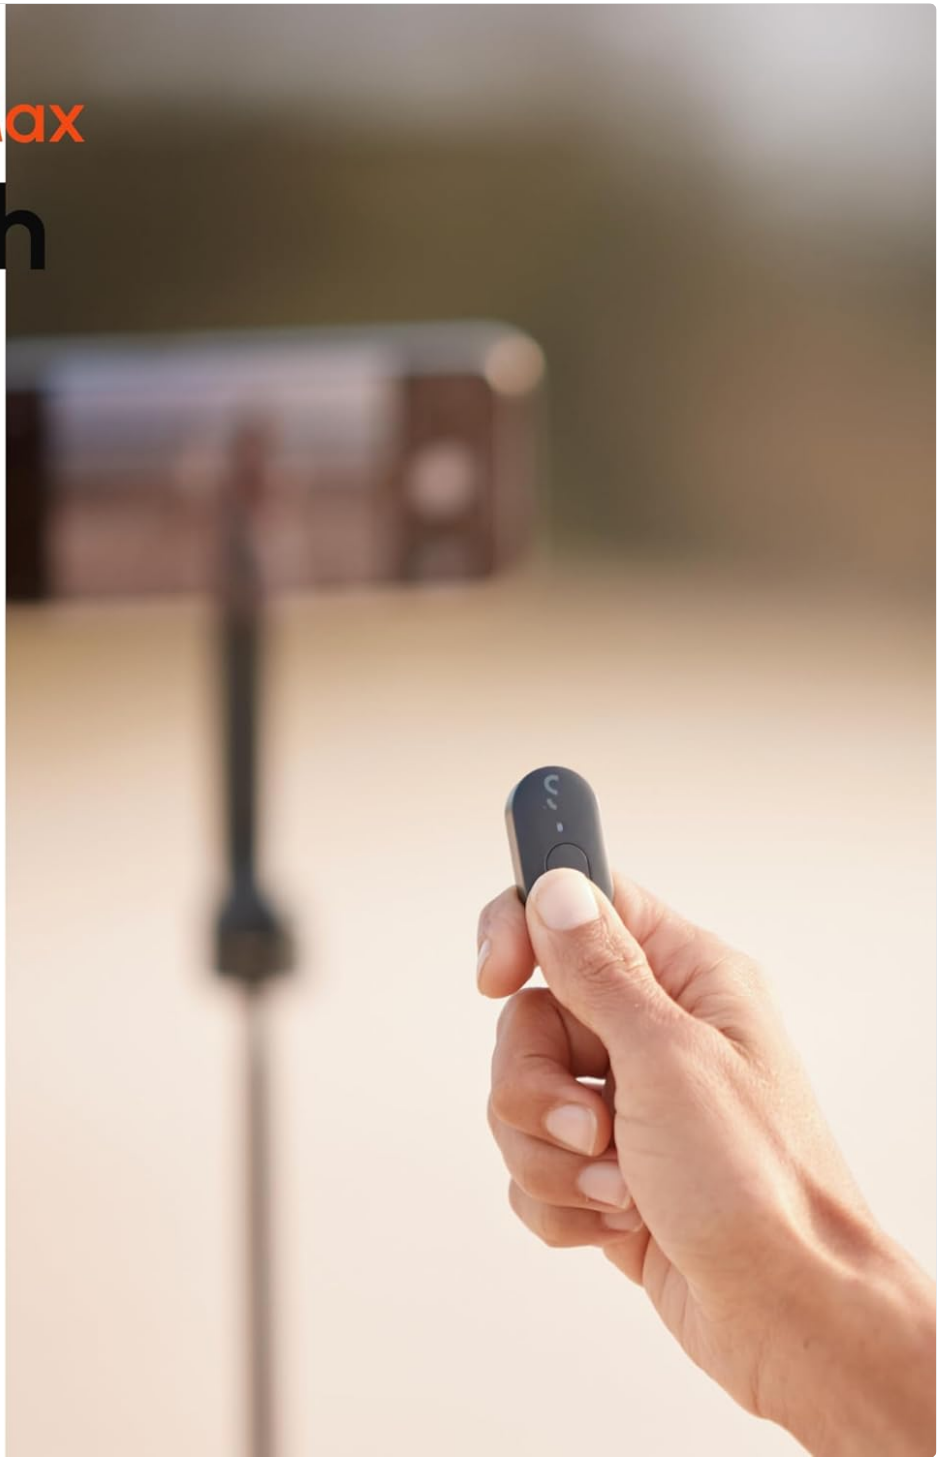


Image: Demonstrates the magnetic attachment of a MagSafe-compatible phone to the SnapStand Max.



Image: A close-up view of the detachable Bluetooth remote control integrated into the SnapStand Max handle.

Removable Bluetooth Remote

Capture photos and videos from a distance with the convenient detachable Bluetooth remote. This feature is ideal for group shots, hands-free recording, or when using the SnapStand Max as a tripod.

Versatile Tilt Head

The integrated tilt head offers a 200-degree range of motion, allowing you to precisely adjust your phone's angle for optimal framing, whether for selfies, high-angle shots, or specific video perspectives.



Image: Illustration demonstrating the flexible 200-degree tilt head, allowing for various phone angles.

SETUP GUIDE

1. Unfolding the SnapStand Max

1. Hold the main body of the SnapStand Max firmly.
2. Gently pull the top section upwards to extend the pole. Continue extending until it reaches your desired length.
3. To deploy the tripod legs, grasp the base and spread the legs outwards until they lock into a stable position. Ensure the legs are fully extended for maximum stability.





Image: The SnapStand Max set up as a tripod, demonstrating the extended legs and pole.

2. Attaching Your Smartphone

- **For MagSafe-compatible devices:** Simply align your MagSafe-enabled iPhone or case with the magnetic mount at the top of the SnapStand Max. The magnets will securely snap your phone into place.
- **For other smartphones or added security:** Attach the silicone SnapClamp clip to the magnetic mount. Then, gently pull apart the jaws of the SnapClamp and insert your smartphone, ensuring it is held firmly.





Image: A smartphone securely attached to the SnapStand Max, illustrating the magnetic connection.

3. Pairing the Bluetooth Remote

1. Remove the Bluetooth remote from its slot in the SnapStand Max handle.
2. Press and hold the button on the remote until the indicator light begins to flash, indicating it is in pairing mode.
3. On your smartphone, navigate to **Settings > Bluetooth**.
4. Look for "ShiftCam Remote" or a similar device name in the list of available devices and tap to connect.
5. Once paired, the indicator light on the remote will stop flashing and remain solid (or turn off, depending on the model). The remote is now ready for use.

SnapStand Max

Compact and Portable

At 11" folded, the SnapStand Max perfectly fits into your bag.



Image: The detachable Bluetooth remote being held, ready for pairing and use.

OPERATING INSTRUCTIONS

Using as a Selfie Stick

- Ensure your phone is securely attached.
- Extend the pole to your desired length.
- Adjust the tilt head to frame your shot.
- Use the Bluetooth remote to trigger your phone's camera shutter.

Serves as A Stable Tripod

Steady Shots, Anywhere

Use the SnapStand as a sturdy tripod on any surface, ensuring your shots are stable and professional, wherever you are.



Image: The SnapStand Max being used as a selfie stick to capture a group photo.

Using as a Tripod

- Extend the tripod legs fully until they lock into place, creating a stable base.
- Place the SnapStand Max on a flat, stable surface.
- Adjust the pole height and tilt head angle as needed for your shot.
- Use the Bluetooth remote to start/stop recording or take photos without touching your phone, preventing camera shake.

Serves as A Selfie Stick

Capture Solo or Group Shots

Extend the SnapStand Selfie to 30" and the SnapStand Max to 70", making it easy to capture perfect selfies or group photos effortlessly.



Image: The SnapStand Max deployed as a stable tripod for hands-free photography or videography.

Adjusting the Tilt Head

- The tilt head allows for 200 degrees of vertical adjustment.
- Gently pivot the phone mount section to achieve your desired angle. It will hold its position once set.

MAINTENANCE

- **Cleaning:** Wipe the SnapStand Max with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure the device is completely dry before storage. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, fold the SnapStand Max to its compact size and store it in a dry, cool place away from direct sunlight and extreme temperatures.

- **Battery:** The Bluetooth remote uses a small button cell battery. If the remote stops responding, replace the battery. Refer to the remote's casing for battery type and replacement instructions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bluetooth remote not pairing.	Remote battery low or dead; remote not in pairing mode; Bluetooth off on phone.	Ensure remote battery is charged/replaced. Press and hold remote button to enter pairing mode. Enable Bluetooth on your phone and search for "ShiftCam Remote".
Phone not securely held by magnetic mount.	Phone not MagSafe compatible; misaligned; heavy case interfering.	Ensure your phone or case is MagSafe compatible. Realign the phone. For non-MagSafe phones or added security, use the included SnapClamp clip.
Tripod feels unstable.	Legs not fully extended; uneven surface; excessive weight.	Ensure all tripod legs are fully extended and locked. Place on a flat, stable surface. Do not exceed the recommended weight capacity (designed for smartphones).
Pole does not extend or retract smoothly.	Dirt or debris in joints; mechanism stuck.	Gently clean the pole sections with a soft cloth. Avoid forcing the mechanism. If persistent, contact customer support.

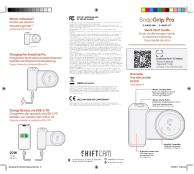




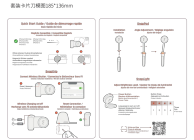
SPECIFICATIONS

Feature	Detail
Model Name	S-AB03-MN
Brand	ShiftCam
Material	Metal
Color	Midnight
Compatible Devices	Smartphones (MagSafe compatible or with SnapClamp)
Folded Dimensions	Approximately 11 inches (28 cm)
Extended Height	Up to 70 inches (178 cm)
Item Weight	1.21 pounds (0.55 kg)
Tilt Head Range	200 degrees
Remote Connectivity	Bluetooth

WARRANTY AND SUPPORT

ShiftCam products are designed for durability and performance. For information regarding warranty coverage, product registration, or technical support, please visit the official ShiftCam website or contact their customer service directly. You can also visit the [ShiftCam Store on Amazon](#) for additional product information and support resources.

Related Documents - S-AB03-MN

	<p>ShiftCam SnapGrip Pro Quick Start Guide</p> <p>A quick start guide for the ShiftCam SnapGrip Pro, covering setup, charging, and wireless shutter functionality. Includes information on MagSafe compatibility and USB-C PD charging.</p>
	<p>ShiftCam SnapPocket Light Quick Start Guide</p> <p>A quick start guide for the ShiftCam SnapPocket Light, detailing how to attach it to various phone models and adjust brightness levels.</p>
	<p>SnapGrip Pro S-AA03: Quick Start Guide & User Manual Shiftcam</p> <p>Get started with your Shiftcam SnapGrip Pro (S-AA03). This guide covers unboxing, charging, connecting via Bluetooth, and using the wireless shutter and charging features.</p>
	<p>ShiftCam SnapPod Quick Start Guide</p> <p>A concise guide for setting up and using the ShiftCam SnapPod, detailing installation and angle adjustment for various smartphones.</p>
	<p>ShiftCam ProGrip Getting Started Guide</p> <p>A comprehensive guide to setting up and using the ShiftCam ProGrip, including features like charging, Bluetooth connectivity, and accessory mounting.</p>
	<p>ShiftCam SnapGrip Creator Kit Quick Start Guide</p> <p>A concise guide to setting up and using the ShiftCam SnapGrip Creator Kit, covering MagSafe compatibility, SnapGrip wireless shutter, SnapPod installation and angle adjustment, and SnapLight brightness control.</p>