

Manuals.plus /

› VASAGLE /

› VASAGLE KKS014K02 Kitchen Shelf with Power Outlet, 4-Tier Coffee Bar Rack with Adjustable Shelf, Microwave Stand, Paper Towel Holder, Vintage Brown and Black Ink

VASAGLE KKS014K02

VASAGLE KKS014K02 Kitchen Shelf with Power Outlet

Instruction Manual

1. PRODUCT OVERVIEW

The VASAGLE KKS014K02 Kitchen Shelf is designed to provide efficient storage and utility in your kitchen. This 4-tier rack features a robust steel frame and durable particleboard panels, offering a blend of style and functionality. It includes a built-in power outlet, an adjustable middle shelf, a paper towel holder, and S-hooks for hanging utensils.

Key Features:

- **Compact yet Spacious:** Maximizes storage in limited kitchen spaces.
- **Integrated Power Outlet:** Features 2 AC sockets with a safety switch and overload protection for convenient and safe appliance use.
- **Adjustable Middle Shelf:** Offers 3 height options to accommodate various kitchen items.
- **Sturdy and Stable:** Constructed with a steel frame and particleboard, equipped with adjustable feet for stability on uneven floors.
- **Easy Assembly:** Comes with labeled parts, detailed instructions, and a video guide for quick setup.





Figure 1: Fully assembled VASAGLE KKS014K02 Kitchen Shelf in a kitchen environment.

2. SAFETY INFORMATION

Please read all safety instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Anti-Tip Protection:** Always secure the shelf to the wall using the provided anti-tip kit to prevent accidental tipping, especially in households with children or pets.
- **Weight Capacity:** Do not exceed the maximum weight capacity for each shelf or the overall unit. Refer to the specifications section for details.
- **Electrical Safety:** Ensure the integrated power outlet is used within its specified limits (230V/16A, max

1875W). Do not overload the sockets. Always use the safety switch to turn off power when not in use or during maintenance.

- **Stable Placement:** Place the shelf on a flat, stable surface. Use the adjustable feet to level the unit and prevent wobbling.
- **Careful Use:** Handle the shelf and its contents with care to avoid injuries. Avoid climbing on the unit.



Figure 2: Anti-tip strap for securing the shelf to the wall.

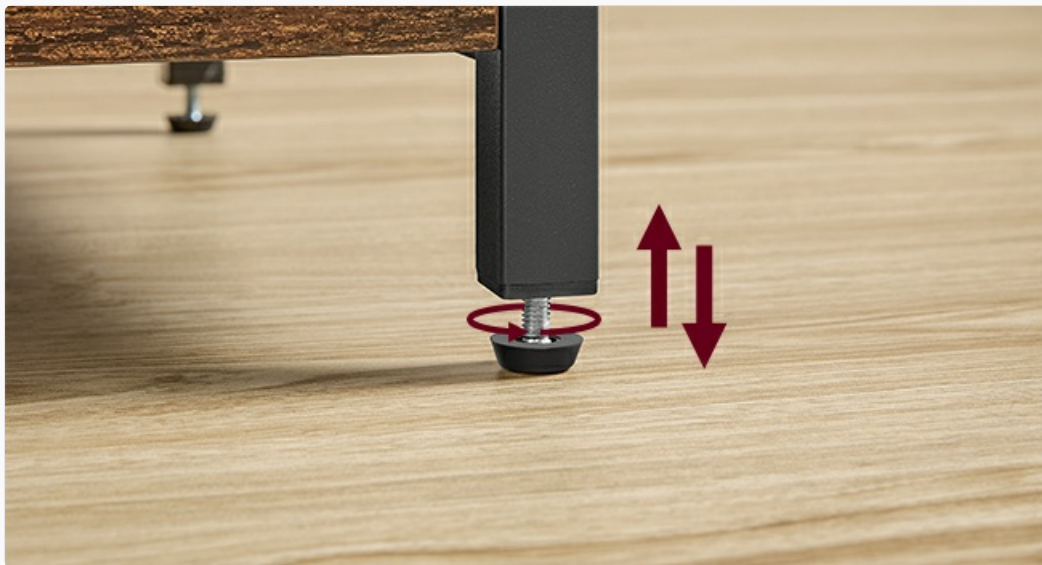


Figure 3: Adjustable feet for leveling the shelf on uneven surfaces.

3. ASSEMBLY INSTRUCTIONS

The VASAGLE KKS014K02 Kitchen Shelf is designed for easy assembly. All necessary mounting components and detailed instructions are included in the package. Please follow the steps below for a smooth setup:

1. **Unpack and Verify:** Carefully unpack all components and compare them with the parts list provided in the manual to ensure nothing is missing or damaged.
2. **Follow Step-by-Step Instructions:** Refer to the detailed assembly instructions included in your package. Each part is labeled for easy identification.
3. **Secure Connections:** Ensure all screws and fasteners are tightened securely, but do not overtighten to avoid damaging the materials.
4. **Install Anti-Tip Kit:** Once the shelf is assembled and placed in its desired location, install the anti-tip protection kit by securing the strap to the wall. This is a crucial safety step.

5. **Level the Shelf:** Use the adjustable feet at the bottom of the shelf legs to level the unit on uneven floors, ensuring maximum stability.

4. OPERATING INSTRUCTIONS

4.1 Using the Integrated Power Outlet

The kitchen shelf is equipped with a convenient power outlet for your appliances.

- **Connect Appliances:** Plug your kitchen appliances (e.g., coffee maker, toaster, microwave) into the 2 AC sockets.
- **Power On/Off:** Use the integrated safety switch to turn the power on or off. The switch also provides overload protection.
- **Cable Management:** Route the power cable safely to a wall outlet, ensuring it does not pose a tripping hazard. The cable length is approximately 1.5 meters.

Organizzazione personalizzabile



Ripiano centrale regolabile

3 opzioni di altezza per contenere oggetti di diverse dimensioni



Figure 4: Integrated power outlet with safety switch.

4.2 Adjusting the Middle Shelf

The middle shelf can be adjusted to three different heights to accommodate items of varying sizes.

- **Identify Adjustment Points:** Locate the pre-drilled holes on the metal frame where the shelf supports attach.
- **Reposition Shelf:** Carefully lift the shelf and reposition its supports to the desired height. Ensure both sides are adjusted evenly for stability.

VASAGLE

by SONGMICS HOME



Piccola figura, grande capacità

Figure 5: Adjustable middle shelf with multiple height options.

4.3 Using the Paper Towel Holder and S-Hooks

The shelf includes a paper towel holder and 8 S-hooks for convenient access to kitchen essentials.

- **Paper Towel Holder:** Slide a standard roll of paper towels onto the holder located beneath the top shelf.
- **S-Hooks:** Hang kitchen utensils, oven mitts, or small towels on the S-hooks provided on the side rail.

Multipresa flessibile integrata



Figure 6: Paper towel holder and S-hooks for kitchen organization.

5. MAINTENANCE

To ensure the longevity and appearance of your VASAGLE Kitchen Shelf, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or moisture damage to the particleboard.
- **Fasteners:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary to

maintain stability.

- **Electrical Components:** Inspect the power cord and sockets regularly for any signs of damage. Discontinue use and contact customer support if damage is found.

6. TROUBLESHOOTING

If you encounter any issues with your kitchen shelf, refer to the following common troubleshooting tips:

- **Wobbling Shelf:**
 - Ensure all assembly screws are securely tightened.
 - Adjust the leveling feet at the bottom of the legs to compensate for uneven floor surfaces.
 - Verify that the anti-tip kit is properly installed and secured to the wall.
- **Power Outlet Not Working:**
 - Check if the safety switch on the power strip is in the 'ON' position.
 - Ensure the main power cable is securely plugged into a functional wall outlet.
 - If the switch tripped, unplug appliances, reset the switch, and plug them back in one by one to identify a faulty appliance or overload.
 - Do not exceed the maximum wattage (1875W) of the power strip.
- **Missing Parts:** If any parts are missing upon unpacking, please contact VASAGLE customer support with your product model number and a description of the missing components.

7. SPECIFICATIONS

Specification	Detail
Model Number	KKS014K02
Brand	VASAGLE
Material	Alloy Steel, Engineered Wood
Color	Vintage Brown + Ink Black
Product Dimensions (D x W x H)	40 x 60 x 140 cm
Item Weight	10.4 kg
Number of Shelves	4
Shelf Type	Multi-tier
Top Shelf Weight Capacity	25 kg
Countertop Weight Capacity	38.6 kg
Middle Shelf Weight Capacity	36.3 kg
Bottom Shelf Weight Capacity	36.3 kg
Total Max Weight Capacity	136 kg
Power Outlet	2 AC Sockets, 230V/16A, Max 1875W, with Safety Switch and Overload Protection
Power Cord Length	1.5 m
Special Features	Adjustable Shelf, Durable, Space-saving, Paper Towel Holder, S-Hooks
Assembly Required	Yes
Installation Type	Freestanding (with wall anti-tip protection)
Included Components	Accessory set (anti-tip protection, user manual, mounting components)

Tutto in uno

Mantieni organizzati gli elementi essenziali della tua cucina

Mensola superiore

Porta tovaglioli di carta

8 ganci a S

Ampio piano di lavoro



Figure 7: Product dimensions and weight capacities.

8. WARRANTY AND SUPPORT

VASAGLE products are designed for quality and durability. For warranty information, product support, or to report any issues, please refer to the contact information provided in your purchase documentation or visit the official VASAGLE website.

Please retain your proof of purchase for warranty claims.

