

[Manuals.plus](#) /

› [Bellemave](#) /

› Bellemave Metal Twin Over Full Bunk Beds (Model TH-00292-T-B) Instruction Manual

Bellemave TH-00292-T-B

Bellemave Metal Twin Over Full Bunk Beds

Model: TH-00292-T-B

Brand: Bellemave

INTRODUCTION

This manual provides detailed instructions for the assembly, safe operation, maintenance, and troubleshooting of your Bellemave Metal Twin Over Full Bunk Bed. Please read all instructions carefully before assembly and use to ensure safety and proper function.

The Bellemave Twin Over Full Bunk Bed is designed to offer a space-saving sleeping solution, accommodating both twin and full-sized mattresses. Its robust metal construction ensures stability and durability for long-term use.

SAFETY INFORMATION

Important Safety Warnings:

- Do not exceed the maximum weight capacity of **350 pounds** for the entire bunk bed structure.
- Ensure all guardrails are securely in place. The 12.8-inch high guardrail on the top bunk is designed to prevent falls.
- Always use the provided angled ladder for climbing to and from the top bunk. Do not jump on or off the bunk bed.
- Regularly check all bolts and connections to ensure they remain tight. Loose connections can compromise stability and safety.
- Only use mattresses that comply with the recommended dimensions for twin and full beds to ensure proper fit and safety with guardrails.
- Keep children away from the assembly area until the bunk bed is fully assembled and secured.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Metal Frame Components (various beams, posts, and supports)
- Guardrails
- Bed Slats (for both twin and full beds)
- Angled Ladder

- Hardware Pack (bolts, nuts, washers, Allen wrench, etc.)

Note: Mattresses are not included with this bunk bed.

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the Bellemave Metal Twin Over Full Bunk Bed is required. Detailed instructions and all necessary accessories are provided to facilitate a straightforward installation process. It is recommended to have two adults for assembly.

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out on a clean, soft surface (like a carpet) to prevent scratches. Identify each part using the provided parts list in your separate assembly guide.
2. **Assemble Base Frames:** Begin by assembling the base frames for both the twin (upper) and full (lower) beds according to the step-by-step diagrams in your assembly guide. Ensure all connections are finger-tightened initially.
3. **Attach Support Legs:** Securely attach the vertical support legs that connect the upper and lower bunks.
4. **Install Ladder and Guardrails:** Mount the angled ladder to the designated side of the bunk bed. Install the guardrails around the perimeter of the top bunk. Ensure these are firmly attached for safety.
5. **Insert Bed Slats:** Place the metal bed slats onto the support rails for both the twin and full beds. These slats provide mattress support and eliminate the need for a box spring.
6. **Final Tightening:** Once all components are in place, systematically tighten all bolts and screws using the provided Allen wrench. Do not overtighten, but ensure all connections are snug and secure.



Image: Detailed dimensions of the Bellemave Metal Twin Over Full Bunk Bed. This image shows the overall length (77.95"), width (56.3"), and height (58.66"), along with the height of the underbed clearance (9.25") and the distance between the two bunks (33.27").



Image: Bellemave Twin Over Full Bunk Bed with mattresses and bedding. This image displays the fully assembled bunk bed with a twin mattress on top and a full mattress on the bottom, complete with bedding, in a room setting.

Your browser does not support the video tag.

Video: Twin Over Full Bunk Beds. This video provides a visual overview of the Bellemave Twin Over Full Bunk Bed, demonstrating its design and features.

OPERATING INSTRUCTIONS

The Bellemave Twin Over Full Bunk Bed is designed for versatile use, accommodating a twin-sized mattress on the upper bunk and a full-sized mattress on the lower bunk. This configuration is suitable for families with multiple children or for guest rooms.

- **Mattress Placement:** Place a standard twin-sized mattress on the upper bunk and a standard full-sized mattress on the lower bunk. Ensure mattresses fit snugly within the frame and do not exceed the height of the guardrails on the top bunk.
- **Ladder Use:** Always use the angled ladder to access the top bunk. Ensure the ladder is stable before climbing. Descend facing the ladder.
- **Underbed Storage:** The design provides approximately 9.2 inches of clearance under the lower bunk, offering

convenient space for storage boxes, shoes, or other items.



Image: Illustration of under-bed storage space. This image highlights the 9.2-inch clearance beneath the lower bunk, demonstrating how it can be utilized for storing various items like boxes and shoes.

MAINTENANCE

Proper maintenance will extend the life and ensure the safety of your bunk bed.

- **Cleaning:** Wipe the metal frame with a damp cloth to remove dust and dirt. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Regular Inspection:** Periodically check all bolts, screws, and connections to ensure they are tight. Retighten any loose hardware to maintain the bed's structural integrity.
- **Weight Limits:** Always adhere to the maximum weight recommendation of 350 pounds. Overloading the bed can lead to structural damage and safety hazards.

TROUBLESHOOTING

If you encounter any issues with your Bellemave Metal Twin Over Full Bunk Bed, refer to the following common problems and solutions:

- **Squeaking Noises:** The bunk bed is engineered with robust metal tubing and slats designed to prevent squeaking. If squeaking occurs, re-check all assembly bolts and ensure they are securely tightened. Loose connections are the most common cause of noise.
- **Instability/Wobbling:** Ensure the bunk bed is placed on a flat, level surface. Verify that all frame components are correctly assembled and all hardware is fully tightened.
- **Ladder Feels Loose:** Check the connections where the ladder attaches to the bunk bed frame. Tighten any loose bolts.

If problems persist after attempting these solutions, please contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	TH-00292-T-B
Size	Twin over Full

Feature	Detail
Material	Metal
Product Dimensions (L x W x H)	77.95" x 56.3" x 58.66"
Style	Industrial
Special Features	No Box Spring Needed, Space Saving
Included Components	Guardrails, Slats
Maximum Weight Recommendation	350 Pounds
Item Weight	41 Pounds
Color	Black
Assembly Required	Yes
Product Care Instructions	Wipe with Damp Cloth

WARRANTY INFORMATION

Specific warranty details for the Bellemave Metal Twin Over Full Bunk Bed are typically provided at the point of purchase or within the product packaging. Please retain your proof of purchase for any warranty claims. For detailed warranty terms and conditions, please refer to the documentation included with your product or contact the retailer from whom you purchased the item.

CUSTOMER SUPPORT

If you have any questions regarding the assembly, operation, maintenance, or troubleshooting of your Bellemave Metal Twin Over Full Bunk Bed, please contact the retailer or manufacturer directly. Have your model number (TH-00292-T-B) and purchase information ready when contacting support.

For general inquiries, you may visit the Bellemave store on Amazon:[Bellemave Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DMZX5BH1>

More documents and user manuals: <https://manuals.plus/>