

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fdsutvit](#) /

› [Fdsutvit Safe Box 1.5 Cu Ft Instruction Manual](#)

Fdsutvit FW-25G

Fdsutvit 1.5 Cu Ft Steel Security Safe Box

Model: FW-25G

INTRODUCTION

Thank you for choosing the Fdsutvit 1.5 Cu Ft Steel Security Safe Box. This manual provides essential information for the safe and efficient operation of your new security safe. Please read it thoroughly before installation and use, and keep it for future reference.



Figure 1: Fdsutvit 1.5 Cu Ft Steel Security Safe Box, designed for securing valuables.

SAFETY INFORMATION

- Always keep emergency keys in a secure location away from the safe. Do not store them inside the safe.

- Ensure the safe is securely mounted to prevent unauthorized removal.
- Do not expose the safe to extreme temperatures or humidity.
- Keep children away from the safe and do not allow them to play with the keypad or keys.
- Replace batteries promptly when the low battery indicator appears to avoid lockouts.

PARTS LIST

The following components are included with your Fdsutvit Safe Box:

PRODUCT INFORMATION



Fireproof Bag
x1



Type-C Cable
x1



Instruction
x1



Key
x2



Screws
x4



Felt mat
x1

THE PRODUCT DOES NOT INCLUDE BATTERIES.

Figure 2: Included components for the Fdsutvit Safe Box.

- Fdsutvit Safe Box (1)
- Removable Shelf (1)
- Instruction Manual (1)
- Fireproof Waterproof Bag (1)
- Type-C Cable (1)
- Emergency Keys (2)
- Expansion Screws (4)

- Anti-scratch Floor Mat (1)

SETUP

1. Initial Unlocking (Using Emergency Key)

1. Locate the emergency keyhole, usually hidden behind the keypad cover or a small panel.
2. Insert one of the emergency keys into the keyhole.
3. Rotate the key clockwise while simultaneously turning the knob clockwise to open the safe door.
4. Once open, remove the key.

Your browser does not support the video tag.

Video 1: Demonstrates how to open the safe using the emergency key. This method is crucial for initial access and in case of battery depletion or forgotten password.

2. Battery Installation

The safe requires 4 AA batteries (not included) for the electronic keypad to function.

1. Open the safe door.
2. Locate the battery compartment on the inside of the door.
3. Insert 4 AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover.

THREE EMERGENCY BATTERY



PASSCODE + KNOB



KEY + KNOB



USB POWER + CODE + KNOB

INITIAL PASSWORD **159 + #**

Figure 3: The safe's keypad and various unlocking methods, including emergency power via Type-C port.

3. Mounting the Safe

For enhanced security, it is highly recommended to mount the safe to a wall or floor using the provided expansion screws.

1. Choose a suitable location for mounting.
2. Mark the drilling points through the pre-drilled holes inside the safe.
3. Drill holes in the wall or floor using an appropriate drill bit.

4. Insert the expansion screws and secure the safe firmly.



Figure 4: Steps for securely mounting the safe to a wall.

OPERATING INSTRUCTIONS

1. Opening with Digital Keypad

The initial password is **159#**.

1. Input the default password: **159**.
2. Press the **#** key. The indicator light will turn green.
3. Within 5 seconds, turn the knob clockwise to open the safe door.

Your browser does not support the video tag.

Video 2: Demonstrates how to open the safe using the digital keypad with the default password.

2. Setting a New Password

You can change the password to a personal 3-8 digit code.

1. Open the safe door.
2. Locate and press the red setting button on the inside of the door (usually near the hinge).
3. Input your new 3-8 digit password on the keypad.
4. Press the **#** key to confirm.
5. Repeat steps 3 and 4 to confirm the new password. The indicator light will flash green and beep to confirm success.

Your browser does not support the video tag.

Video 3: Demonstrates the process of setting a new password for the safe.

3. Silent Mode (Mute Function)

You can turn off the keypad sound for silent operation.

- To turn off the sound: Input ***633** on the keypad.

- To turn on the sound: Input *66 on the keypad.

SMART ALARM & SILENT MODE



Password Error Alarm



Silent Keypad Mode

Figure 5: The safe features a smart alarm system and an optional silent keypad mode.

Your browser does not support the video tag.

Video 4: Demonstrates how to activate and deactivate the silent mode for the keypad.

4. Emergency Power (Type-C Port)

In case of battery depletion, you can power the safe externally using a Type-C cable (included) connected to a power source.

1. Connect the Type-C cable to the port on the keypad.
2. Input your password and press #.
3. Turn the knob clockwise to open the safe.

5. Alarm System

The safe is equipped with a strong alarming system for enhanced security:

- **Incorrect Password Alarm:** After 3 consecutive incorrect password attempts, the safe will trigger an alarm beep and lock the keypad for 20 seconds.
- **Extended Lockout:** After 6 consecutive incorrect password attempts, the safe will enter a 5-minute lockdown with a continuous alarm.

6. Removable Shelf

The safe includes a removable shelf to help organize your valuables and maximize storage efficiency.

REMOVABLE SHELF

Versatile interior organization

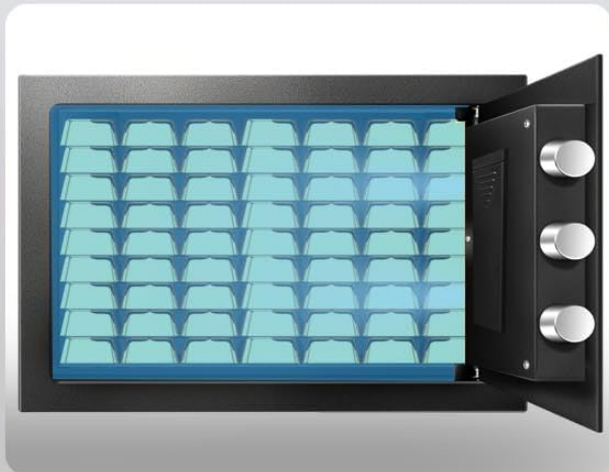


Figure 6: The removable shelf allows for versatile interior organization.

7. Sensor Light

The safe features a built-in motion sensor light that illuminates the interior when the door is opened, making it easier to see your valuables.

Illuminate Your Valuables - Built-in Motion Sensor Lights



Figure 7: Built-in motion sensor lights illuminate the safe's interior.

MAINTENANCE

- **Cleaning:** Wipe the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** Replace all 4 AA batteries when the low battery indicator appears on the keypad. Use high-quality alkaline batteries for optimal performance.
- **Key Care:** Keep emergency keys clean and dry. Do not force them into the lock.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Safe does not open with password.	Incorrect password entered; batteries are low or dead.	Verify password and re-enter. Replace batteries or use emergency Type-C power. Use emergency key to open.
Keypad is unresponsive.	Batteries are dead; keypad is locked due to multiple incorrect entries.	Replace batteries or use emergency Type-C power. Wait for the lockout period to expire (20 seconds or 5 minutes).
Alarm sounds unexpectedly.	Multiple incorrect password entries; physical tampering detected.	Ensure correct password entry. Check for any signs of tampering. The alarm will reset after a correct entry or lockout period.
Door does not close properly.	Obstruction in the door frame; locking bolts are extended.	Check for any items blocking the door. Ensure the knob is turned to retract the locking bolts before closing.

SPECIFICATIONS

Feature	Detail
Brand	Fdsutvit
Model	FW-25G
Product Dimensions	9.84"D x 13.77"W x 9.84"H
Capacity	1.5 Cubic Feet
Material	Alloy Steel
Lock Type	Electronic Combination Lock
Special Features	Alarm System, Anti-Theft, Combination Lock, Removable Shelf, Sensor Light
Mounting Type	Floor Mount
Item Weight	16.52 Pounds
Power Source	4 x AA Batteries (not included)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Fdsutvit website. Keep your purchase receipt as proof of purchase for warranty claims.

For additional assistance, you may contact Fdsutvit customer service through their Amazon store page: [Fdsutvit Store](#).

