

[Manuals.plus](#) /

› [Baotree](#) /

› Baotree 3-in-1 Baby Bouncer Adjustable Wooden Rocker Chair Instruction Manual

Baotree WTTBA8002

Baotree 3-in-1 Baby Bouncer Adjustable Wooden Rocker Chair Instruction Manual

Model: WTTBA8002 | Brand: Baotree

1. INTRODUCTION

This instruction manual provides essential information for the safe and proper assembly, operation, and maintenance of your Baotree 3-in-1 Baby Bouncer Adjustable Wooden Rocker Chair. Please read this manual thoroughly before use and retain it for future reference. This versatile chair is designed to provide a comfortable and secure environment for infants and toddlers, functioning as a bouncer, recliner, and stationary seat.

2. SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always use the restraint system.
- Never leave child unattended.
- Do not use this product once your child can sit up unaided or weighs more than 33 pounds (15 kg).
- This product is not intended for prolonged periods of sleep.
- Do not move or lift the product with the child in it.
- Place the product on a flat, level surface. Avoid placing on elevated surfaces.
- Keep away from open flames, heaters, and other sources of strong heat.
- Regularly inspect the product for loose fasteners, damaged joints, or broken parts. Discontinue use if any damage is found.
- It is recommended to use this product on carpets or mats to prevent sliding, especially on smooth floors.

3. PACKAGE CONTENTS

Verify that all components are present before assembly:

- Wooden frame components
- Removable cotton cushion with safety harness
- Assembly hardware (screws, nuts, tools if provided)

- Instruction Manual (this document)

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to assemble on a soft surface to prevent scratching the wooden components.

Step 1: Prepare Components

Unpack all parts and lay them out. Ensure all hardware is accounted for.



Image: All components of the Baotree 3-in-1 Baby Bouncer laid out for assembly, including wooden frame pieces, cushion, and hardware.

Step 2: Assemble the Wooden Frame

Connect the side panels to the base and backrest using the provided screws and tools. Ensure all connections are secure but do not overtighten.

Seat Cushion Display



Cushion Removable



Cotton Fabrics



Belt Adjustable



Image: Close-up view of the wooden frame assembly, illustrating how screws are inserted into pre-drilled holes to connect the structural pieces.

Step 3: Attach the Cushion

Place the removable cotton cushion onto the assembled wooden frame. Secure it using any integrated straps or fasteners on the cushion and frame.



Image: The fully assembled Baotree 3-in-1 Baby Bouncer, featuring the grey cushion and safety harness securely installed on the natural wooden frame.

Step 4: Install the Five-Point Buckle

Ensure the five-point safety harness is correctly threaded through the cushion and securely fastened. Adjust straps for a snug fit.

Install the Five Point Buckle



Image: A visual guide demonstrating the correct procedure for installing and securing the five-point safety buckle system on the cushion.

5. OPERATING INSTRUCTIONS

5.1 Adjusting Recline Positions (3-in-1 Functionality)

The Baotree rocker chair offers three distinct recline positions: Fixed Chair, Toddler Rocker, and Sleek Rocker. To adjust, locate the adjustment mechanism on the side of the wooden frame. Carefully lift and reposition the backrest to the desired notch.

3 Recline Position

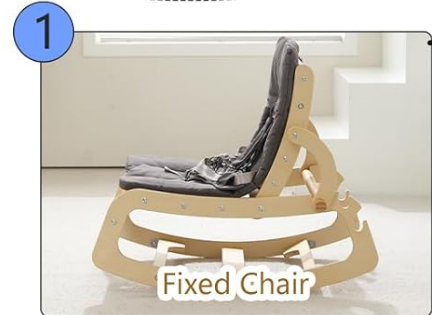


Image: A visual representation of the three adjustable recline positions: Fixed Chair (most upright), Toddler Rocker (mid-recline), and Sleek Rocker (most reclined).

5.2 Using as a Rocking Chair

To enable the rocking function, ensure the stop-bar (located underneath the base) is rotated away from the floor. This allows the curved base to rock freely.

How to use as a rocking chair

You can rotate the stop-bar(away from floor) to function as a rocking chair



Use as a fixed chair

Rotate the stop-bar and secure it to the floor



Image: Instructions showing the stop-bar in the "rocking" position, rotated upwards and away from the floor.

5.3 Using as a Fixed Chair

To convert to a stationary seat, rotate the stop-bar underneath the base so it makes contact with the floor. This will prevent the chair from rocking.

How to use as a rocking chair

You can rotate the stop-bar(away from floor) to function as a rocking chair



Use as a fixed chair

Rotate the stop-bar and secure it to the floor



Image: Instructions showing the stop-bar in the "fixed" position, rotated downwards to make contact with the floor, stabilizing the chair.

5.4 Securing Your Child

Always use the five-point safety harness. Place your child in the seat, bring the shoulder straps over their shoulders, and the waist straps around their waist. Connect all buckles securely. Adjust the straps for a snug fit, ensuring no more than one finger can fit between the strap and your child's body.

6. MAINTENANCE

6.1 Cleaning the Cushion

The natural cotton cushion is removable and machine-washable. Refer to the care label on the cushion for specific washing instructions. Typically, wash on a gentle cycle with cold water and mild detergent. Air dry or tumble dry on low heat.

6.2 Cleaning the Wooden Frame

Wipe the wooden frame with a damp cloth and mild soap. Dry thoroughly immediately after cleaning. Avoid abrasive cleaners or harsh chemicals that could damage the wood finish.

6.3 General Care

Periodically check all screws and fasteners to ensure they are tight. Do not overtighten. Store the chair in a dry environment away from direct sunlight or extreme temperatures to prevent wood warping or damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair slides on smooth floors.	Lack of friction between wooden base and floor surface.	Place the chair on a carpet or mat. Consider adding non-slip pads to the bottom of the wooden runners.
Chair does not rock smoothly.	Stop-bar is engaged, or uneven surface.	Ensure the stop-bar is rotated away from the floor. Verify the chair is on a flat, level surface.
Cushion feels loose.	Cushion not properly secured or straps are loose.	Re-attach the cushion, ensuring all fasteners are secure. Adjust the safety harness straps for a snug fit.

8. SPECIFICATIONS

- **Model:** WTTBA8002
- **Brand:** Baotree
- **Product Dimensions:** 27.6"D x 18.9"W x 24.2"H (70.1 cm D x 48 cm W x 61.5 cm H)
- **Item Weight:** 10 pounds (4.5 kg)
- **Maximum Weight Recommendation:** 33 pounds (15 kg)
- **Material Type:** Natural Birch Wood, Cotton (cushion)
- **Color:** Grey (cushion)
- **Age Recommendation:** From infancy until child can sit up unaided.

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the retailer where the product was purchased or visit the official Baotree website. Keep your proof of purchase for any warranty claims.
For further assistance, please contact Baotree customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DMZZJ6NP>

More documents and user manuals: <https://manuals.plus/>