

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Puroma](#) /

> [Puroma 6 Pack TSA Approved 4-Digit Combination Luggage Locks Instruction Manual](#)

Puroma CLL43C

Puroma 6 Pack TSA Approved 4-Digit Combination Luggage Locks Instruction Manual

Model: CLL43C

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Puroma 6 Pack TSA Approved 4-Digit Combination Luggage Locks. These locks are designed to secure your belongings during travel and are approved by the Transportation Security Administration (TSA).



Image: Overview of the Puroma 6 Pack TSA Approved Luggage Locks.

SAFETY INFORMATION

Always ensure the lock is properly engaged before leaving your luggage unattended. While these locks provide enhanced security, no lock can guarantee complete protection against theft. Keep your combination confidential and do not share it with unauthorized individuals.

SETUP: SETTING YOUR COMBINATION

Your Puroma TSA Approved Combination Lock comes with a default combination of **0-0-0-0**. Follow these steps to set your personalized combination:

1. **Default Code Alignment:** Turn the dials to the default code 0-0-0-0 and align the numbers in the password window.
2. **Push in the Reset Button:** Locate the small reset button on the bottom of the lock. Use a sharp tool (e.g., a pen tip or SIM ejector tool) to press and hold this button until it remains recessed.
3. **Set Your New Combination:** While the reset button is recessed, turn the dials to your desired 4-digit combination.

Ensure the numbers are completely visible and aligned in the password window.

4. **Release the Reset Button:** Press the oval button on the top of the lock body. The recessed reset button will now pop back out, and your new password is saved successfully.

1

Default Code 0-0-0-0

Turn the password to the default code 0-0-0-0, and align the password window.



2

Push in the Reset Button

Use a sharp tool to press the reset button on the bottom, then remove the tool; now the reset button remains recessed.

3

Set Your Combination

Now the password can be changed to any combination you want.



4

Release the Reset Button

After setting the password, press the oval button on the top of the lock body (now the bottom button will reset), and the new password is saved successfully.

Image: Step-by-step guide for setting the lock combination.

Note: If you cannot open the lock with the default code "0000" on first use, please try with the codes "1000", "0001", "9000", or "0009" to open again. Always ensure the numbers are completely in the window when setting a new combination; otherwise, you may fail to set it.

OPERATING YOUR LOCK

Locking Your Luggage

1. Align the lock's cable through the zipper pulls of your luggage.
2. Insert the end of the cable into the lock body until it clicks securely into place.
3. Scramble the dials to a random set of numbers to secure the lock.

Unlocking Your Luggage

1. Turn the dials to your personal 4-digit combination.
2. Press the oval unlock button on the top of the lock body. The cable will release, allowing you to open your luggage.

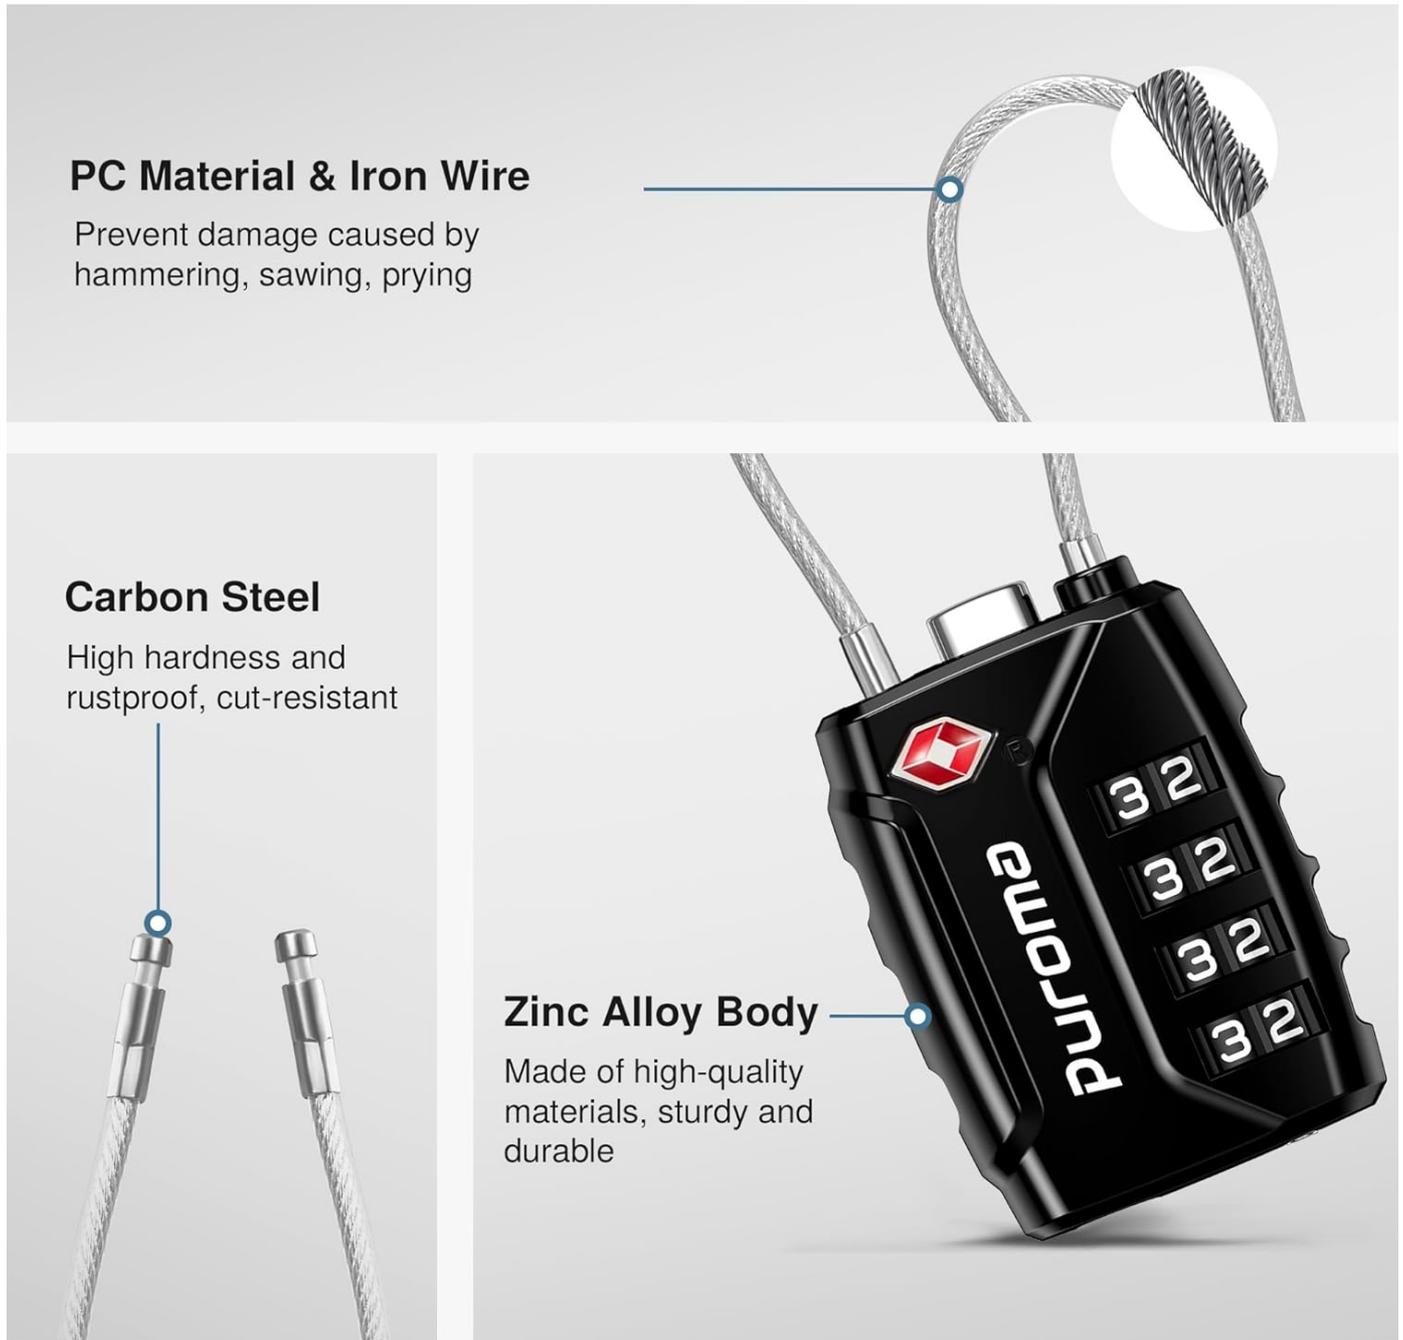


Image: The unlock button and quick-read design for easy operation.

TSA Approved Feature

These locks are TSA Approved, meaning Transportation Security Administration agents can open your luggage for inspection using a special master key without damaging your lock or luggage. After inspection, the agent will relock your luggage, ensuring your belongings remain secure.

TSA Approved



TSA can open your lock with their key.



SAFE INSPECTION
NO DAMAGE



Using this *Travel Sentry*® Approved lock allows your luggage to be opened, inspected and relocked by security authorities without damage.

Image: Explanation of the TSA Approved feature.

Video: Official Puroma demonstration of the TSA Approved Luggage Locks and combination setting.

FEATURES AND APPLICATIONS

- **Enhanced Security:** 4-digit combination offers 10,000 unique possibilities, providing greater security than standard 3-digit locks.
- **Durable Construction:** Crafted from premium zinc alloy and sturdy steel, designed to resist sawing, hammering, and prying attempts.
- **Flexible Cable:** The flexible cable design allows for versatile use on various items, including luggage, backpacks, equipment cases, and gym lockers.
- **Quick-read Design:** White numerals on black dials ensure easy readability, even in low-light conditions.

10,000
Safe Combinations



PUROMA



4 Digit Combination

VS

OTHERS




3 Digit Combination

Image: Highlighting the 10,000 possible combinations of the 4-digit lock.

Unlock Button

Make opening the lock easier

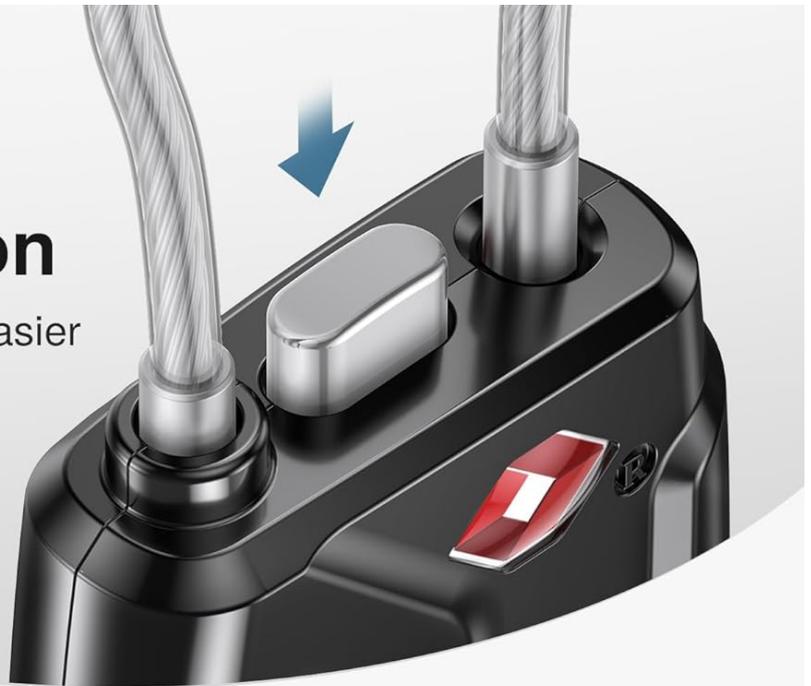

Quick-read Design

Combo line for easy reading

Image: Details on the durable construction materials.



For suitcases or luggage

For backpack or laptop bag

Image: Examples of the lock's wide application on luggage and backpacks.

MAINTENANCE

To ensure the longevity and smooth operation of your locks:

- Keep the locks clean and free from dirt or debris.
- Avoid exposing the locks to extreme temperatures or harsh chemicals.
- Periodically check the cable and lock body for any signs of wear or damage. Replace if necessary.

TROUBLESHOOTING

Lock Does Not Open with Correct Combination

Ensure that all four digits of your combination are perfectly aligned in the viewing window. Sometimes, a slight misalignment can prevent the lock from opening. If the issue persists, try re-entering the combination carefully.

Unable to Reset Combination

Verify that the lock is set to the current correct combination before attempting to press the reset button. The reset button will only remain recessed if the lock is in the unlocked state (set to the current combination). Ensure you are using a sufficiently sharp, thin tool to fully depress the reset button.

SPECIFICATIONS

Brand	Puroma
Model Name	CLL43C
Lock Type	Combination Lock
Material	Alloy Steel, Zinc
Color	Basic Black
Number of Pieces	6
Item Weight	1.1 pounds (0.5 Kilograms)
UPC	840064903134

Conveniently Portable

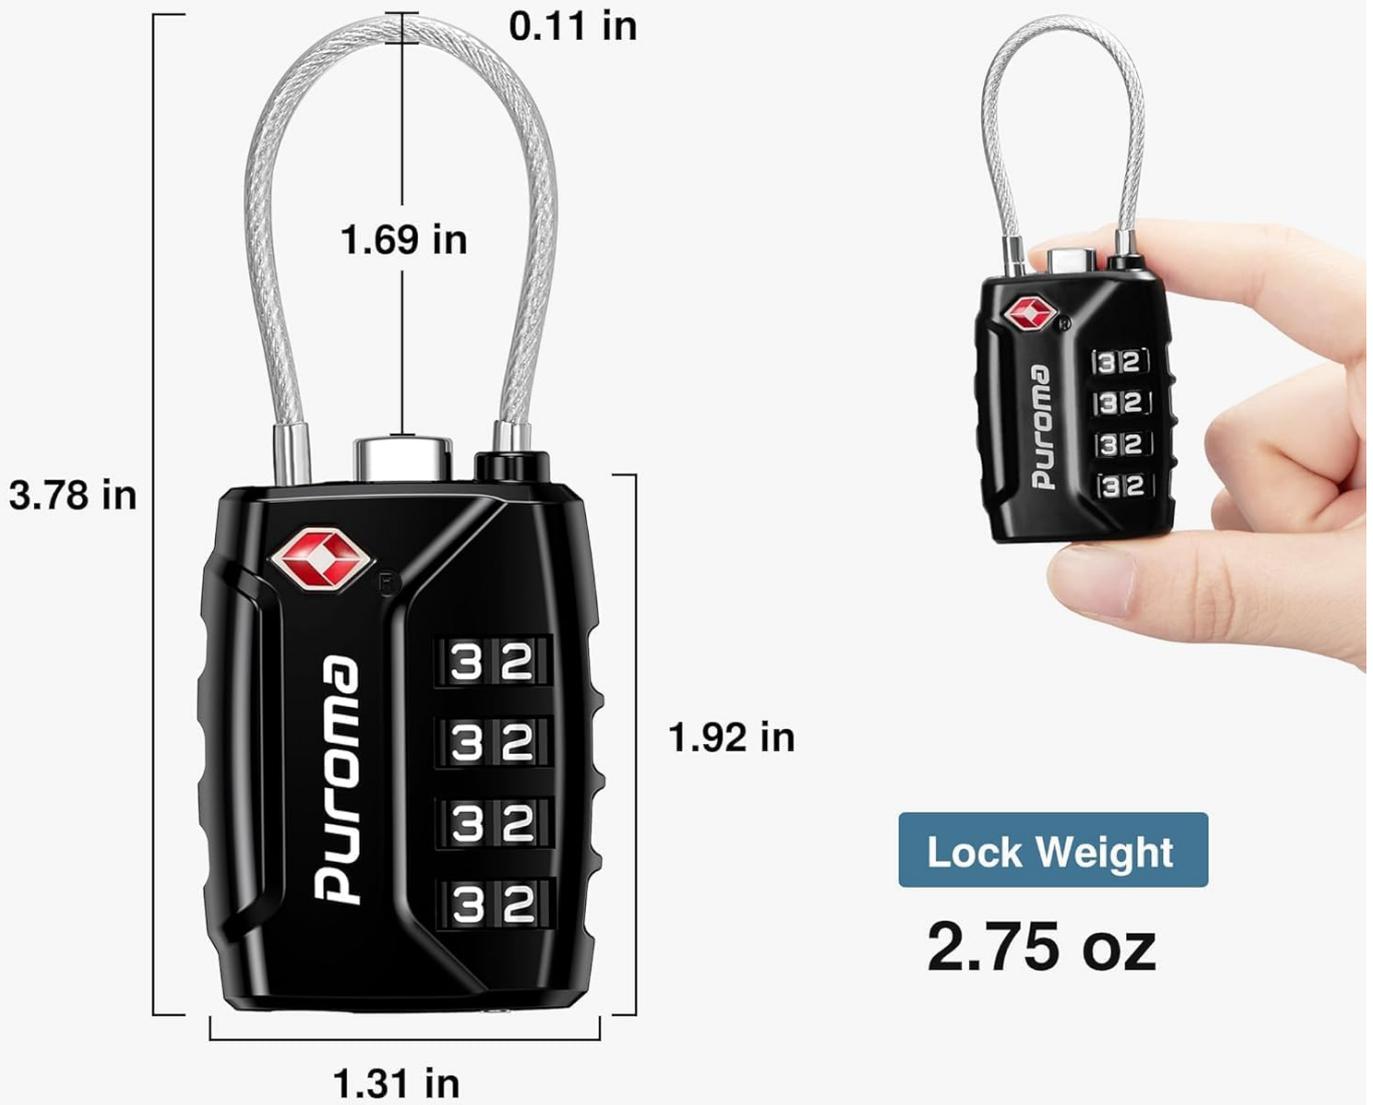


Image: Dimensions and weight of the Puroma luggage lock.

WARRANTY AND SUPPORT

For any product inquiries or support, please contact Puroma customer service at: support@puroma.net.