

[Manuals.plus](#) /

> [Coleman](#) /

> Coleman Camping Mini Lantern LED Model 2218366 Instruction Manual

Coleman 2218366

Coleman Camping Mini Lantern LED Model 2218366 Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Coleman Camping Mini Lantern LED, Model 2218366. This rechargeable mini lantern is designed for versatility, allowing it to be hung or placed on a tabletop. It features adjustable LED color and brightness to suit various environments and needs.





Image 1: Front view of the Coleman Camping Mini Lantern LED.

2. SAFETY INFORMATION

- Do not disassemble or modify the lantern.
- Keep out of reach of children.
- Avoid direct eye exposure to the LED light.
- Use only the provided or a certified USB Type-C cable for charging.
- Do not expose the lantern to extreme temperatures or open flames.
- Ensure the charging port cover is securely closed when not charging to maintain waterproof performance.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Coleman Camping Mini Lantern LED (Model 2218366)
- USB Type-C Charging Cable
- Dedicated Carabiner

4. SETUP

4.1 Initial Charging

Before first use, fully charge the lantern. Connect the provided USB Type-C cable to the lantern's charging port and to a compatible USB power source (e.g., wall adapter, power bank, computer USB port). The charging indicator light will show the charging status.



Image 2: Close-up view of the USB Type-C charging port on the lantern.

4.2 Attaching the Carabiner

Attach the dedicated carabiner to the strap loop on the top of the lantern for convenient hanging. Ensure the carabiner is securely fastened before hanging the lantern.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the power button located on the top of the lantern to turn it on. Press the button again to cycle through light modes and brightness levels, and a final press to turn it off.

5.2 Light Modes and Brightness Adjustment

The lantern offers three LED light modes and two brightness levels for each mode:

- **Warm White** (): Provides a cozy, amber glow. Ideal for creating a relaxed atmosphere.
- **MIX** (): A balanced blend of warm and cool light. Suitable for general illumination.
- **Daylight White** (): A bright, clear white light. Best for tasks requiring high visibility.

To adjust brightness, cycle through the modes. Each mode has a High and Low setting. The sequence is typically: Warm White High > Warm White Low > MIX High > MIX Low > Daylight White High > Daylight White Low > Off.



Image 3: The lantern displaying Warm White, Mixed, and Daylight White light modes.

6. CHARGING INSTRUCTIONS

The lantern features a built-in rechargeable lithium-ion battery. To charge:

1. Locate the USB Type-C charging port on the side of the lantern.
2. Open the protective cover of the charging port.
3. Connect the provided USB Type-C cable to the lantern and to a USB power source.
4. The charging indicator will illuminate (e.g., red for charging, green for fully charged).
5. Charging time is approximately 4 hours for a full charge.
6. Once charging is complete, disconnect the cable and securely close the protective cover to maintain waterproof integrity.

7. USAGE SCENARIOS

This versatile lantern is suitable for a variety of applications:

- **Outdoor Activities:** Ideal for camping, hiking, fishing, and other outdoor adventures.
- **Indoor Use:** Provides ambient or task lighting in garages, living rooms, or workshops.

- **Emergency Preparedness:** An essential item for disaster kits and power outages.
- **Flexible Placement:** Use the carabiner to hang it inside a tent, from a branch, or on a hook. Alternatively, place it on any flat surface like a table or desk.

8. MAINTENANCE

- **Cleaning:** Wipe the lantern with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the lantern in a cool, dry place when not in use. For long-term storage, ensure the battery is partially charged (around 50%) and recharge every 3-6 months to prolong battery life.
- **Waterproof Performance:** The lantern is IPX4 compliant, meaning it can withstand water splashes from all directions for 10 minutes. Do not submerge the lantern in water.

9. TROUBLESHOOTING

- **Lantern does not turn on:** Ensure the battery is charged. Connect to a power source and attempt to charge.
- **Light is dim:** The battery may be low. Recharge the lantern.
- **Charging not working:** Check the USB Type-C cable and power source for proper connection and functionality. Try a different cable or power source.
- **Water ingress:** If water enters the device, immediately turn it off and allow it to dry completely before attempting to use or charge again. Contact customer support if issues persist.

10. SPECIFICATIONS

Feature	Specification
Model Number	2218366
Light Source Type	LED (Warm White, MIX, Daylight White)
Power Source	Battery powered (Rechargeable Lithium Ion)
Material	ABS resin, other
Item Dimensions (L x W x H)	Approx. Φ 8.5 x 12.5 (h) cm
Item Weight	Approx. 150 grams
Waterproof Performance	IPX4 compliant (withstands water splashes from all directions for 10 minutes)
Charging Time	Approx. 4 hours
Continuous Lighting Time (MIX High)	Approx. 4.5 hours
Continuous Lighting Time (MIX Low)	Approx. 8 hours
Continuous Lighting Time (Daylight White High)	Approx. 9 hours
Continuous Lighting Time (Daylight White Low)	Approx. 16 hours

Feature	Specification
Continuous Lighting Time (Warm White High)	Approx. 9 hours
Continuous Lighting Time (Warm White Low)	Approx. 16 hours
Brightness (MIX High)	Approx. 300 lumens
Brightness (MIX Low)	Approx. 90 lumens
Brightness (Daylight White High)	Approx. 160 lumens
Brightness (Daylight White Low)	Approx. 50 lumens
Brightness (Warm White High)	Approx. 160 lumens
Brightness (Warm White Low)	Approx. 50 lumens

11. WARRANTY AND SUPPORT

For warranty information, please refer to the product packaging or the official Coleman website. If you encounter any issues or require assistance with your Coleman Camping Mini Lantern LED, please contact Coleman customer support through their official channels. Keep your purchase receipt for warranty claims.