



[Manuals.plus](#) /

> [Sifely](#) /

> Sifely Fingerprint Smart Deadbolt with Keypad - Model O Instruction Manual

Sifely Sifely Model O Deadbolt

Sifely Fingerprint Smart Deadbolt with Keypad - Model O Instruction Manual

Brand: Sifely | Model: Sifely Model O Deadbolt

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Sifely Fingerprint Smart Deadbolt with Keypad, Model O. This smart lock offers multiple access methods including fingerprint, keypad code, mobile app, fob, and physical key, enhancing security and convenience for various environments such as homes, apartments, offices, and rental properties.

2. WHAT'S IN THE BOX

Please verify that all components are present before beginning installation:

- Front Panel (Exterior Keypad)
- Back Panel (Interior Lock)
- Mounting Plate
- Deadbolt
- Strike Plate
- Physical Keys (2)
- Key Fobs (2)
- Installation Screws (various sizes for different steps)
- Quick Start Manual
- Installation Manual

Supports 100+ Fingerprints



AI-powered fingerprint unlocker learns and gets faster with each unlock. Manage all fingerprints via the app. IP65+ Waterproof.

Image: All included components for the Sifely Smart Deadbolt.

3. SPECIFICATIONS

Feature	Detail
Brand	Sifely
Model Number	Sifely Model O Deadbolt
Lock Type	Biometric, Combination Lock, Deadbolt, Keypad
Material	Aluminum, Zinc
Item Dimensions (L x W x H)	6.3 x 2.6 x 1.9 inches

Item Weight	2 Pounds
Special Features	Anti-Peeping Password, Back-Lit Keypad, Auto-Lock, Fingerprint, Fob Unlock, One-Touch Lock, Passcode Unlock, Touchscreen, Weather Resistant
Controller Type	App Control, Keypad, Fingerprint, Code / Passcode, Remote Access, Automatic Locking, Voice Control (Alexa / Google)
Connectivity Protocol	Bluetooth, Wi-Fi (with optional Gateway)
Door Thickness Compatibility	1 3/8" ~ 2 3/16" (35mm - 55mm)
Bore Hole Diameter	2 1/8" (54mm)
Bore Hole Backset	2 3/8" or 2 3/4" (60mm or 70mm)

4. SETUP AND INSTALLATION

The Sifely Smart Deadbolt is designed for easy DIY installation. A Phillips head screwdriver and 4 AA batteries are required. It is recommended to install the lock with the door open or ajar. Do not close the door until batteries are inserted and the lock is fully tested.

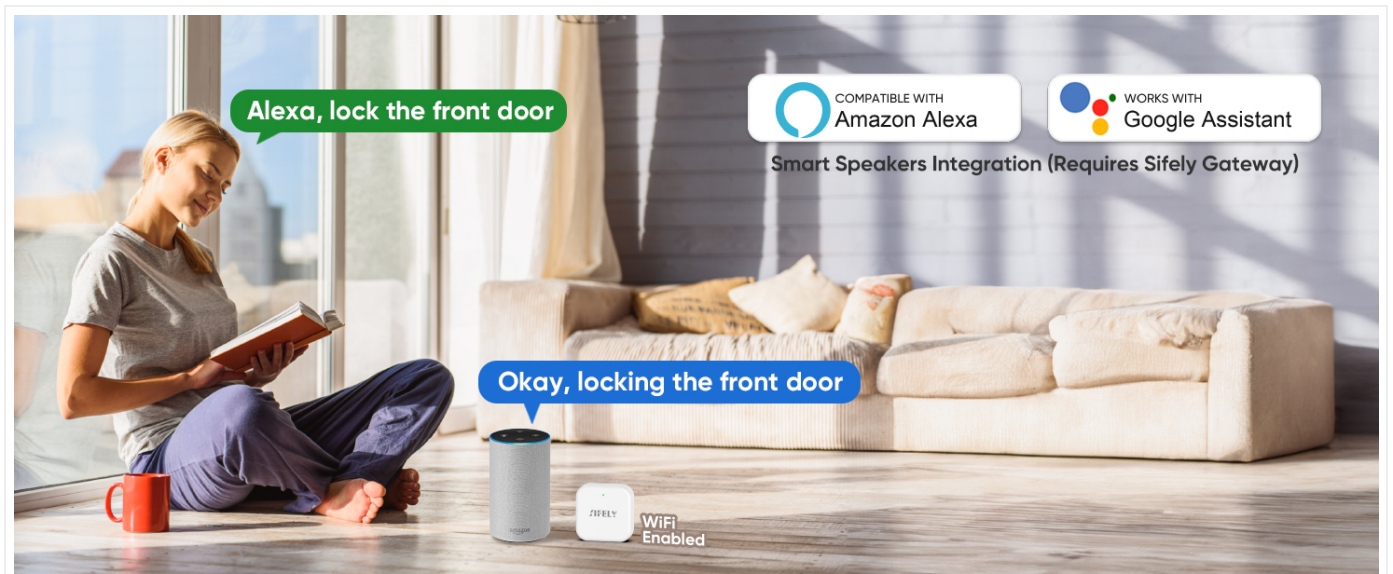


Image: Door compatibility specifications for installation.

4.1. Installation Video Guide

Your browser does not support the video tag.

Video: A detailed guide on how to install the Sifely Smart Deadbolt. This video covers all steps from preparing the door to final calibration.

4.2. Step-by-Step Installation

1. Install the Deadbolt:

- Hold the deadbolt in front of the door hole to check if the T-shaped hole is centered. If not, adjust the bolt by rotating it to the end.
- Ensure the 'UP' arrow on the deadbolt is facing upwards.
- Install the deadbolt into the door hole and secure it using the screws from the 'STEP 1' screw package.

Quick and Easy Installation



Install in just 30 minutes with only a screwdriver.
No drilling needed to replace existing locks. Easily
pair and set up with the app.

Image: Installing the deadbolt into the door frame.

2. Install Exterior Keypad:

- Ensure the bump on the tailpiece of the exterior keypad is facing upwards.
- Slide the tailpiece into the T-shaped hole on the deadbolt.
- Route the cable under the deadbolt, ensuring the exterior keypad is facing outside.

3. Install Mounting Plate:

- Thread the cable through the hole at the bottom of the mounting plate.
- Slide the tailpiece from the exterior keypad into the corresponding hole on the mounting plate.
- Align the guide posts of the mounting plate with the holes on the exterior keypad.
- Measure your door thickness using the provided scale card to select the correct screws from the 'STEP 3' screw package.
- Secure the mounting plate using the selected screws.

4. Attach Wire Cable to Interior Lock:

- Remove the battery cover by pulling it upwards off the interior lock body.

- Connect the cable from the exterior keypad to the designated port on the interior lock.
- Insert any excess cable into the door hole to prevent pinching.

5. Install Interior Lock:

- Insert the tailpiece on the exterior keypad into the T-shaped slot at the back of the interior lock.
- Secure the interior lock using the screws from the 'STEP 5' screw package.

6. Perform Calibration for your door:

- Insert 4 AA batteries into the interior lock.
- On the exterior keypad, enter "123456#" to initiate the door handing process.
- When the bolts stop moving, the calibration is complete.

5. OPERATING INSTRUCTIONS

5.1. Unlocking Methods

- **Fingerprint:** Place your registered fingerprint on the sensor. The lock supports over 100 fingerprints.

Supports 150+ PIN Codes

Custom Codes

Customize with 4-6 digit codes.

Timed Codes

Valid only during the date and time you set.

One-Time Codes

One-time codes work just once.

Recurring Codes

Weekly codes that repeat.

* Generate all codes remotely without needing Sifely Wi-Fi Gateway, except for custom codes.

Image: Unlocking the deadbolt using the fingerprint sensor.

- **Keypad Code:** Enter your programmed 4-6 digit code on the keypad. The lock supports over 100 codes, including custom, timed, one-time, and recurring codes.

Unlock using Fobs

**Wireless Key Fob
(Sold Separately)**



**Wristband Fob
(Sold Separately)**



**Key Fob
(Included)**



One lock can pair with
200+ fobs

One fob can pair with
Unlimited locks

Image: Managing passcodes via the Sifely app.

- **Mobile App:** Use the Sifely app to unlock the door remotely (with optional Gateway) or via Bluetooth when nearby.

Control from Anywhere

Without Gateway:

- . Generate Codes Remotely
- . Send eKeys Remotely

With Optional Gateway:


- . Lock / Unlock Remotely
- . View Real-time Access Log
- . Get Real-time Push Notifications



(Sold Separately)

Image: Remote control and monitoring via the Sifely app.

- **Fob:** Tap a registered key fob against the keypad to unlock.

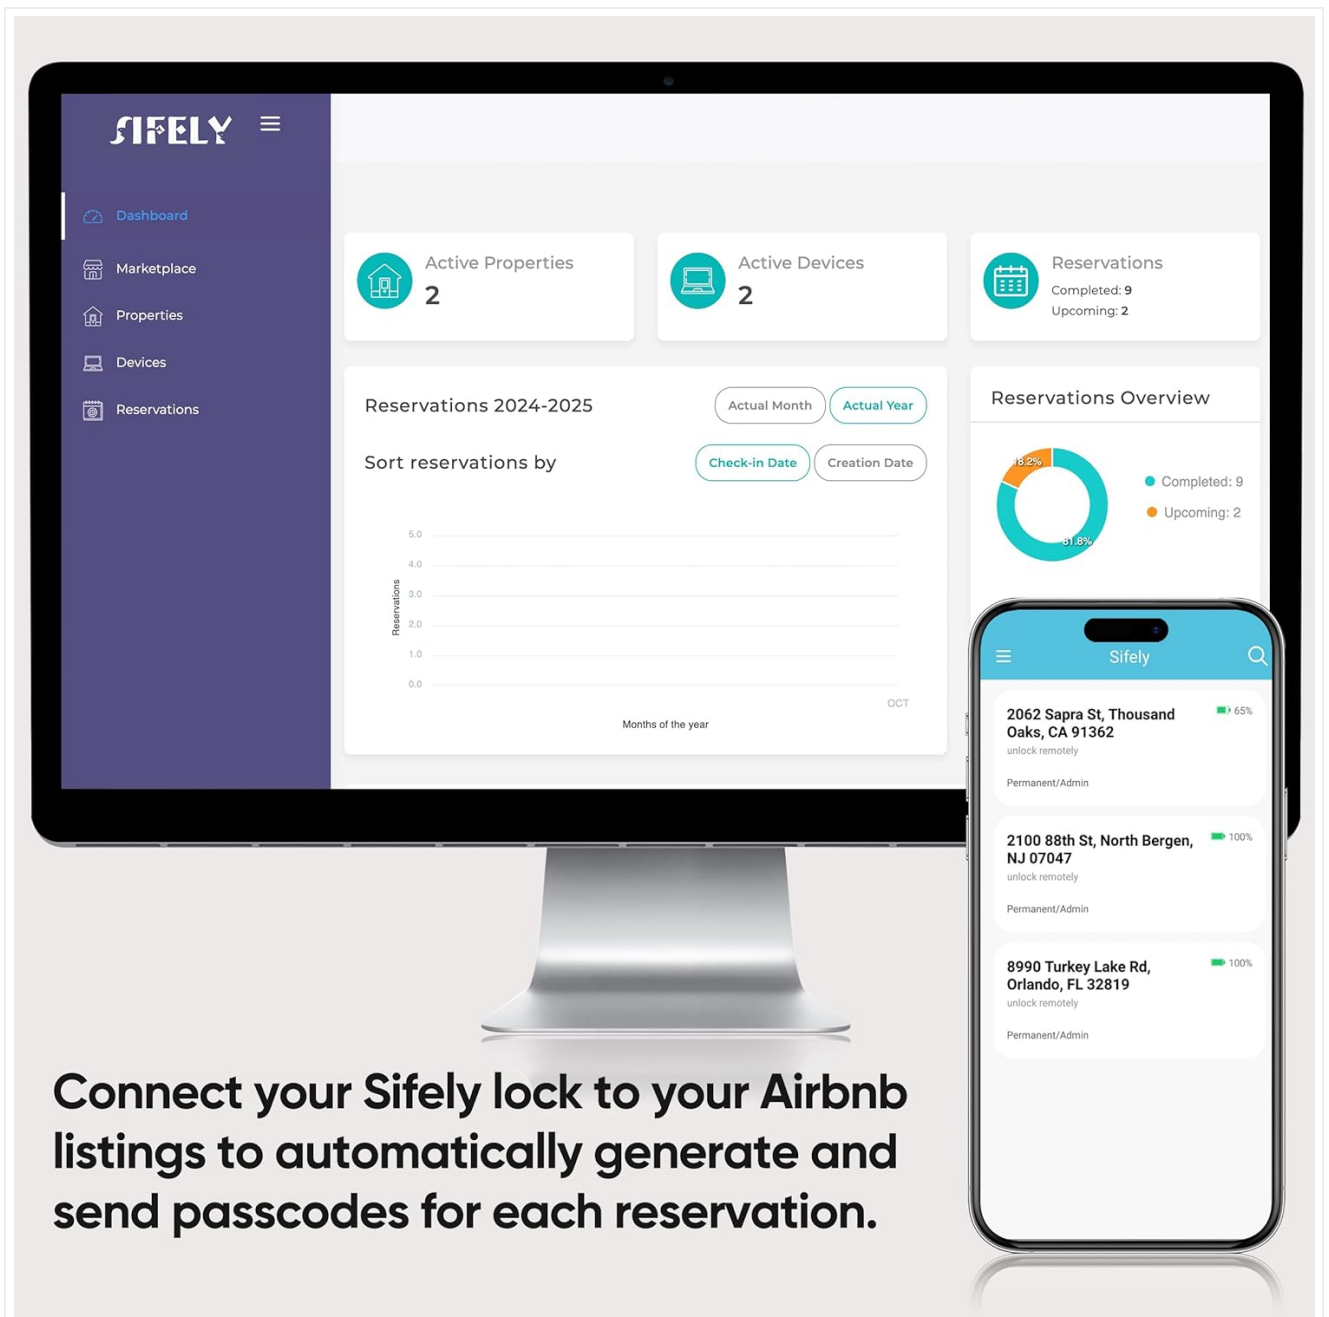

Connect your Sifely lock to your Airbnb listings to automatically generate and send passcodes for each reservation.

Image: Various fob options for unlocking the deadbolt.

- **Physical Key:** Use the provided physical keys as a backup.

5.2. Locking Methods

- **Auto-Lock:** The lock can be configured to automatically lock after a set period following each entry.
- **One-Touch Lock:** Press and hold the '#' button on the keypad to lock the door from the outside.
- **Interior Knob:** Turn the interior knob to manually lock or unlock the door from the inside.



Image: Auto-lock and manual locking features.

5.3. Security Modes

- **Privacy Mode:** Engages a full lock from the inside, preventing external access even with valid credentials.
- **Passage Mode:** Keeps the door unlocked for continuous access during specific times or events.
- **Anti-Peep Code:** Enter random digits before or after your actual passcode to prevent others from guessing your code.

5.4. Smart Speaker Integration

The Sifely Smart Deadbolt is compatible with Amazon Alexa and Google Assistant for voice control. A Sifely Gateway (sold separately) is required for this functionality.

Smart Speakers Integration

Requires Sifely Gateway, Sold Separately

Alexa, lock the front door

Okay

COMPATIBLE WITH
Amazon Alexa

WORKS WITH
Google Assistant

Image: Voice control integration with smart speakers.

Your browser does not support the video tag.

Video: A brief overview of the Sifely Smart Lock Model O, demonstrating its features and ease of use.

6. MAINTENANCE

6.1. Battery Replacement

The Sifely Smart Deadbolt operates on 4 AA batteries and offers up to one year of battery life. The lock will provide low battery alerts when replacement is needed. To replace batteries:

1. Remove the battery cover from the interior lock body.
2. Remove the old batteries.
3. Insert 4 new AA batteries, ensuring correct polarity.
4. Replace the battery cover.

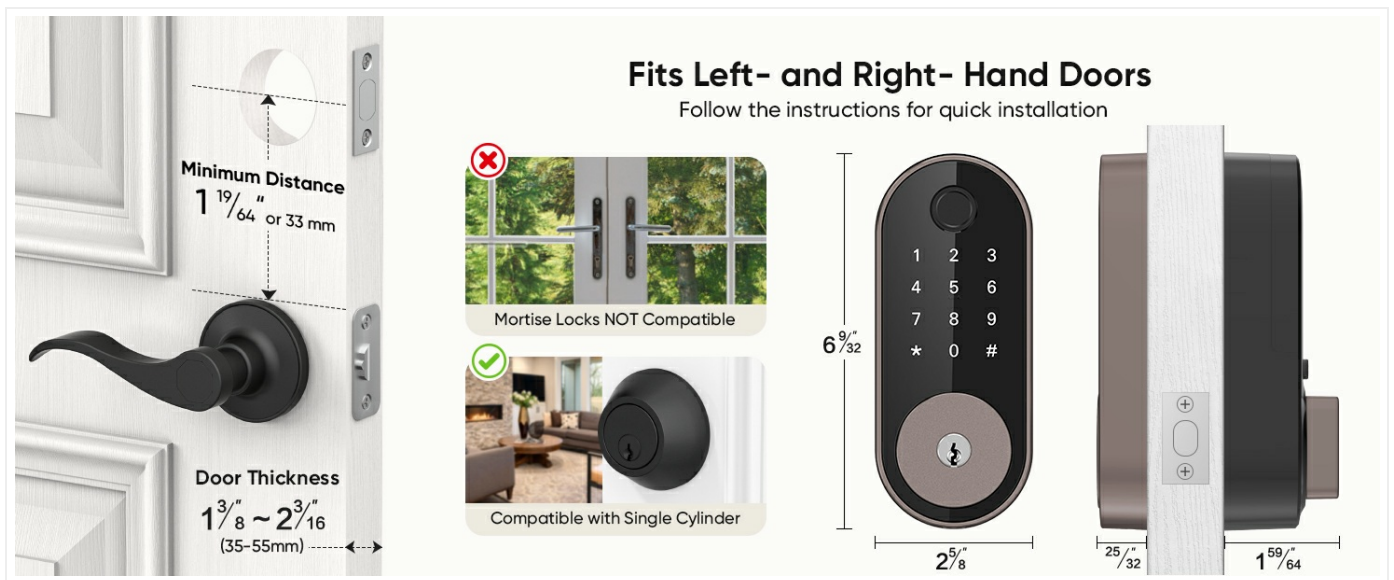


Image: Battery life and low battery alerts.

6.2. General Care

To ensure optimal performance and longevity of your smart deadbolt:

- Avoid using abrasive cleaners or solvents on the lock's surface.
- Wipe the keypad and fingerprint sensor with a soft, dry cloth.
- Ensure the door frame and strike plate are free of obstructions.

7. TROUBLESHOOTING

Problem	Possible Solution
Lock does not respond.	Check battery levels and replace if necessary. Ensure the cable connection between the exterior and interior units is secure.
Fingerprint not recognized.	Ensure your finger is clean and dry. Try re-registering your fingerprint. Ensure proper placement on the sensor.
Keypad code not working.	Verify the code is correct. Ensure the keypad is active (tap to light up). Try re-entering the code.
Auto-lock not engaging.	Check the auto-lock settings in the Sifely app. Ensure the door is fully closed.
Remote access not working.	Ensure the Sifely Gateway is properly installed and connected to Wi-Fi. Check the app's connection status.

8. WARRANTY INFORMATION

Sifely products typically come with a limited manufacturer's warranty covering defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Sifely website. Keep your proof of purchase for warranty claims.

9. SUPPORT

For technical assistance, product inquiries, or customer support, please contact Sifely customer service through the following channels:

- **Email:** Refer to your Quick Start Manual for the support email address (e.g., cs@sifely.com).
- **Online Resources:** Visit the official Sifely website for FAQs, video tutorials, and additional support documentation.
- **Sifely App:** The mobile app often includes a support section or direct contact options.

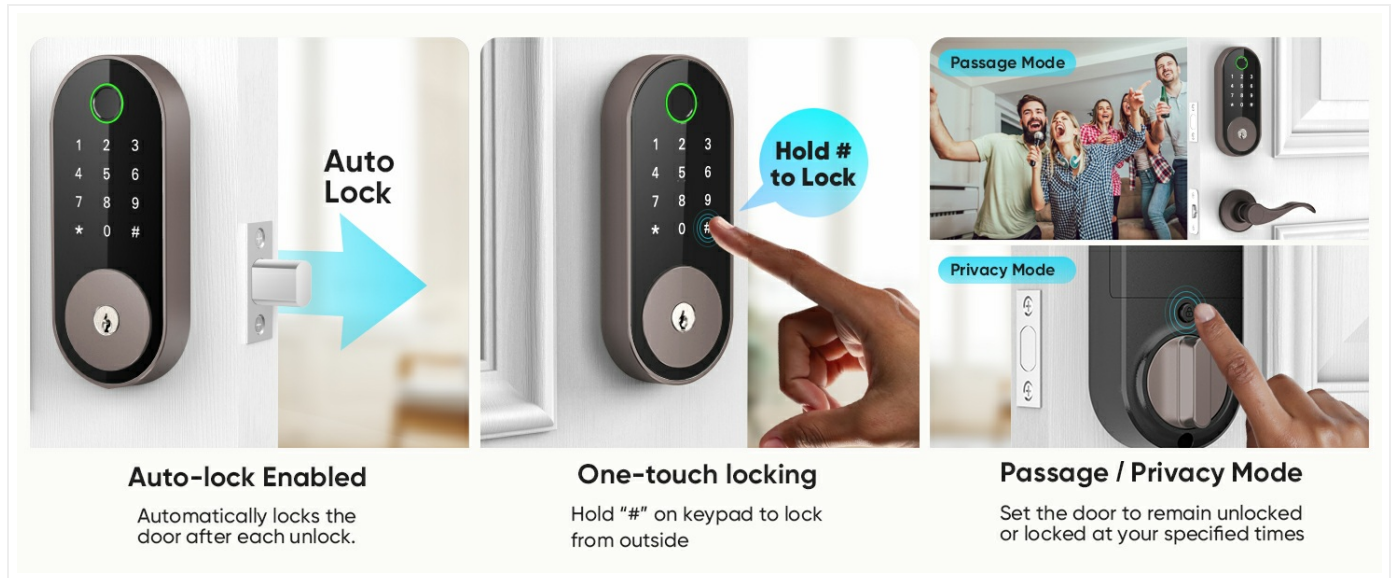


Image: Sifely web portal for managing locks and accessing information.

