

PPMIC D51

PPMIC Karaoke Machine D51 User Manual

INTRODUCTION

Thank you for choosing the PPMIC Karaoke Machine D51. This portable Bluetooth speaker with wireless microphones is designed to provide high-quality audio and entertainment for various occasions. Please read this manual carefully to ensure proper setup, operation, and maintenance of your device.

WHAT'S IN THE BOX

Verify that all items are present in the package:

- 1 × Karaoke Machine
- 2 × Wireless Microphones
- 1 × Power Cable (Note: Power Adapter not included)
- 1 × Auxiliary Cable
- 1 × Carrying Strap
- 1 × User Manual

Image: Package contents of the PPMIC Karaoke Machine D51.

SETUP

1. Charging the Karaoke Machine

Connect the provided power cable to the charging port on the karaoke machine. Use a compatible 5V power adapter (not included) to charge the device. A full charge takes approximately 2 hours and provides up to 24 hours of playtime.

2. Powering On/Off

Press and hold the power button on the karaoke machine to turn it on or off.

3. Microphone Setup

The two wireless microphones are designed for automatic pairing with the karaoke machine. Simply power on the microphones, and they should connect automatically. Ensure microphones are charged for optimal performance.

4. Bluetooth Connection

Once the karaoke machine is powered on, it will automatically enter Bluetooth pairing mode. On your smartphone, tablet, or other Bluetooth-enabled device, search for "PPMIC D51" (or similar name) in the Bluetooth settings and select it to connect. A successful connection will be indicated by an audible prompt.



Image: The karaoke machine showcasing its Bluetooth 5.3 capability.

OPERATING INSTRUCTIONS

1. Playing Music

After connecting via Bluetooth, you can play music from your connected device. Adjust the volume using the controls on the karaoke machine or your connected device.

2. Mode Switching

Press the 'M' (Mode) button on the control panel to switch between available input modes, such as Bluetooth, TF card, or Auxiliary input.

Your browser does not support the video tag.

Video: Demonstrating how to switch modes on the PPMIC Karaoke Machine D51 using the 'M' button.

3. Using the Wireless Microphones

- **Voice Changing Effects:** The microphones feature 6 magical sound effects. Press the dedicated button on the microphone to cycle through these effects.
- **Echo Effect:** Adjust the echo level directly on the karaoke machine's control panel for desired vocal enhancement.
- **Volume Control:** Adjust microphone volume using the controls on the microphone itself or the main unit.



Image: Wireless microphones with options for professional sound, original sound, and three magic voice effects.

4. Light Effects

The karaoke machine features integrated light-up speakers. Press the light button on the control panel to cycle through different lighting modes or turn them off.



Image: The karaoke machine displaying its dynamic light effects and powerful sound output.

MAINTENANCE

1. Cleaning

Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents. Ensure all ports are free from dust and debris.

2. Water Resistance

The device is IPX5 waterproof, meaning it is resistant to low-pressure water jets from any direction. Do not submerge the device in water or expose it to high-pressure water streams.

3. Storage

Store the karaoke machine in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

TROUBLESHOOTING

- **No Power:** Ensure the device is fully charged. Connect the power cable to a compatible 5V power adapter (not included) and a power source.
- **No Sound:** Check the volume levels on both the karaoke machine and your connected device. Ensure Bluetooth is properly connected.
- **Microphone Not Working:** Ensure microphones are powered on and charged. They should automatically pair with the main unit. If not, try restarting both the machine and microphones.
- **Bluetooth Disconnection:** Ensure your device is within the Bluetooth range (approximately 10 meters or 33 feet). Avoid obstacles that may interfere with the signal.
- **Distorted Sound:** Reduce the volume if the sound is distorted. Ensure the audio source is of good quality.

SPECIFICATIONS

Feature	Detail
Brand	PPMIC
Model Name	D51
Special Features	Adjustable Microphone Sensitivity, Echo Effect, Light Up Speaker, Lightweight, Voice Changer
Color	Black
Recommended Uses	Home Parties, Outdoor Gatherings
Power Source	Battery Powered
Connector Type	3.5 mm Jack, USB Type C
Connectivity Technology	Auxiliary, Bluetooth, USB
Bluetooth Version	5.3
Compatible Devices	Gaming Console, Laptop, Pad, Smartphone, Television
Item Dimensions (D x W x H)	5.2"D x 12.4"W x 7.5"H
Battery Playtime	Up to 24 hours (after 2 hours charging)
Water Resistance	IPX5

WARRANTY AND SUPPORT

Warranty Information

PPMIC products are covered by a limited warranty. Please refer to the warranty card included in your package or visit the official PPMIC website for detailed warranty terms and conditions.

Customer Support

For technical assistance, troubleshooting, or any questions regarding your PPMIC Karaoke Machine D51, please contact PPMIC customer support through their official website or the contact information provided in your product documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question