

[manuals.plus](#) /

› [Vormooi](#) /

› [Vormooi V71 Digital Voice Recorder User Manual](#)

Vormooi V71

Vormooi V71 Digital Voice Recorder User Manual

Model: V71 | Brand: Vormooi

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Vormooi V71 Digital Voice Recorder. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience. Keep this manual for future reference.

2. PACKAGE CONTENTS

Upon opening the package, please verify that all items listed below are present:

- 1 x Vormooi V71 Digital Voice Recorder
- 1 x USB-C to USB-C Cable
- 1 x 3.5mm External Microphone
- 1 x 64GB TF Memory Card
- 1 x USB-C Cable (USB-A to USB-C)
- 1 x 3.5mm Transcription Cable
- 1 x Neck Strap
- 1 x User Manual (this document)



Image: The Vormooi V71 Digital Voice Recorder shown with its various accessories, including the external microphone, USB-C cables, and the 64GB TF memory card, alongside a diagram illustrating the device's dimensions.

3. PRODUCT OVERVIEW

Familiarize yourself with the device's components and controls.



Image: A detailed front view of the Vormooi V71 Digital Voice Recorder, highlighting its 2.15-inch color screen, control buttons (MENU, PREV, NEXT, DEL/BACK, POWER/PLAY), built-in speakers, and the included external microphone.

Key Components:

- **2.15-inch Color Screen:** Displays menus, recording status, and file information.
- **Built-in Microphones:** For standard audio capture.
- **Built-in Speaker:** For direct playback of recordings.
- **Recording Slider:** Located on the side for quick record/save actions.
- **USB-C Port:** For charging and data transfer.
- **3.5mm Audio Jack:** For connecting external microphone or headphones.
- **TF Card Slot:** For memory expansion.

4. SETUP

4.1 Charging the Device

Before first use, fully charge the device for approximately 2 hours.

1. Connect the provided USB-C cable to the recorder's USB-C port.
2. Connect the other end of the USB-C cable to a USB power adapter (not included) or a computer's USB port.
3. The screen will indicate charging status. The battery icon will show full when charging is complete.



Image: The Vormooi V71 Digital Voice Recorder displaying a full battery icon, indicating its 1100mAh battery capacity and 110 hours of continuous recording time after a 2-hour charge.

4.2 Inserting and Formatting the TF Memory Card

The device comes with 32GB internal memory and a 64GB TF card. For optimal performance, format the TF card using the device itself.

1. Locate the TF card slot on the side of the recorder.
2. Gently insert the 64GB TF memory card into the slot until it clicks into place.
3. Power on the device.
4. Navigate to the 'Settings' menu on the device.
5. Select 'Format Card' or a similar option.
6. Confirm the formatting process. **Warning: Formatting will erase all data on the TF card.**

Important: Do not format the voice recorder or memory cards on a computer. Always format within

the device's menu for proper functionality. The device only supports exFAT format for SD cards from 8GB to 128GB.



Image: The Vormooi V71 Digital Voice Recorder displaying its total 96GB storage capacity, composed of 32GB built-in memory and an inserted 64GB TF card, capable of storing up to 7000 hours of 32kbps recordings.

4.3 Connecting the External Microphone

The device supports an external 3.5mm 4-section microphone for enhanced recording quality.

1. Locate the 3.5mm audio jack on the recorder.
2. Plug the external microphone's 3.5mm connector into this jack.
3. The device will automatically detect the external microphone.

5. BASIC OPERATION

5.1 Power On/Off

- **Power On:** Press and hold the 'POWER/PLAY' button until the screen illuminates.
- **Power Off:** Press and hold the 'POWER/PLAY' button until the screen turns off.

5.2 Recording

The V71 offers quick one-touch recording and voice-activated recording.

1. **One-Touch Recording:** Slide the red button on the right side of the recorder **up**. Recording will start immediately, even if the device is off.
2. **Voice-Activated Recording (VOR):** Enable VOR in the 'Settings' menu. When enabled, the recorder will automatically start recording when sound is detected and pause when silence occurs, conserving memory and battery.



Image: The Vormooi V71 Digital Voice Recorder displaying its recording interface, highlighting the 1536Kbps clear sound quality, the 2159 intelligent noise cancellation chip, and the one-touch record/save slider on the side.

5.3 Saving Recordings

To save an active recording:

- Slide the red button on the right side of the recorder **down**. The recording will be saved automatically.

5.4 Playback

1. From the main menu, navigate to 'Recordings' or 'Folders'.
2. Use the 'PREV' and 'NEXT' buttons to select the desired recording.
3. Press the 'POWER/PLAY' button to start playback.

5.5 Volume Adjustment

During playback, use the volume buttons (usually '+' and '-') on the side of the device to adjust the speaker or headphone volume (0-32 levels).

5.6 Deleting Files

1. Navigate to the file you wish to delete in the 'Recordings' or 'Folders' menu.
2. Press the 'DEL/BACK' button.
3. Confirm the deletion when prompted.

6. ADVANCED FEATURES



Image: The Vormooi V71 Digital Voice Recorder with icons representing its advanced features: Voice Activation, Variable Speed Playback, Line-in Mic Record, Password Protection, Built-in Speaker, and A-B Repeat function.

6.1 Password Protection

Set a 6-digit password in the 'Settings' menu to protect your recordings and privacy. Only with the correct password can the device be accessed.

6.2 A-B Repeat

During playback, press the 'MENU' button to activate A-B repeat. Select your start point (A) and end point (B) to repeatedly play a specific segment of a recording. This is useful for language learning or transcribing.

6.3 Variable Speed Playback

Adjust the playback speed of your recordings in the playback options. This feature allows you to slow down or speed up audio for easier transcription or review.

6.4 Line-in Recording

Use the provided 3.5mm transcription cable to connect the recorder to other audio sources like a mobile phone, PC, or MP3 player for direct recording.

6.5 Connecting to a Computer

Connect the recorder to your computer using the USB-C cable to transfer recording files. The device will appear as a removable disk drive.

7. SPECIFICATIONS

Feature	Specification
Model	V71
Material	Zinc Alloy
Product Dimensions	10 x 3.9 x 1.26 cm (3.94 x 1.54 x 0.5 inches)
Product Weight	98g (3.46oz)
Screen Size	2.15 inches
Display Type	128 x 160 TFT Color Display
Internal Memory	32GB
External Memory	64GB TF Card (included), supports 8-128GB exFAT format
Total Storage Capacity	96GB
Battery Capacity	1100mAh Lithium-ion
Charging Time	Approx. 2 hours
Continuous Recording Time	Up to 110 hours (at 512kbps)
Recording Quality	32-1536Kbps PCM
Recording Formats	MP3, WAV
Microphone	Built-in dual microphones, supports external 3.5mm 4-section microphone

Interface	USB Type-C
Compatible Devices	MP3 Player, Personal Computer, Smartphone

8. TROUBLESHOOTING

8.1 Device Not Turning On

- Ensure the device is sufficiently charged. Connect it to a power source and charge for at least 30 minutes.
- Press and hold the 'POWER/PLAY' button for several seconds.

8.2 Cannot Record or Save Files

- Check if the memory (internal or TF card) is full. Delete unnecessary files.
- Ensure the TF card is properly inserted and formatted within the device. If not, format it via the device's settings menu.
- Verify that the recording slider is in the 'Record' position.

8.3 Poor Recording Quality

- Ensure the built-in microphones are not obstructed.
- If using an external microphone, ensure it is securely connected and functioning correctly.
- Check recording settings (e.g., bitrate) and adjust if necessary.
- Reduce background noise in the recording environment.

8.4 Device Not Detected by Computer

- Ensure the USB-C cable is securely connected to both the recorder and the computer.
- Try a different USB port on your computer.
- Try a different USB-C cable.
- Restart both the recorder and the computer.

9. MAINTENANCE

- Keep the device dry and away from extreme temperatures.
- Clean the screen and body with a soft, dry cloth. Avoid using harsh chemicals.
- Avoid dropping or subjecting the device to strong impacts.
- Regularly back up important recordings to a computer to prevent data loss.

10. WARRANTY AND SUPPORT

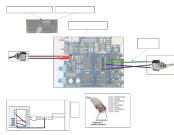
The Vormooi V71 Digital Voice Recorder comes with a **2-year warranty** from the date of purchase. This warranty covers defects due to non-human factors.

If you encounter any issues with your device that are not resolved by the troubleshooting steps in this manual, or if the device fails due to non-human factors within the warranty period, please contact Vormooi customer support immediately. You can reach us via Amazon station letter or the after-sales email provided with your purchase documentation.

Please provide your purchase details (e.g., order number, date of purchase) when contacting support to

facilitate a quicker resolution.

Related Documents - V71

 <p>Benutzerhandbuch - V71(DE) Bitte lesen Sie sorgfältig, bevor Sie es verwenden, die meisten Probleme können vermieden werden! Die Kundendienst E-Mail bestätigt: Vormontage@163.com</p>	<p>Benutzerhandbuch V71: Digitale Diktiergeräte - Anleitung und Spezifikationen Umfassendes Benutzerhandbuch für das digitale Diktiergerät V71 von Chongqing Zini E-commerce Co. Enthält Anleitungen zur Bedienung, Aufnahmeeinstellungen, Systemkonfiguration und technische Spezifikationen.</p>
 <p>V150D MANUALE D'ISTRUZIONI</p>	<p>V15 Registratore Vocale Manuale d'Istruzioni Manuale d'istruzioni completo per il registratore vocale V15, che copre la configurazione iniziale, la registrazione, la riproduzione e la risoluzione dei problemi.</p>
 <p>Benutzerhandbuch - V71(DE) Bitte lesen Sie sorgfältig, bevor Sie es verwenden, die meisten Probleme können vermieden werden! Die Kundendienst E-Mail bestätigt: Vormontage@163.com</p>	<p>Benutzerhandbuch V71: Digitale Diktiergeräte - Anleitung und Spezifikationen Umfassendes Benutzerhandbuch für das digitale Diktiergerät V71 von Chongqing Zini E-commerce Co. Enthält Anleitungen zur Bedienung, Aufnahmeeinstellungen, Systemkonfiguration und technische Spezifikationen.</p>
 <p>Roland V71 DRUM SOUND MODULE</p>	<p>Roland V71 Drum Sound Module: Reference Manual for Advanced Drum Synthesis and Performance This comprehensive reference manual guides users through the capabilities of the Roland V71 Drum Sound Module. Designed for musicians and producers, the V71 offers advanced sound creation, extensive customization options, and versatile performance features for both studio and live applications.</p>
 <p>V150D MANUALE D'ISTRUZIONI</p>	<p>V15 Registratore Vocale Manuale d'Istruzioni Manuale d'istruzioni completo per il registratore vocale V15, che copre la configurazione iniziale, la registrazione, la riproduzione e la risoluzione dei problemi.</p>
	<p>SignaLink USB Wiring and Configuration Guide for Amateur Radio Comprehensive guide detailing the wiring, configuration, and modifications for the SignaLink USB interface, connecting various amateur radio transceivers including ICOM, Kenwood, Alinco, and Baofeng models for digital communication.</p>

