

[Manuals.plus](#) /

› [Nordica](#) /

› Nordica The Cruise 100 Men's Alpine Ski Boots User Manual

Nordica 05065002243-25.5

Nordica The Cruise 100 Men's Alpine Ski Boots User Manual

Model: Cruise 100 (05065002243-25.5)

1. PRODUCT OVERVIEW

The Nordica The Cruise 100 Men's Comfort Fit All Mountain Alpine Ski Boots are designed for comfort and performance across various mountain conditions. These boots feature a 104-mm last for a high volume comfort fit, ensuring ease of entry and exit, and a streamlined anatomical shape for enhanced control. Key technologies include Instep Volume Control (I.V.C.) and an Adjustable Cuff Profile (ACP) for personalized fit.



Figure 1: Front-side view of the Nordica The Cruise 100 ski boot, highlighting its design and buckle system.

2. SETUP AND INITIAL ADJUSTMENT

Proper setup of your ski boots is crucial for comfort and performance. Follow these steps for initial adjustment:

2.1 Easy Entry and Exit

The Cruise 100 boots are equipped with an **Easy Entry Soft Flap** design. Soft plastic inserts integrated into the boot's throat allow the shell to open exceptionally wide, making it simple to step into and out of the boots. Ensure all buckles are unfastened before attempting to put on or remove the boots.



Figure 2: The inner liner of the ski boot, designed for comfort and easy entry.

2.2 Instep Volume Control (I.V.C.)

The **Instep Volume Control (I.V.C.)** system allows for quick and easy adjustment of the boot's instep height. This is achieved by reducing or increasing the height of the boot board by +/- 4mm. To adjust, locate the I.V.C. mechanism, typically under the liner, and follow the specific instructions provided with your boot for modification. This feature helps optimize fit and comfort over the instep area.

2.3 Adjustable Cuff Profile (ACP)

The **Adjustable Cuff Profile (ACP)** is a system designed to increase or decrease the cuff volume. This customization is performed using double screws located on the upper backside of the boot. Adjusting the ACP allows skiers to fine-tune the fit around the calf, enhancing both comfort and performance.



- Soles: 5355 PU
- Buckles: 2 Micro ALU; 2 Micro ALU
- Liner: Comfort Fit

Adjustable Cuff Profile

The Adjustable Cuff Profile is a simple system that allows to increase the cuff volume. Thanks to the double screws on the upper backside, every skier can easily customize the fit, finding the right comfort.

- Comfort
- Performance



Figure 3: Illustration of the Adjustable Cuff Profile (ACP) system, located on the rear of the boot cuff.

2.4 Buckle Fastening

Once your foot is in the boot, fasten the buckles starting from the bottom (forefoot) and working your way up to the cuff. Do not overtighten. The buckles should be snug enough to hold your foot securely without causing discomfort or restricting circulation. The power strap at the top of the cuff provides additional support and can be adjusted for tightness.



Figure 4: A pair of Nordica The Cruise 100 ski boots with buckles fastened, ready for use.

3. OPERATING YOUR SKI BOOTS

These boots are designed for all-mountain alpine skiing. Ensure your boots are properly fastened and adjusted before engaging your skis. The **High Volume Comfort Fit** and anatomical shape are engineered to provide a balance of comfort and responsive control during skiing.

3.1 Flex and Responsiveness

The Cruise 100 offers a flex index suitable for intermediate to advanced skiers, providing a good balance of support and flexibility for various snow conditions and terrain. The boot's construction, including its polyurethane material, contributes to its responsiveness and power transmission to the skis.

3.2 Walking in Ski Boots

When walking in ski boots, unbuckle the top two buckles and loosen the power strap to allow for greater ankle flexibility. Walk carefully, especially on slippery surfaces, as ski boots offer limited traction.

4. MAINTENANCE AND CARE

Proper maintenance extends the life of your ski boots and ensures optimal performance.

- **Drying:** After each use, remove the liners from the shells and allow both to air dry completely at room temperature. Avoid direct heat sources like radiators or fireplaces, as this can damage the boot materials.
- **Cleaning:** Wipe down the exterior of the shells with a damp cloth to remove dirt, snow, and salt. Clean buckles and straps to ensure smooth operation.
- **Storage:** Store your boots buckled loosely in a cool, dry place away from direct sunlight. Buckling them prevents the shells from deforming over time.
- **Inspection:** Regularly inspect buckles, straps, and soles for wear or damage. Replace worn components as needed.

5. TROUBLESHOOTING

If you encounter issues with your ski boots, consider the following:

- **Discomfort/Pressure Points:** Ensure your socks are thin and wrinkle-free. Re-adjust buckles, paying attention to the I.V.C. and ACP settings. If discomfort persists, consult a professional boot fitter.
- **Loose Fit:** Tighten buckles incrementally, starting from the forefoot. Adjust the power strap. If the boot still feels too loose, consider adding a footbed or consulting a boot fitter for shell modification.
- **Difficulty Entry/Exit:** Ensure all buckles are fully unfastened and the Easy Entry Soft Flap is utilized to open the boot throat as wide as possible.

6. SPECIFICATIONS

Detailed specifications for the Nordica The Cruise 100 Ski Boots:

Feature	Detail
Brand Name	Nordica
Model Name	Cruise 100 Warm Durable Soft-Shell Adjustable All-Mountain Touring Ski Boots with Instep Volume Control
Model Number	05065002243-25.5
Color	Anthracite / Black / White
Material	Polyurethane
Suggested Users	Men's
Size	25.5 (as per current product)
Last	104 mm (High Volume Comfort Fit)

Flex	100 (approximate, based on model name)
Instep Volume Control (I.V.C.)	Adjustable +/- 4mm
Adjustable Cuff Profile (ACP)	Yes
Item Package Dimensions	18 x 15 x 5.3 inches
Package Weight	3.86 Kilograms

7. WARRANTY INFORMATION

The Nordica The Cruise 100 Ski Boots come with a**Limited Manufacturer Warranty**. For specific details regarding coverage, duration, and claims process, please refer to the warranty documentation included with your purchase or visit the official Nordica website.

8. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Nordica The Cruise 100 Ski Boots, please contact Nordica customer service through their official website or authorized dealers. Always provide your product model number (05065002243-25.5) and purchase details when seeking support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question