

RAYMOND WEIL 7741-ST3-50021

RAYMOND WEIL Freelancer Automatic Chronograph Watch User Manual

Model: 7741-ST3-50021

INTRODUCTION

This manual provides essential instructions for the proper use, maintenance, and care of your RAYMOND WEIL Freelancer Men's Automatic Chronograph Watch, Model 7741-ST3-50021. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. This watch features a Swiss-made automatic movement, a blue dial, stainless steel bracelet, and a blue ceramic bezel.

SETUP

1. Initial Winding

As an automatic watch, the movement is powered by the motion of your wrist. If the watch has stopped, it needs to be manually wound to start. Unscrew the crown (if screw-down) and turn it clockwise approximately 30-40 times. This will build up a power reserve. The watch will then continue to wind itself with normal wear.

2. Setting the Time and Date

- 1. Unscrew and pull the crown to position 2:** This position allows you to set the date. Turn the crown clockwise or counter-clockwise until the correct date is displayed. Avoid setting the date between 9 PM and 3 AM, as this can damage the movement.
- 2. Pull the crown to position 3:** This position stops the seconds hand and allows you to set the time. Turn the crown to move the hour and minute hands. To ensure accuracy, set the time a few minutes ahead and then turn it back to the desired time.
- 3. Push the crown back to position 1 and screw it down:** After setting, always push the crown back in and screw it down tightly to ensure water resistance.



Image: Front view of the RAYMOND WEIL Freelancer Automatic Chronograph Watch, showing the blue dial, chronograph subdials, and stainless steel bracelet. The crown and pushers are visible on the right side of the case.

OPERATING THE CHRONOGRAPH FUNCTION

Your watch is equipped with a chronograph function for measuring elapsed time. The chronograph features three subdials: a 30-minute counter, a 12-hour counter, and a small seconds subdial.

1. **Start:** Press the top pusher (A) to start the chronograph. The central chronograph seconds hand will begin to move.
2. **Stop:** Press the top pusher (A) again to stop the chronograph. The elapsed time can be read from the central seconds hand and the minute/hour subdials.

3. **Reset:** After stopping, press the bottom pusher (B) to reset the chronograph hands to zero.

Water Resistance

This watch has a water resistance of 100 meters (330 feet). This makes it suitable for swimming and snorkeling, but not for diving. Ensure the crown is always screwed down tightly before exposing the watch to water.



Image: Side view of the RAYMOND WEIL Freelancer watch, highlighting the crown and chronograph pushers. The watch case is stainless steel.

MAINTENANCE

Cleaning

To maintain the appearance of your watch, clean the case and bracelet regularly with a soft, damp cloth. For stainless steel bracelets, a soft brush can be used to remove dirt from between the links. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish.

Service

It is recommended to have your RAYMOND WEIL watch serviced by an authorized service center every 3-5 years to ensure its continued accuracy and water resistance. Regular servicing helps to lubricate the movement and replace worn components.



Image: Back view of the RAYMOND WEIL Freelancer watch, showcasing the exhibition case back through which the Calibre RW5030 automatic movement is visible. Engravings for "Swiss Made" and "Sapphire Crystal" are also present.

TROUBLESHOOTING

- **Watch not running:** If the watch has stopped, manually wind it by turning the crown clockwise 30-40 times. Ensure it is worn regularly to maintain the power reserve.
- **Date not changing:** Avoid setting the date between 9 PM and 3 AM. If the date is stuck, try advancing the time past midnight to allow it to change, then reset the time.
- **Water ingress:** If moisture appears inside the watch, immediately take it to an authorized service center. Do not attempt to open the watch yourself.
- **Chronograph not resetting to zero:** If the chronograph hands do not reset correctly, a service may be required.



Image: The RAYMOND WEIL Freelancer Automatic Chronograph Watch worn on a wrist, demonstrating its fit and appearance during use.

SPECIFICATIONS

Model Number	7741-ST3-50021
Movement	Swiss Automatic, Calibre RW5030
Case Material	Stainless Steel

Case Diameter	43.5 mm
Bezel	Blue Ceramic, Tachymeter Scale
Dial Color	Blue
Crystal	Sapphire Crystal
Bracelet Material	Stainless Steel
Water Resistance	100 Meters (330 Feet)
Power Reserve	62 hours
Additional Features	Chronograph, Date Display, Luminous Hands/Indexes



Image: A close-up view of the blue dial of the RAYMOND WEIL Freelancer watch, showing the intricate snail hour track, silver-toned circles around the subdials, and the RAYMOND WEIL GENEVE logo.

PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Video: An official overview of the RAYMOND WEIL Freelancer Men's Automatic Chronograph Watch, highlighting its design, features, and craftsmanship. This video provides a dynamic view of the watch's aesthetic and functional elements.

WARRANTY AND SUPPORT

Your RAYMOND WEIL Freelancer watch comes with a limited warranty. For detailed information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your purchase or visit the official RAYMOND WEIL website. For technical support, service, or genuine spare parts, please contact an authorized RAYMOND WEIL service center.

You can find more information and locate authorized service centers on the [RAYMOND WEIL Brand Store](#).