

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Pyle](#) /

› **Pyle PPHP1979 Portable Bluetooth PA and Karaoke Speaker System User Manual**

Pyle PPHP1979

Pyle PPHP1979 Portable Bluetooth PA and Karaoke Speaker System

Model: PPHP1979

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions carefully before operating the device.
- Keep this manual for future reference.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.

WHAT'S IN THE Box

Carefully unpack your Pyle PPHP1979 system and ensure all items are present:

- Portable PA Speaker System (PPHP1979)
- Power Adapter
- Remote Control

PRODUCT FEATURES

- **Powerful Sound Output:** 160W speaker with True Wireless Stereo (TWS) for clear treble and powerful bass.
- **Bluetooth Streaming:** Easy wireless connection to smartphones, tablets, and laptops with a 50 ft. range.

- **Multiple Input Options:** Supports Bluetooth, USB, Micro SD, 6.5mm microphone input, and FM radio.
- **User-Friendly Controls:** Intuitive interface with an LED display for volume, playback, mode selection, and more.
- **Durable and Portable Design:** Rugged molded cabinet with a sturdy handle for easy transportation.
- **Rechargeable Battery:** Built-in battery provides 2-8 hours of playtime, suitable for indoor and outdoor use.
- **Enhanced Karaoke:** Adjustable microphone volume, echo, bass, and treble functions, plus auto mic priority for clear vocals.
- **Dynamic LED Lights:** LED lights sync with music to create an engaging visual experience.

CONTROLS AND CONNECTIONS

Familiarize yourself with the control panel for optimal use of your speaker system.



Image: Close-up view of the Pyle PPHP1979 speaker's top control panel, showing the main volume knob, input ports (USB, Micro SD, Mic, Aux), and control buttons for power, mode, playback, and LED lights.

1. **Power Button:** Turns the speaker ON or OFF.

2. **LED Button:** Controls the LED light modes.
3. **DC 5V Input:** Power input for charging the speaker.
4. **USB Port:** Connect a USB flash drive for audio playback.
5. **Micro SD Card Slot:** Insert a Micro SD card for audio playback.
6. **AUX Input:** Connect external audio devices via a 3.5mm cable.
7. **MIC Input:** Connect a wired microphone (6.5mm jack).
8. **Volume Knob:** Adjusts the master volume.
9. **Menu/Mode Button:** Switches between input modes (Bluetooth, USB, SD, FM, AUX).
10. **Play/Pause Button:** Controls audio playback.
11. **Previous/Next Track Buttons:** Navigates through tracks or FM stations.
12. **TWS Button:** Activates True Wireless Stereo pairing.

SETUP

1. Charging the Battery

Before first use, fully charge the speaker's built-in rechargeable battery. Connect the provided power adapter to the DC 5V input port on the speaker and plug it into a standard wall outlet. The charging indicator will illuminate. Charging time is approximately 2-8 hours, providing 6-8 hours of playtime.



Image: Graphic showing the Pyle speaker and a battery icon, illustrating the 6-8 hours playing time and 2-8 hours charging time for the built-in rechargeable battery.

2. Powering On/Off

Locate the Power button on the control panel. Press and hold the Power button for a few seconds to turn the speaker ON or OFF.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

1. Turn on the PPHP1979 speaker.
2. Press the Mode button to select Bluetooth mode. The LED display will show "BLUE" and a pairing indicator will flash.
3. Enable Bluetooth on your smartphone, tablet, or other device.

4. Search for "Pyle Audio" or "Pyle PPHP1979" in your device's Bluetooth list.
5. Select the speaker to connect. Once paired, the speaker will emit a confirmation tone, and the Bluetooth indicator will stop flashing.

2. USB/Micro SD Playback

1. Insert a USB flash drive or Micro SD card into the corresponding port.
2. The speaker will automatically switch to USB/SD mode and begin playing audio files. If not, press the Mode button to select the correct input.
3. Use the Play/Pause and Previous/Next Track buttons to control playback.

3. FM Radio

1. Press the Mode button to select FM radio mode.
2. Press and hold the Play/Pause button to automatically scan and save available FM stations.
3. Use the Previous/Next Track buttons to navigate between saved stations.

4. Microphone Usage (Karaoke)

1. Connect a 6.5mm microphone to the MIC input port.
2. Adjust the microphone volume using the dedicated control (if available) or the main volume knob.
3. Use the Echo, Bass, and Treble controls to fine-tune your vocal sound.
4. The Auto Mic Priority feature will automatically lower music volume when the microphone is in use.

5. True Wireless Stereo (TWS) Function

To pair two PPHP1979 speakers for a True Wireless Stereo experience:

1. Ensure both speakers are powered on and in Bluetooth mode.
2. On one speaker (this will be the primary speaker), press and hold the TWS button. The speaker will emit a pairing tone.
3. The two speakers will automatically connect. Once connected, a confirmation tone will sound.
4. Now, connect your Bluetooth device to the primary speaker as described in the Bluetooth Pairing section. Audio will play through both speakers in stereo.

6. LED Lights

Press the LED button on the control panel to cycle through different light modes or turn the lights off. The LED lights will sync with the music playback.

MAINTENANCE

Cleaning

Wipe the speaker's exterior with a soft, dry cloth. Do not use harsh chemicals, cleaning solvents, or strong detergents. Avoid getting moisture into any openings.

Storage

When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery is partially charged before storage to maintain its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted; Power cable not connected.	Charge the battery; Ensure power cable is securely connected.
No sound	Volume too low; Incorrect input mode; Device not connected.	Increase volume; Select correct input mode; Re-pair Bluetooth device or check cable connection.
Bluetooth not pairing	Speaker not in Bluetooth mode; Device too far; Interference.	Ensure speaker is in Bluetooth mode; Move device closer; Avoid obstacles.
Microphone not working	Microphone not connected; Microphone volume too low.	Ensure microphone is fully plugged in; Increase microphone volume.
TWS pairing failed	Speakers not in Bluetooth mode; TWS button not held long enough.	Ensure both speakers are in Bluetooth mode; Press and hold TWS button on one speaker until paired.

SPECIFICATIONS

Feature	Detail
Model Number	PPHP1979
Output Power	160 Watts
Connectivity	Bluetooth, USB, Micro SD, AUX, FM Radio
Bluetooth Range	Up to 50 ft.
Battery Life	6-8 hours (playtime)
Charging Time	2-8 hours
Material	Metal, Plastic
Product Dimensions (L x W x H)	22.64" x 10.83" x 13.27"
Item Weight	15.77 lbs. (7.17 kg)
Compatible Devices	Smartphone, Tablet, Laptop, MP3 Player

WARRANTY AND SUPPORT

Pyle products are designed and manufactured to the highest quality standards. For warranty information or technical support, please refer to the warranty card included with your product or visit the official Pyle website. Keep your purchase receipt as proof of purchase.

