

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Britânia](#) /
- › Britânia BAF16A 16L 4-in-1 Removable Door Air Fryer Oven User Manual

Britânia BAF16A

Britânia BAF16A 16L 4-in-1 Removable Door Air Fryer Oven User Manual

Model: BAF16A

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Britânia BAF16A 16L 4-in-1 Air Fryer Oven. Please read this manual thoroughly before first use and keep it for future reference.

The Britânia BAF16A is a versatile kitchen appliance designed for air frying, roasting, grilling, and baking. It features a 16-liter capacity, 5 rack height levels, a removable door for easy cleaning, overheat protection, an internal light, and automatic shut-off for convenience and safety. The appliance is constructed from durable metal, plastic, and glass components.

SETUP AND INITIAL USE

Unpacking

- Carefully remove all packaging materials from the appliance and its accessories.
- Check for any damage during transit. Do not use the appliance if it is damaged.
- Ensure all components are present: the main unit, basket, handle/gripper, 2 baking trays, and a grease/crumb collection tray.

Initial Cleaning

- Before first use, clean all removable parts (basket, trays, handle) with warm soapy water. Rinse thoroughly and dry completely.
- Wipe the interior and exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

Placement

- Place the air fryer oven on a stable, heat-resistant, and level surface.
- Ensure there is adequate space (at least 10 cm / 4 inches) around the appliance for proper ventilation.
- Do not place the appliance near flammable materials or heat sources.
- Plug the appliance into a grounded 110V electrical outlet.



Figure 1: Britânia BAF16A Air Fryer Oven with its removable door detached, showcasing the interior and rack slots. This view highlights the ease of access for cleaning and loading.

OPERATING INSTRUCTIONS

General Operation

1. **Prepare Food:** Place your food on the baking trays or in the basket.
2. **Insert Accessories:** Slide the baking trays or basket into the desired rack height level. The oven offers 5 levels for flexibility.
3. **Close Door:** Ensure the removable door is securely closed.
4. **Power On:** Plug the appliance into the power outlet.
5. **Set Temperature and Time:** Use the control panel to set the desired cooking temperature and time. Refer to specific recipes or food packaging for guidance.
6. **Start Cooking:** Press the start button. The internal light can be activated to monitor cooking progress without opening the door.
7. **Automatic Shut-off:** The appliance will automatically shut off once the set cooking time has elapsed.
8. **Remove Food:** Carefully open the door and use heat-resistant gloves or the provided handle/gripper to remove the cooked food and accessories.

Cooking Functions (4-in-1)

- **Air Fry:** Ideal for crispy results with minimal oil. Use the basket for best air circulation.
- **Roast:** Perfect for meats and vegetables. Use baking trays.

- **Grill:** For browning and searing. Position food closer to the heating element.
- **Bake:** Suitable for cakes, pastries, and other baked goods. Use baking trays.

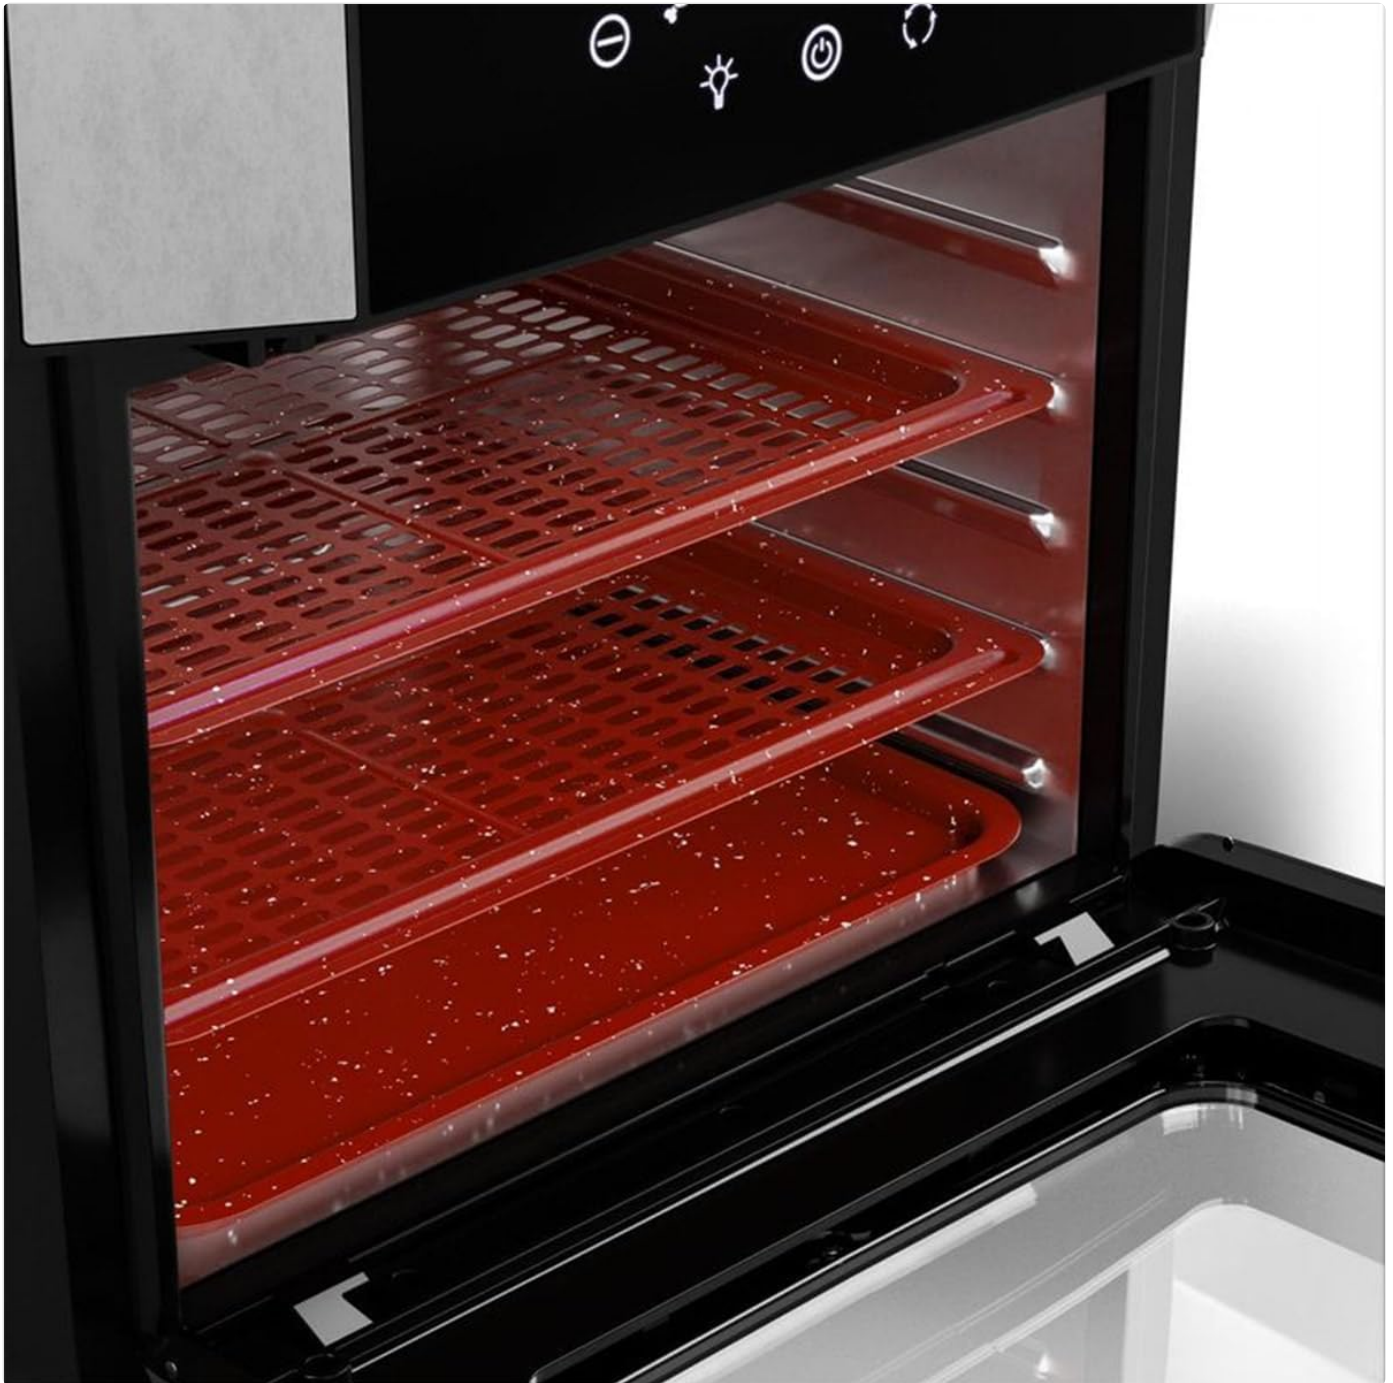


Figure 2: The interior of the Britânia BAF16A Air Fryer Oven, showing two red non-stick baking trays inserted into different rack levels. This illustrates the multi-level cooking capability.

MAINTENANCE AND CLEANING

Daily Cleaning

- Always unplug the appliance and allow it to cool completely before cleaning.
- **Removable Door:** The door can be easily removed for thorough cleaning. Wash with warm soapy water, rinse, and dry.
- **Accessories:** The basket, baking trays, and grease/crumb collection tray are dishwasher safe. Alternatively, wash them with warm soapy water and a non-abrasive sponge.
- **Interior:** Wipe the interior with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner. Ensure the interior is dry before next use.

- **Exterior:** Wipe the exterior with a damp cloth. Do not use harsh chemicals or abrasive cleaners.

Storage

- Ensure the appliance is clean and dry before storing.
- Store the air fryer oven in a cool, dry place.



Figure 3: A red non-stick air fryer basket with a black handle, designed for optimal air circulation during cooking. This accessory is dishwasher safe for easy cleaning.

TROUBLESHOOTING

If you encounter issues with your Britânia BAF16A Air Fryer Oven, please consult the following common problems and solutions:

- **Appliance does not turn on:**
 - Check if the power cord is securely plugged into a working 110V outlet.
 - Ensure the appliance door is fully closed.
- **Food is not cooking evenly:**
 - Ensure food is not overcrowded in the basket or on the trays. Cook in smaller batches if necessary.
 - Flip or shake food halfway through cooking for more even results.
 - Adjust rack position; food on higher racks may cook faster.
- **White smoke coming from the appliance:**
 - This is usually caused by grease residue from previous use. Clean the interior and accessories thoroughly.
 - Ensure the grease/crumb collection tray is clean and properly positioned.
- **Appliance suddenly stops during operation:**
 - The appliance has an overheat protection feature. Unplug it and let it cool down for at least 30 minutes before

restarting.

- Check if the timer has reached zero.

If the problem persists after trying these solutions, please contact customer support.

PRODUCT SPECIFICATIONS

Brand	Britânia
Model	BAF16A
Capacity	16 Liters
Color	Black with Stainless Steel Finish
Voltage	110V
Power Source Type	A
Material	Plastic, Metal, and Glass
Product Dimensions (D x W x H)	33.5 x 35 x 37 cm (13.2 x 13.8 x 14.6 inches)
Product Weight	7.84 kg (17.28 lbs)
Special Features	4-in-1 Functionality, 5 Rack Height Levels, Internal Light, Removable Door, Overheat Protection, Automatic Shut-off
Included Components	Basket, Handle/Gripper, 2 Baking Trays, Grease/Crumb Collection Tray
EAN	7891356121050

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Britânia website. Keep your proof of purchase for warranty claims.

If you require technical assistance, spare parts, or have questions not covered in this manual, please contact Britânia customer support through their official channels. Contact information can typically be found on the product packaging or the official brand website.

Online Resources: For additional tips, recipes, and FAQs, visit the official Britânia website: www.britania.com.br