

## Rockville ROCK PARTY 9

# Rockville Rock Party 9 Portable Bluetooth Speaker Instruction Manual

Model: ROCK PARTY 9

<a href="#">Introduction</a>	<a href="#">Safety Instructions</a>	<a href="#">Package Contents</a>	<a href="#">Product Overview</a>	<a href="#">Setup</a>	<a href="#">Operation</a>
	<a href="#">Maintenance</a>	<a href="#">Troubleshooting</a>	<a href="#">Specifications</a>	<a href="#">Warranty &amp; Support</a>	

## 1. INTRODUCTION

---

Thank you for purchasing the Rockville Rock Party 9 Portable Bluetooth Speaker. This manual provides essential information for the safe and optimal use of your device. Please read it thoroughly before operation and retain it for future reference.

The Rock Party 9 is designed to deliver powerful audio with dual 8-inch woofers and 2-inch tweeters, customizable LED lighting, and versatile connectivity options including Bluetooth, USB, TF card, AUX, and microphone/guitar inputs. Its portable design makes it suitable for various indoor and outdoor events.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

- Do not expose this unit to rain or moisture.
- Do not open the casing. There are no user-serviceable parts inside.
- Ensure proper ventilation around the unit.
- Use only the power cord supplied by the manufacturer.
- Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Clean only with a dry cloth.
- Unplug this apparatus during lightning storms or when unused for long periods of time.

- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### 3. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- Rockville Rock Party 9 Portable Bluetooth Speaker
- Remote Control (AAA battery powered)
- Power Cord
- Auxiliary Cable
- Instruction Manual (this document)

### 4. PRODUCT OVERVIEW

---

The Rockville Rock Party 9 features a robust design with intuitive controls and multiple input options. Familiarize yourself with the various components before operation.

#### 4.1 Front Panel





**Image:** Front view of the Rockville Rock Party 9 speaker, showcasing the dual 8-inch woofers with active LED lighting.

- **Dual 8-inch Woofers:** Deliver powerful bass and mid-range audio.
- **LED Lights:** Customizable lighting effects around the woofers.
- **Protective Grille:** Shields the speaker components.

## 4.2 Top Control Panel



## Portable & Rugged Design

*Take the Party Anywhere*

Durable, lightweight enclosure with built-in handle makes the Rock Party 9 ready to go wherever you are.

**Image:** Close-up of the top control panel of the Rockville Rock Party 9, showing various buttons and the main volume knob.

- **Power Button:** Turns the unit on or off.
- **Mode Button:** Switches between Bluetooth, USB, TF, and AUX inputs.
- **Play/Pause Button:** Controls media playback.
- **Previous/Next Track Buttons:** Navigates through tracks.
- **Master Volume Knob:** Adjusts the overall volume level.
- **Bass/Treble Controls:** Fine-tune audio frequencies.
- **Mic Volume/Echo Controls:** Adjust microphone input levels and echo effect.
- **Mic Priority Button:** Lowers music volume when microphone is in use.
- **LED Mode Button:** Cycles through different LED light patterns.
- **Display Screen:** Shows current mode, track information, and volume level.

### 4.3 Rear Panel







**Image:** Rear view of the Rockville Rock Party 9, highlighting the power input, USB port, AUX input, and microphone/guitar inputs.

- **Power Input:** Connects the power cord for charging and operation.
- **USB Port:** For USB drive playback.
- **TF Card Slot:** For TF (MicroSD) card playback.
- **AUX Input (3.5mm):** Connects external audio devices.
- **Microphone Input (6.35mm):** For connecting a wired microphone.
- **Guitar Input (6.35mm):** For connecting a guitar or other instrument.

## 5. SETUP

---

### 5.1 Initial Charging

Before first use, fully charge the Rock Party 9 speaker. Connect the supplied power cord to the power input on the rear panel and plug it into a standard AC outlet. The charging indicator will illuminate. Charging typically takes several hours. Once fully charged, the indicator may change color or turn off.

### 5.2 Powering On/Off

Press and hold the **Power Button** on the top control panel to turn the speaker on or off. The display screen will illuminate upon power-on.

## 6. OPERATION

---

### 6.1 Bluetooth Pairing

1. Turn on the Rock Party 9 speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon on the display.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for "ROCK PARTY 9" in your device's Bluetooth list and select it to connect.
4. Once connected, the Bluetooth icon on the speaker's display will stop flashing and remain solid. You can now stream audio wirelessly.
5. To disconnect, disable Bluetooth on your device or select another mode on the speaker.



## Stream Wirelessly from Any Device

*Connectivity for Every Moment*

Bluetooth 5.0 enables wireless streaming from up to 45 feet away—connect your phone, tablet, or laptop and keep the music flowing.

**Image:** A smartphone displaying its Bluetooth settings, showing "ROCK PARTY 9" as a discoverable device, illustrating the Bluetooth pairing process.

### 6.2 USB/TF Card Playback

1. Insert a USB flash drive or TF (MicroSD) card into the respective port on the rear panel.
2. The speaker will automatically switch to USB or TF mode and begin playing audio files. If it does not, press the **Mode Button** to select the correct input.
3. Use the **Play/Pause** and **Previous/Next Track** buttons to control playback.

### 6.3 AUX Input

1. Connect an external audio device (e.g., MP3 player, laptop) to the 3.5mm AUX input on the rear panel using the supplied auxiliary cable.
2. Press the **Mode Button** until "AUX" is displayed.
3. Audio from your connected device will now play through the speaker. Control playback from your external device.

### 6.4 Microphone and Guitar Inputs (Karaoke Function)

1. Connect a wired microphone to the **Mic Input** and/or a guitar to the **Guitar Input** on the rear panel.
2. Adjust the microphone volume and echo effect using the dedicated controls on the top panel.
3. Press the **Mic Priority Button** to automatically lower the music volume when speaking or singing into the microphone, making announcements or vocals clearer.



## Karaoke & Guitar Ready

*Turn Any Event into a Party*

---

Dual mic inputs and a guitar input with auto-tune and voice-changing effects make it perfect for karaoke and live performance.

**Image:** A person singing into a microphone with the Rockville Rock Party 9 speaker in the background, demonstrating its karaoke capabilities.

### 6.5 LED Light Modes

Press the **LED Mode Button** on the top panel or remote control to cycle through various lighting patterns and colors. The lights can rotate, flash, or sync to the beat of the music.



## Customizable Light Show

*Light Up the Party*

---

Built-in LED lighting modes sync to your music and offer rotating, flashing, and beat-sensitive patterns in multiple colors.

**Image:** Three Rockville Rock Party 9 speakers side-by-side, each displaying a different LED light color (purple, blue, and white), showcasing the customizable light show feature.

### 6.6 Sound Control

- **Master Volume:** Rotate the large knob on the top panel to adjust the overall sound output.
- **Bass/Treble:** Use the dedicated knobs to increase or decrease bass and treble frequencies for personalized sound.
- **Mic Volume/Echo:** Adjust these controls for optimal microphone performance.



## Party for Hours

*Keep the Music Going All Day and Night*

The rechargeable battery lasts up to 8 hours, giving you plenty of playtime for any event.

**Image:** A hand adjusting the main volume knob on the top control panel of the Rockville Rock Party 9, which is illuminated with purple LED lights, demonstrating sound customization.

### 6.7 Remote Control Functions

The included remote control provides convenient access to various functions from a distance. Ensure the remote has working AAA batteries installed.

- **Power:** Turns the speaker on/off (Note: Speaker cannot be powered ON by remote, only OFF).
- **Mode:** Switches input sources.
- **Volume +/-:** Adjusts master volume.
- **Play/Pause, Previous/Next:** Controls media playback.
- **EQ:** Cycles through equalizer presets.
- **LED:** Changes LED light modes.
- **Mute:** Mutes audio output.
- **Number Pad:** For direct track selection in USB/TF mode.

## 7. MAINTENANCE

### 7.1 Cleaning

Wipe the exterior of the speaker with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Avoid spraying liquids directly onto the speaker.

### 7.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to fully charge the battery every few months to maintain its

lifespan.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery drained; Power cord not connected; Unit off.	Charge the battery; Ensure power cord is securely connected; Press and hold the Power button.
No sound	Volume too low; Incorrect input mode; Device not connected properly.	Increase master volume; Press Mode button to select correct input; Reconnect Bluetooth/AUX device.
Bluetooth not connecting	Speaker not in pairing mode; Device Bluetooth off; Speaker too far from device.	Ensure speaker is in Bluetooth mode (flashing icon); Turn on Bluetooth on your device; Move device closer to speaker (within 45ft).
Microphone not working	Microphone not connected; Mic volume too low; Microphone faulty.	Ensure microphone is securely plugged in; Increase Mic Volume knob; Test with another microphone if available.
LED lights not working	LED mode off; Malfunction.	Press the LED Mode button to activate or change modes. If issue persists, contact support.

## 9. SPECIFICATIONS

Feature	Detail
Model Name	ROCK PARTY 9
Brand	Rockville
Speaker Type	Floorstanding
Mounting Type	Floor Standing
Material	Polypropylene
Speaker Maximum Output Power	1000 Watts (Peak) / 250 Watts (RMS)
Woofer Diameter	Dual 8 Inches
Tweeter Diameter	2 Inches
Frequency Response	20 KHz (Upper limit, typical range not specified)
Connectivity Technology	Bluetooth 5.0, Auxiliary, USB, TF Card
Bluetooth Range	Up to 45 Feet
Power Source	Battery Powered (Rechargeable)
Battery Life	Up to 8 hours (approximate, varies with usage)
Control Method	Remote, On-unit controls

Feature	Detail
Product Dimensions (D x W x H)	11.75"D x 12"W x 27.75"H
Item Weight	19.64 Pounds
Included Components	Bluetooth Speaker, Remote Control, Power Cord, Aux Cable
Water Resistance Level	Not Water Resistant

## 10. WARRANTY AND SUPPORT

---

The Rockville Rock Party 9 speaker comes with a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included in your package or visit the official Rockville website. For technical support, troubleshooting assistance, or service inquiries, please contact Rockville customer support. Contact information can typically be found on the manufacturer's website or in your product documentation.

**Manufacturer:** Rockville

**Website:** [www.rockvilleaudio.com](http://www.rockvilleaudio.com) (Please verify the actual support website if available)