

Anderic RRTR214D

Anderic RRTR214D Ceiling Fan Remote Control

Instruction Manual

Model: RRTR214D | Brand: Anderic

1. INTRODUCTION

The Anderic RRTR214D (TR214D) Ceiling Fan Remote Control is engineered as a direct replacement for various Harbor Breeze remote models. This manual provides essential information for setting up, operating, and maintaining your new remote control, ensuring seamless integration and optimal performance with your compatible ceiling fan.

2. COMPATIBILITY

The Anderic RRTR214D remote control is designed to seamlessly replace the following Harbor Breeze remote models:

- A25-FA0138
- KUJCE10311
- TR214B
- KUJCE10712
- TR214A
- KUJCE10610

This remote is specifically designed for these models and cannot be paired with other ceiling fan receivers not originally supplied with these models. Please verify your existing remote's model number for compatibility.

COMPATIBLE WITH Harbor Breeze Models

No Guesswork – Seamless Integration

- BRD48MWW6LR
- BRD60BNK6LRS
- BRD60MBK6LR
- BRD60OSB6LR
- MZ44BNK3LR Mazon 44in
- MZ44MBLK3LR Mazon 44in
- MZ44ORB3LR Mazon 44in
- MZ44WW3LR Mazon 44in
- TG44BNK3D1RC Beach Creek LED
- TG44LW3D1RS Beach Creek LED
- TG44MBK3D1RC Beach Creek LED
- TG44OSB3D1RC Beach Creek LED
- TG52BNK3D1RC Beach Creek LED
- TG52LW3D1RCS Beach Creek LED
- TG52MBK3D1RC Beach Creek LED
- TG52OSB3D1RC Beach Creek LED



ANDERIC

Image: The Anderic RRTR214D remote control shown alongside a list of compatible Harbor Breeze ceiling fan models, emphasizing seamless integration.

3. KEY FEATURES

- **Direct Replacement:** Seamlessly replaces specified Harbor Breeze remote models.
- **Effortless Pairing:** Designed for easy setup with your existing receiver.
- **Comprehensive Control:** Offers full control over fan speeds (high, medium, low, off) and light functions (on/off and dimming).
- **Battery Powered:** Operates on a single 23A 12-volt battery (not included).
- **Convenient Wall Mount:** Includes a wall mount for easy storage and accessibility.



Image: A clear view of the Anderic RRTR214D remote control, showing both its front with control buttons and its back, along with the included wall mount for convenient storage.

4. SETUP INSTRUCTIONS

4.1. Battery Installation

The Anderic RRTR214D remote requires one 23A 12-volt battery (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert one 23A 12-volt battery, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery cover securely.

4.2. Effortless Pairing

Follow these simple steps to pair your Anderic RRTR214D remote with your ceiling fan receiver:

1. **Cycle Power to the Fan:** Turn off the power to your ceiling fan at the wall switch or circuit breaker, then turn it back on. This resets the receiver for pairing.
2. **Install Battery in the Remote:** Ensure the 23A 12-volt battery is correctly installed in the remote control.
3. **Press and Hold the "0" Key:** Within 30 seconds of restoring power to the fan, press and hold the "0" (fan off) button on the remote control for approximately five seconds. The fan light should blink or the fan should respond, indicating successful pairing.


If pairing is unsuccessful, repeat the steps. Ensure you are within close proximity to the fan during the pairing process.

EFFORTLESS PAIRING

Simple 3-Step Pairing

- 1 Cycle power to the fan,
- 2 Install battery in the remote,
- 3 Press and hold the "0" key for five seconds.

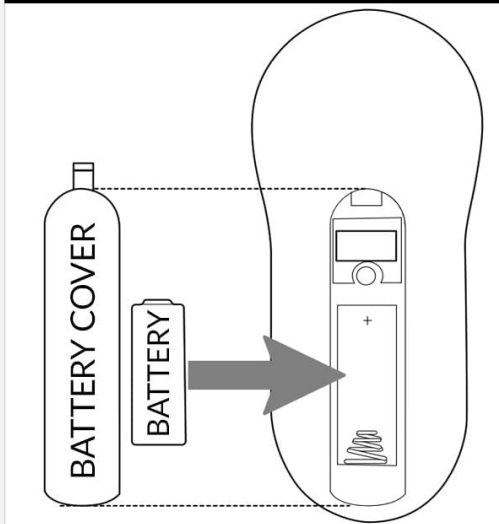23A 12-VOLT BATTERY



***NOT
included**



Image: A visual guide illustrating how to install the 23A 12-volt battery into the remote and the three-step process for effortless pairing with a ceiling fan.

4.3. Wall Mount Installation

The included wall mount allows for convenient storage and quick access to your remote.

1. Choose a suitable location on a wall, away from direct sunlight or heat sources.
2. Use screws (not included) to secure the wall mount to the desired surface.

3. Slide the remote control into the wall mount for secure storage.

NEVER LOSE

Your Remote Again

Mount included for quick access & clean organization



Image: The Anderic RRTR214D remote's wall mount is highlighted, demonstrating how it can be installed on a wall for easy access and to prevent misplacement.

5. OPERATING INSTRUCTIONS

The Anderic RRTR214D remote provides comprehensive control over your ceiling fan's functions:

- **Light Button:** Press to turn the light ON or OFF. Hold to dim or brighten the light (if your fan supports dimming).
- **Fan Speed Buttons:**
 - **1:** Fan speed LOW
 - **2:** Fan speed MEDIUM
 - **3:** Fan speed HIGH
- **0 (Fan Off) Button:** Press to turn the fan OFF.

COMPLETE CONTROL

Fan Speeds & Light Dimming

Adjust airflow and brightness with precision, right from your seat



Image: A visual representation of the Anderic RRTR214D remote's buttons, detailing their functions for adjusting fan speeds (low, medium, high, off) and controlling light (on/off/dimming).

6. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Battery Replacement:** Replace the 23A 12-volt battery when the remote's range decreases or it becomes unresponsive. Always use a fresh battery of the specified type.
- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use abrasive cleaners or immerse the remote in water.
- **Storage:** Store the remote in a cool, dry place when not in use for extended periods. Remove the battery if storing for several months to prevent leakage.

7. TROUBLESHOOTING

If you encounter issues with your Anderic RRTR214D remote control, refer to the following common problems

and solutions:

- **Remote Not Responding:**

- Check the battery. Ensure it is correctly installed and has sufficient charge. Replace if necessary.
- Ensure you are within the operating range of the ceiling fan receiver.

- **Pairing Issues:**

- Confirm that your ceiling fan receiver is one of the compatible models listed in Section 2.
- Repeat the pairing steps carefully (Section 4.2), ensuring you cycle power to the fan and press the "0" button within the specified timeframe.
- Ensure no other remote controls are interfering with the pairing process.

- **Fan or Light Functions Not Working:**

- Verify that the remote is successfully paired.
- Check the fan's pull chains (if applicable) to ensure the fan speed or light is set to the 'on' position for remote operation.


If problems persist after attempting these solutions, please contact Anderic customer support for further assistance.

8. SPECIFICATIONS

Feature	Detail
Model Number	RRTR214D
Product Dimensions	1.7 x 3.9 x 0.9 inches
Item Weight	1.12 ounces
Battery Type	1 x 23A 12-volt (not included)
Color	White
Special Feature	Pre Programmed
Max Number of Supported Devices	1
Compatible Devices	Fan

Compact, Comfortable

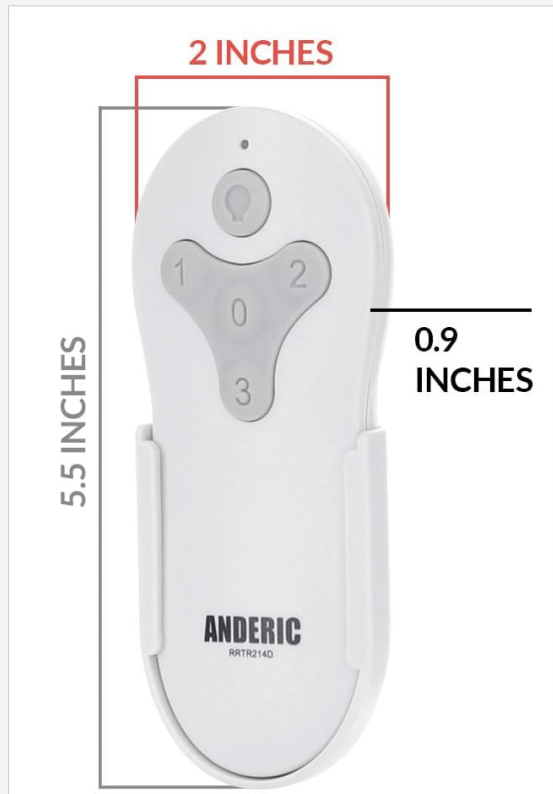Easy to Use



**Designed to fit
naturally in
your hand &
your space**

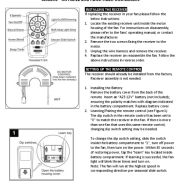 
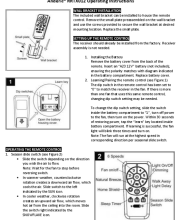 
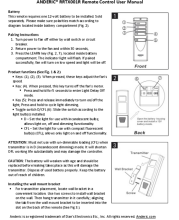 

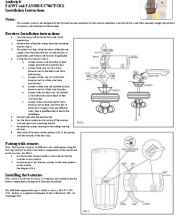 
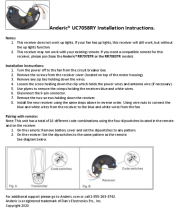 
Image: The Anderic RRTR214D remote control is displayed with its compact dimensions (5.5 inches length, 2 inches width, 0.9 inches thickness), highlighting its comfortable and easy-to-use design.

9. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Anderic RRTR214D remote control, please refer to the product packaging or visit the official Anderic website. You may also contact Anderic customer service directly for assistance with troubleshooting, replacement parts, or any other inquiries.

Manufacturer: Dan's Electronics Etc., Inc.

© 2025 Anderic. All rights reserved.

	<p>Anderic RRTX012 & FD40-H02R Ceiling Fan Remote Control Instructions</p> <p>Comprehensive guide for the Anderic RRTX012 and FD40-H02R ceiling fan remote controls, covering installation, setup, battery replacement, remote pairing, and detailed operation of fan speeds, lighting, timers, and special features like Home Shield and Walk Away Light Delay.</p>
	<p>Anderic RRTX012 Remote Control Operating Instructions</p> <p>Operating instructions for the Anderic RRTX012 ceiling fan remote control, covering wall bracket installation, remote setup, battery installation, pairing, and detailed operation of fan speeds, natural breeze, light functions, walk-away light delay, home shield, sleep timer, and power off memory.</p>
	<p>ANDERIC® RRTX001R Remote Control User Manual</p> <p>User manual for the ANDERIC® RRTX001R Remote Control, detailing battery installation, pairing instructions, product functions, and wall mount bracket installation.</p>
	<p>Anderic Universal Thermostatic Ceiling Fan Remote Control Kit Installation and Use Guide</p> <p>Comprehensive guide for installing and operating the Anderic HD3 Universal Thermostatic Ceiling Fan Remote Control Kit, including safety information, troubleshooting, and warranty details.</p>
	<p>Anderic FAN9T and FAN28R/UC7067FCRX Installation Instructions</p> <p>Detailed installation guide for the Anderic FAN9T and FAN28R/UC7067FCRX ceiling fan remote control system, including receiver wiring, remote pairing, and battery installation.</p>
	<p>Anderic UC7058RY Ceiling Fan Receiver Installation Guide</p> <p>Detailed installation and pairing instructions for the Anderic UC7058RY ceiling fan receiver. Includes notes on compatibility with Anderic RR7078TR and RR7083TR remotes. Provides step-by-step guidance for setup and remote synchronization.</p>