

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [VEVOR](#) /
- › [VEVOR Popcorn Maker with Cart \(8 Oz Kettle, 850W\) Instruction Manual](#)

## VEVOR B0DN5FG3X5

# VEVOR Popcorn Maker with Cart (8 Oz Kettle, 850W) Instruction Manual

Brand: VEVOR | Model: B0DN5FG3X5

## 1. INTRODUCTION AND OVERVIEW

This manual provides detailed instructions for the safe and efficient operation of your VEVOR Popcorn Maker with Cart. Designed for convenience and durability, this 850W machine features an 8 oz kettle, capable of producing up to 48 cups of popcorn per batch, perfect for various events. Its robust construction includes a cold rolled steel frame and tempered glass panels, ensuring longevity and easy viewing of the popping process.



Figure 1: Main view of the VEVOR Popcorn Maker with Cart.

## 2. SETUP AND ASSEMBLY

Your VEVOR Popcorn Maker with Cart is designed for straightforward assembly. Ensure all components are present and undamaged before beginning. The unit features a durable cold rolled steel frame and tempered glass panels. The cart includes 14-inch wheels for enhanced mobility and a storage cabinet for supplies.

### 2.1 Unpacking and Component Check

- Carefully remove all parts from the packaging.
- Verify all listed components are included: Popcorn Machine unit, Cart components (if applicable), 4 Scoops (for oil and kernels).
- Inspect for any shipping damage.

### 2.2 Assembly Steps

1. Assemble the cart frame and attach the 14-inch wheels.
2. Secure the storage cabinet to the cart frame.

3. Place the popcorn machine unit onto the assembled cart.
4. Ensure the kettle is properly seated and connected to the stirring mechanism and power supply within the machine.
5. Install the tempered glass doors with magnetic latches.

## ENHANCED MOBILITY & EXTRA STORAGE

Indoors or out, move your popcorn machine unimpeded

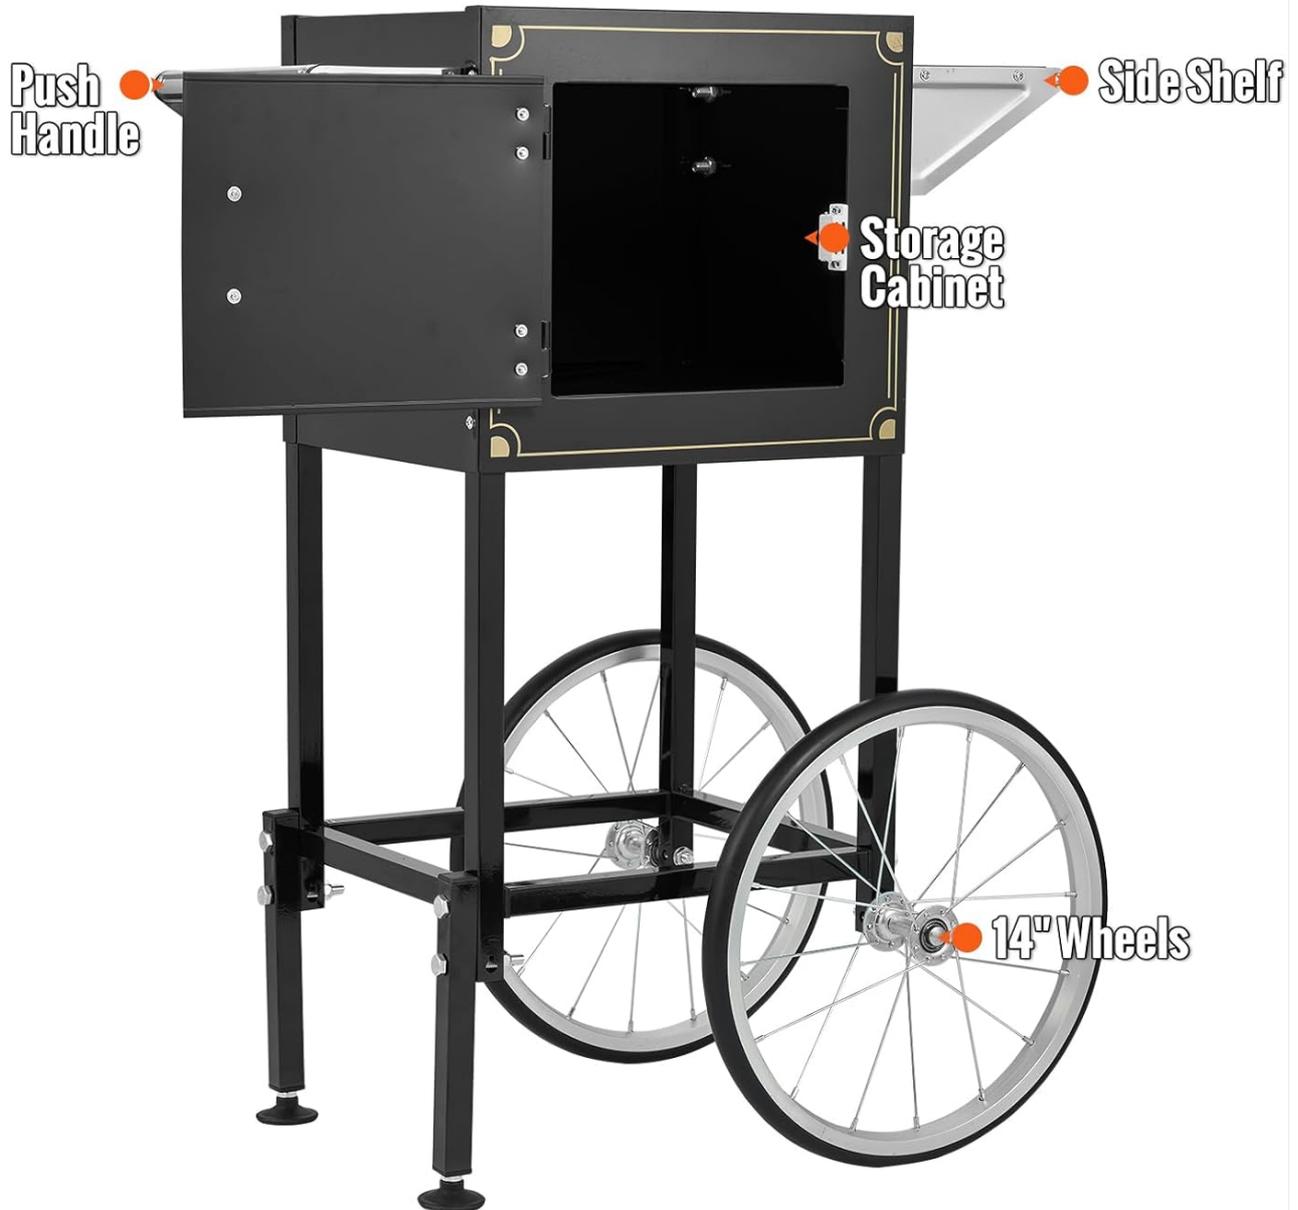


Figure 2: The popcorn machine cart features a push handle, side shelves, a storage cabinet, and 14-inch wheels for easy mobility.

### 3. OPERATING INSTRUCTIONS

The VEVOR Popcorn Maker features a simple 3-switch operation for ease of use. Always ensure the machine is on a stable, level surface before operation.

#### 3.1 Control Switches

- **Warmer Switch:** Activates the 60W warming deck and light to keep popcorn fresh and illuminated.
- **Stirrer Switch:** Engages the built-in stirring system within the kettle to ensure even popping.
- **Pot Heater Switch:** Powers the 850W kettle for rapid heating and popcorn production.

# CONVENIENT 3-SWITCH OPERATION

Friendly to both experienced users and novices



**Stirrer**  
Rotate kettle



**Pot Heater**  
Start working



**Warmer**  
60W Heating Tube  
& 60W Warmer Bulb



Figure 3: The control panel with switches for Warmer, Stirrer, and Pot Heater.

## 3.2 Popcorn Production Steps

1. Plug in the popcorn maker.
2. Turn on the **Pot Heater** switch to preheat the 8 oz stainless steel kettle for 2-3 minutes.
3. Add your preferred popcorn oil (e.g., coconut oil) to the preheated kettle.
4. Add popcorn kernels (up to 8 oz for a full batch) to the kettle.
5. Turn on the **Stirrer** switch to ensure even coating and popping.
6. Close the tempered glass doors.
7. Once popping subsides (usually when there are 2-3 seconds between pops), turn off the **Pot Heater** and **Stirrer** switches.
8. Carefully tilt the kettle using the red handle to release the popped corn onto the warming deck.
9. Serve fresh popcorn using the provided scoops.

# 384 OZ YIELD IN YOUR SATISFACTION

A workhorse tailored for your busy concession stand



Figure 4: The 8 oz kettle can produce up to 48 cups of popcorn per batch.

## 4. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your popcorn maker. Always unplug the unit and allow it to cool completely before cleaning.

### 4.1 Kettle Cleaning

1. Remove the kettle from its hanging position by detaching it from the top support.
2. Unscrew the wing nuts to detach the kettle lid and stirring mechanism.
3. Wipe the interior of the kettle with a damp cloth or sponge. For stubborn residue, add a small amount of water to the kettle, turn on the Pot Heater for a few minutes (without kernels), and then carefully wipe clean.
4. Ensure all parts are thoroughly dry before reassembly.

# DETACHABLE STAINLESS STEEL KETTLE

Thoroughly clean kettle & lid from inside out



Figure 5: The detachable stainless steel kettle allows for thorough cleaning.

## 4.2 Cabinet and Warming Deck Cleaning

- Wipe down the tempered glass panels and stainless steel surfaces with a soft, damp cloth.
- Remove the removable crumb tray from the bottom of the machine and discard any unpopped kernels or debris. Wash the tray with warm, soapy water and dry thoroughly.
- Clean the warming deck, ensuring no residue remains.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle not heating	Power cord not plugged in; Pot Heater switch off; Kettle not properly connected.	Ensure unit is plugged in; Turn on Pot Heater switch; Check kettle connection.

Problem	Possible Cause	Solution
Popcorn not popping or few kernels pop	Insufficient preheating time; Old or poor quality kernels; Incorrect oil amount.	Preheat kettle for 2-3 minutes; Use fresh, high-quality kernels; Adjust oil quantity as per recipe.
Stirring mechanism not working	Stirrer switch off; Mechanism jammed; Kettle lid not adjusted correctly.	Turn on Stirrer switch; Check for obstructions; Loosen kettle lid wing nuts slightly to prevent jamming.
Excessive unpopped kernels	Kettle too full; Insufficient heat; Kernels not fresh.	Do not overfill kettle; Ensure proper preheating; Use fresh kernels.

## 6. SPECIFICATIONS

<b>Brand</b>	VEVOR
<b>Model</b>	B0DN5FG3X5
<b>Power</b>	850W
<b>Kettle Capacity</b>	8 Oz (makes 48 cups per batch)
<b>Material</b>	Alloy Steel, Tempered Glass
<b>Product Dimensions</b>	15.1"L x 13.4"W x 23.8"H
<b>Item Weight</b>	41.3 Pounds
<b>Special Feature</b>	Built-In Stirring System, Warming Deck
<b>Included Components</b>	1 x Popcorn Machine, 4 x Scoops

## 7. WARRANTY AND SUPPORT

This VEVOR Popcorn Maker is covered by a 30-day return policy for refund or replacement, as per Amazon's policy. For any product-related inquiries, technical support, or warranty claims beyond the initial return period, please refer to the official VEVOR support channels or contact the manufacturer directly. Always retain your proof of purchase for warranty purposes.